


Haier SERVICE MANUAL

Model 2U50MS3FRA

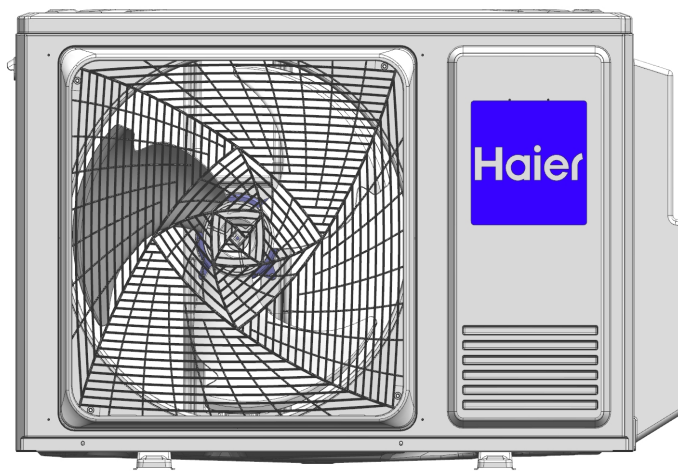

WARNING


This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or Repair the product or products dealt with in this service information by anyone else could result in serious injury or death

Contents

1. Introduction	1
2. Specifications.....	7
3. Sensors list	8
4. Piping diagrams	9
5. Operation range	10
6. Printed Circuit Board Connector Wiring Diagram	11
7. Functions and Control.....	16
8. Dimensional drawings.....	31
9. Center of gravity	31
10. Service Diagnosis.....	32
11. Performance and curves diagrams.....	55
12. Sound level	63
13. Removal Procedure.....	64

1. Introduction

1.1 Model name explanation

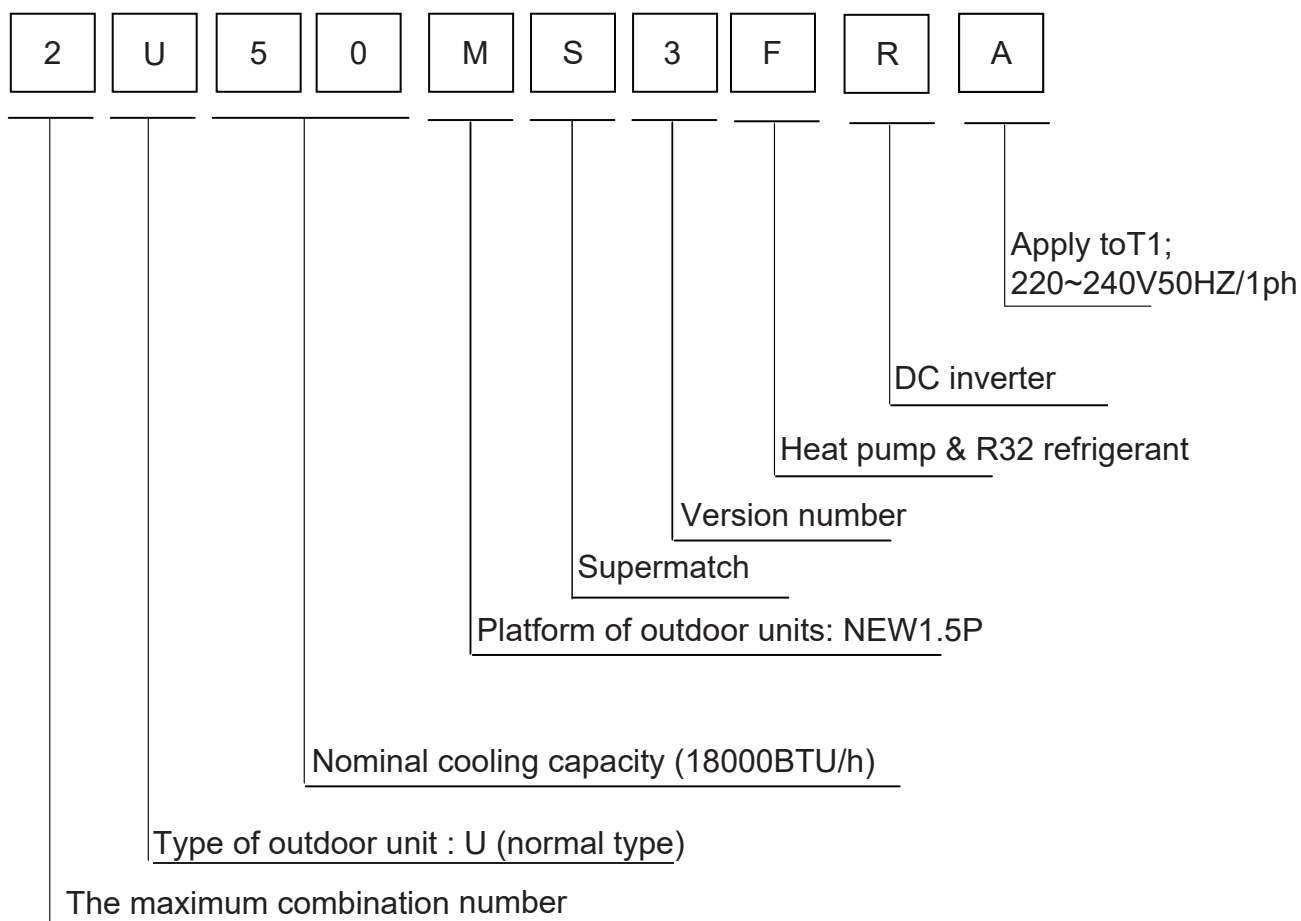

1.2 Safety Cautions

Be sure to read the following safety cautions before conducting repair work.

The caution items are classified into “Warning” and “Caution”. The “Warning” items are especially important since they can lead to death or serious injury if they are not followed closely. The “Caution” items can also lead

to serious accidents under some conditions if they are not followed. Therefore, be sure to observe all the safety

caution items described below.

About the pictograms

△ This symbol indicates an item for which caution must be exercised.

The pictogram shows the item to which attention must be paid.

○ This symbol indicates a prohibited action.

The prohibited item or action is shown inside or near the symbol.

● This symbol indicates an action that must be taken, or an instruction.

The instruction is shown inside or near the symbol.

After the repair work is complete, be sure to conduct a test operation to ensure that the equipment operates Normally, and explain the cautions for operating the product to the customer.

1.2.1 Caution in Repair

Warning	
Be sure to disconnect the power cable plug from the plug socket before disassembling the equipment for a repair. Working on the equipment that is connected to a power supply can cause an electrical shock. If it is necessary to supply power to the equipment to conduct the repair or inspecting the circuits, do not touch any electrically charged sections of the equipment.	
If the refrigerant gas discharges during the repair work, do not touch the discharging refrigerant gas. The refrigerant gas can cause frostbite.	
When disconnecting the suction or discharge pipe of the compressor at the welded section, release the refrigerant gas completely at a well-ventilated place first. If there is a gas remaining inside the compressor, the refrigerant gas or cooling machine oil discharges when the pipe is disconnected, and it can cause injury.	
If the refrigerant gas leaks during the repair work, ventilate the area. The refrigerant gas can generate toxic gases when it contacts flames.	
The step-up capacitor supplies high-voltage electricity to the electrical components of the outdoor unit. Be sure to discharge the capacitor completely before conducting repair work. A charged capacitor can cause an electrical shock.	
Do not start or stop the air conditioner operation by plugging or unplugging the power cable plug. Plugging or unplugging the power cable plug to operate the equipment can cause an electrical shock or fire.	

Warning	
Do not repair the electrical components with wet hands . Working on the equipment with wet hands can cause an electrical shock	
Do not clean the air conditioner by splashing water. Washing the unit with water can cause an electrical shock.	
Be sure to provide the grounding when repairing the equipment in a humid or wet place, to avoid electrical shock.	
Be sure to turn off the power switch and unplug the power cable when cleaning the equipment. The internal fan rotates at a high speed, and cause injury.	
Do not tilt the unit when removing it. The water inside the unit can spill and wet the furniture and floor.	
Be sure to check that the cooling cycle section has cooled down sufficiently before conducting repair work. Working on the unit when the cooling cycle section is hot can cause burns.	
Use the welder in a well-ventilated place. Using the welder in an enclosed room can cause oxygen deficiency.	

1.2.2 Cautions Regarding Products after Repair

Warning	
Be sure to use parts listed in the service parts list of the applicable model and appropriate tools to conduct repair work. Never attempt to modify the equipment. The use of inappropriate parts or tools can cause an electrical shock, excessive heat generation or fire.	
When relocating the equipment, make sure that the new installation site has sufficient strength to withstand the weight of the equipment. If the installation site does not have sufficient strength and if the installation work is not conducted securely, the equipment can fall and cause injury.	
Be sure to install the product correctly by using the provided standard installation frame. Incorrect use of the installation frame and improper installation can cause the equipment to fall, resulting in injury.	For integral units only
Be sure to install the product securely in the installation frame mounted on a window frame. If the unit is not securely mounted, it can fall and cause injury.	For integral units only

Warning	
Be sure to use an exclusive power circuit for the equipment, and follow the technical standards related to the electrical equipment, the internal wiring regulations and the instruction manual for installation when conducting electrical work. Insufficient power circuit capacity and improper electrical work can cause an electrical shock or fire.	
Be sure to use the specified cable to connect between the indoor and outdoor units. Make the connections securely and route the cable properly so that there is no force pulling the cable at the connection terminals. Improper connections can cause excessive heat generation or fire.	
When connecting the cable between the indoor and outdoor units, make sure that the terminal cover does not lift off or dismount because of the cable. If the cover is not mounted properly, the terminal connection section can cause an electrical shock, excessive heat generation or fire.	
Do not damage or modify the power cable. Damaged or modified power cable can cause an electrical shock or fire. Placing heavy items on the power cable, and heating or pulling the power cable can damage the cable.	
Do not mix air or gas other than the specified refrigerant (R-410A / R22) in the refrigerant system. If air enters the cooling system, an excessively high pressure results, causing equipment damage and injury.	
If the refrigerant gas leaks, be sure to locate the leak and repair it before charging the refrigerant. After charging refrigerant, make sure that there is no refrigerant leak. If the leak cannot be located and the repair work must be stopped, be sure to perform pump-down and close the service valve, to prevent the refrigerant gas from leaking into the room. The refrigerant gas itself is harmless, but it can generate toxic gases when it contacts flames, such as fan and other heaters, stoves and ranges.	
When replacing the coin battery in the remote controller, be sure to dispose of the old battery to prevent children from swallowing it. If a child swallows the coin battery, see a doctor immediately.	

Caution	
Installation of a leakage breaker is necessary in some cases depending on the conditions of the installation site, to prevent electrical shocks.	

Do not install the equipment in a place where there is a possibility of combustible gas leaks. If a combustible gas leaks and remains around the unit, it can cause a fire.	
Be sure to install the packing and seal on the installation frame properly. If the packing and seal are not installed properly, water can enter the room and wet the furniture and floor.	

1.2.3 Inspection after Repair

Warning	
Check to make sure that the power cable plug is not dirty or loose, then insert the plug into a power outlet all the way. If the plug has dust or loose connection, it can cause an electrical shock or fire.	
If the power cable and lead wires have scratches or deteriorated, be sure to replace them. Damaged cable and wires can cause an electrical shock, excessive heat generation or fire.	

Warning	
Do not use a joined power cable or extension cable, or share the same power outlet with other electrical appliances since it can cause an electrical shock, excessive heat generation or fire.	

Caution	
Check to see if the parts and wires are mounted and connected properly, and if the connections at the soldered or crimped terminals are secure. Improper installation and connections can cause excessive heat generation, fire or an electrical shock.	
If the installation platform or frame has corroded, replace it. Corroded installation platform or frame can cause the unit to fall, resulting in injury.	

Check the grounding, and repair it if the equipment is not properly grounded. Improper grounding can cause an electrical shock.	
Be sure to measure the insulation resistance after the repair, and make sure that the resistance is 1 M ohm or higher. Faulty insulation can cause an electrical shock.	
Be sure to check the drainage of the indoor unit after the repair. Faulty drainage can cause the water to enter the room and wet the furniture and floor.	

1.2.4 Using Icons

Icons are used to attract the attention of the reader to specific information. The meaning of each icon is described in the table below:

1.2.5 Using Icons List

Icon	Type of Information	Description
 Note	Note	A “note” provides information that is not indispensable, but may nevertheless be valuable to the reader, such as tips and tricks.
 Caution	Caution	A “caution” is used when there is danger that the reader, through incorrect manipulation, may damage equipment, lose data, get an unexpected result or has to restart (part of) a procedure.
 Warning	Warning	A “warning” is used when there is danger of personal injury.
 Reference	Reference	A “reference” guides the reader to other places in this binder or in this manual, where he/she will find additional information on a specific topic.

1.2.6 Embedded wire checking before installation

Check the embedded wire diameter suitable to request:

(Power supply from indoor: 2.5kw $\geq 1.0\text{mm}^2$ 3.5kw, 5kw $\geq 1.5\text{mm}^2$ 7kw $\geq 2.5\text{mm}^2$; Power supply from outdoor $\geq 1.0\text{mm}^2$)

Check the embedded wire are four roots, L/N/COM/GND; GND is needed, if not, thunder or high voltage wave from power grid will impact to the performance

Using a multi-meter to test short circuit of the four roots wires, make sure no short circuit happen.



2. Specifications

NOMINAL DISTRIBUTION SYSTEM VOLTAGE		
Phase	/	1
Frequency	Hz	50
Voltage	V	220-240

NOMINAL CAPACITY and NOMINAL INPUT			
		12+12	
		cooling	heating
Capacity rated	KW	5.0	5.6
	Btu/h	17060(6140-18765)	19105(5115-21495)
Power Consumption(Rated)	KW	1.25	1.4
SEER/SCOP	W/W	8.5	4.6
Annual energy consumption	KWh	206	1278
Moisture Removal	m ³ /h	1.8×10 ⁻³	

TECHNICAL SPECIFICATIONS-UNIT			
Dimensions	W*D*H	mm	800×280×553
Packaged Dimensions	W*D*H	mm	927×398×607
Weight	/	KG	35
Gross weight	/	KG	38
Sound level	Sound pressure	dB	53
	Sound power	dB	63

ELECTRICAL SPECIFICATIONS			
		cooling	heating
Nominal running current	A	5.6	6.3
Maximum running current	A	9.3	9.8
Starting current	A	0.7	1.7

TECHNICAL SPECIFICATIONS-PARTS			
		cooling	heating
Compressor	Type	Twin Rotary Compressor	
	Model	GTD130UKSF8LV8B	
	Motor output	W	1258
	Oil type	HAF68 D1C or equivalent	
	Oil charge volume	L	0.5±0.02
Fan	Type	Axial fan	
	Motor output	W	25
	Air flow rate(high)	m ³ /h	2200
	Speed(high/low)	rpm	880/300
Heat exchanger	Type	ML fin- φ 7HI-HX tube	
	Row*stage*fitch	2*24*1.32	

TECHNICAL SPECIFICATIONS-OTHERS			
Refrigerant circuit	Refrigerant type		R32
	Refrigerant charge		KG 1.05
	Maximum allowable distance between indoor and outdoor		m 50(double) 30(single)
	Maximum allowable level difference		m 15
	Refrigerant control		EEV
Piping connections (external diameter)	liquid	mm	Φ6.35
	gas	mm	Φ9.52
	drain	mm	Φ16
Heat insulation type		Both liquid and Gas pipes	
Max. piping Length		m	50(double) 30(single)
Max. Level Difference		m	15
Chargeless		m	20
Amount of Additional Charge of Refrigerant		g/m	15

Note: the data are based on the conditions shown in the table below

cooling	heating	Piping length
Indoor: 27°CDB/19°CWB Outdoor: 35°CDB/24°CWB	Indoor:20°CDB Outdoor: 7°CDB/6°CWB	5m

Conversation formulae

$$\text{Kcal/h} = \text{KW} \times 860$$

$$\text{Btu/h} = \text{KW} \times 3412$$


$$\text{cfm} = \text{m}^3/\text{min} \times 35.3$$

3. Sensors list


type	Description	Qty
Ambient sensor	Its used for detecting temperature of outdoor side	1
Defrosting sensor	Its used for controlling outdoor defrosting at heating mode	
Descharging sensor	Its used for compressor in case of over-heat	
Suction sensor	Its used for detecting suction pipe temperature of compressor to adjust gas flowing	1
Liquid-gas pipe sensor	Its used for adjusting the valve opening of the electric expansion valve.	2

4. Piping diagrams

Cooling mode


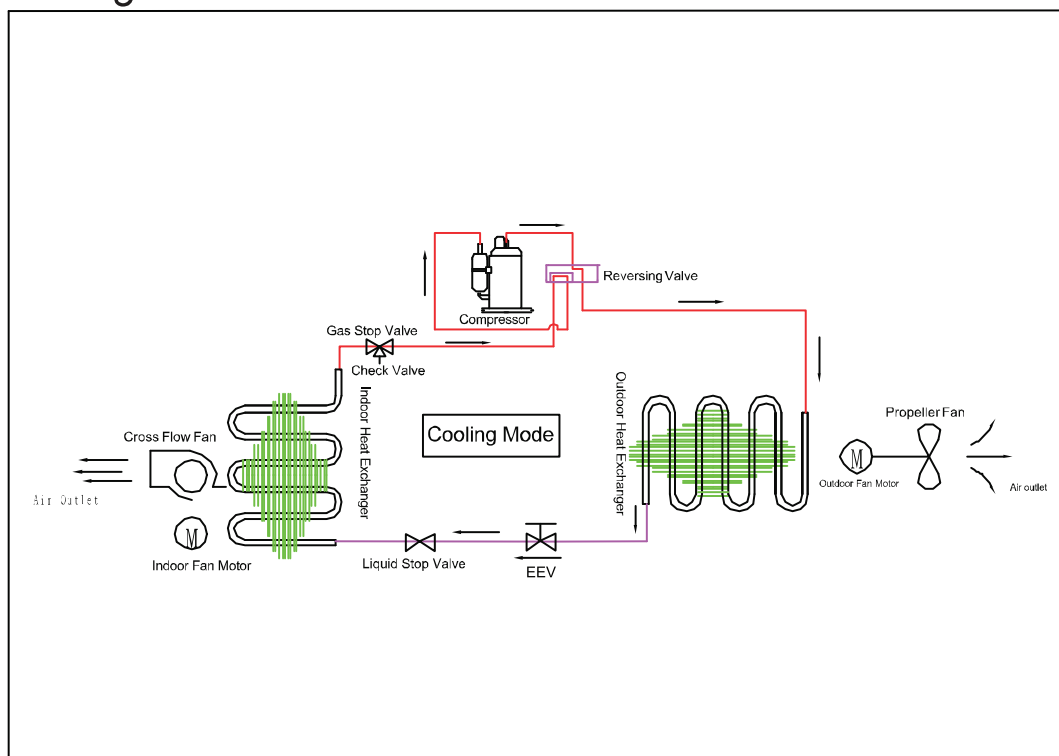


Heating mode

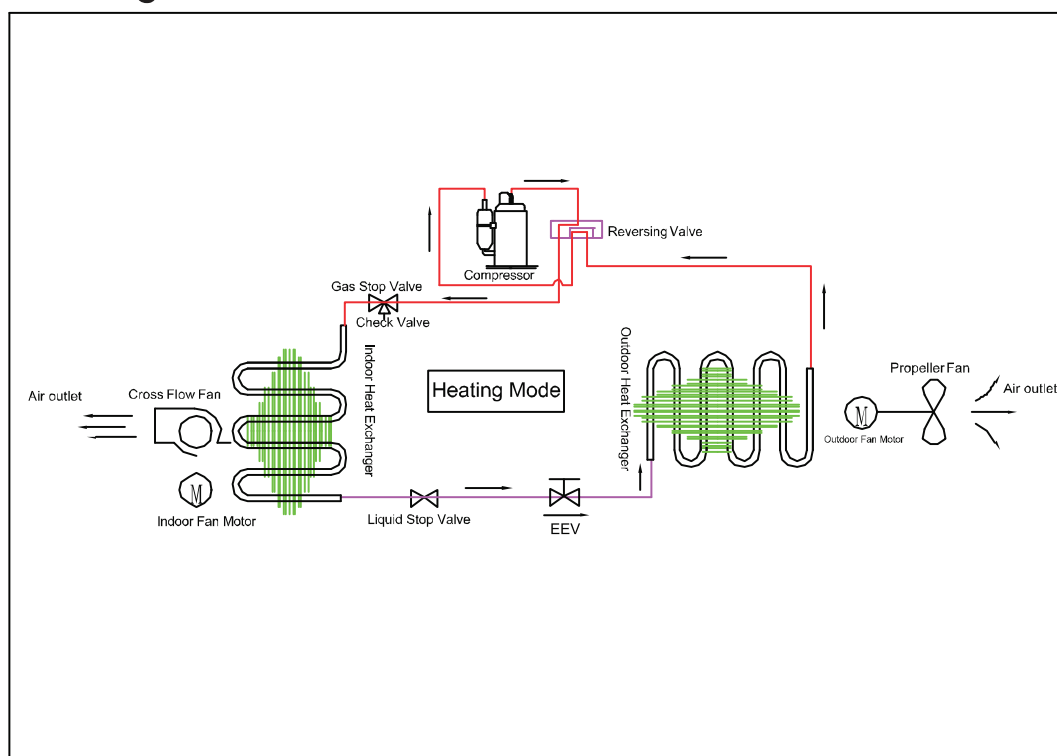

5. Operation range

The name of parts

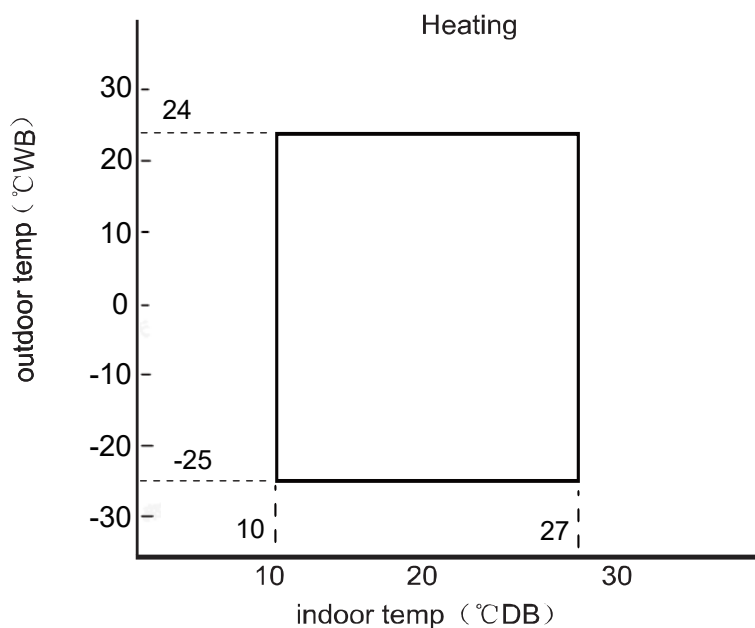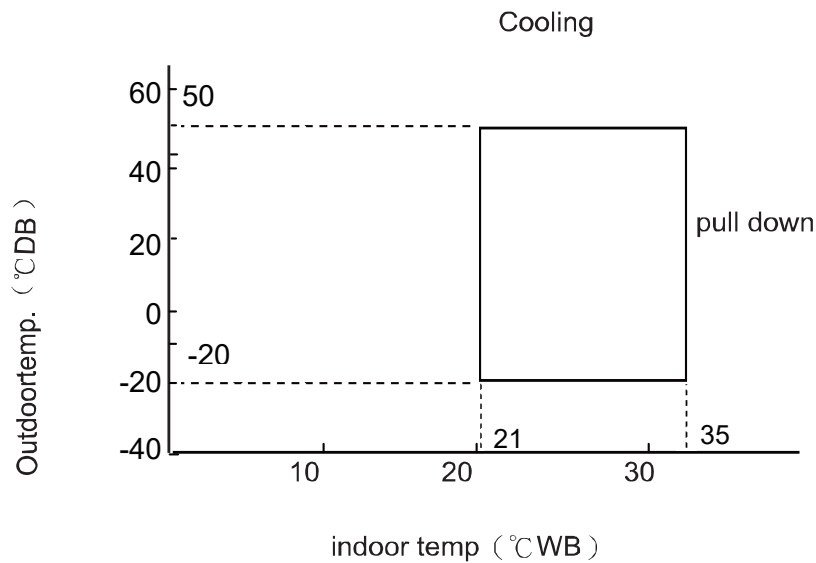

Notes:

The graphs are based on the following condition:

Equivalent piping length	5m
Level difference	0m
Air flow rate	high

6. Printed Circuit Board Connector Wiring Diagram

Connectors

PCB (1) Control PCB

series	PCB connector	Connect with load
1	CN1	Connector for power N and L
2	CN2	
3	CN3	Connector for ground
4	CN9	Connector for CN2,CN1 on the module board
5	CN8	
6	CN10	Connector for four way valve coil
7	CN17	Connector for electric expansion valves
8	CN16	
9	CN18	Connector for thermistors
10	CN20	
11	CN31	
12	CN25	
13	CN21	Connector for fan motor
14	CN22	Connector for DC POWER 15V and 5V to the module board
15	CN23	Connector for communicate between the control board and the module board
16	CN24	Connector to N and P of the module board
17	CN26	
18	CN5	Connector for communicate between indoor and outdoor unit

PCB (2) Module PCB

series	PCB connector	Connect with load
1	P (CN8)	Connector for CN26,CN24 on the control board
2	N (CN9)	
3	LO (CN4)	Connector for reactor
4	LI (CN3)	
5	AC_L(CN1)	Connector for CN8,CN9 on the control board
6	AC_N(CN2)	
7	CN5(U)	Connector for the compressor
8	CN6(V)	
9	CN7(W)	
10	CN10	Connector for the DC power 5V and 15V form the control PCB
11	CN11	Connector for communicate between the control board and the module board

Note: Other Designations



PCB(1) (Control PCB)

1) FUSE 1, Fuse (25A,250VAC)



2)LED 1 keep light representative normal ,if keep flash interval representative trouble Alarm

3)RV1,RV2,RV3 Varistor

PCB

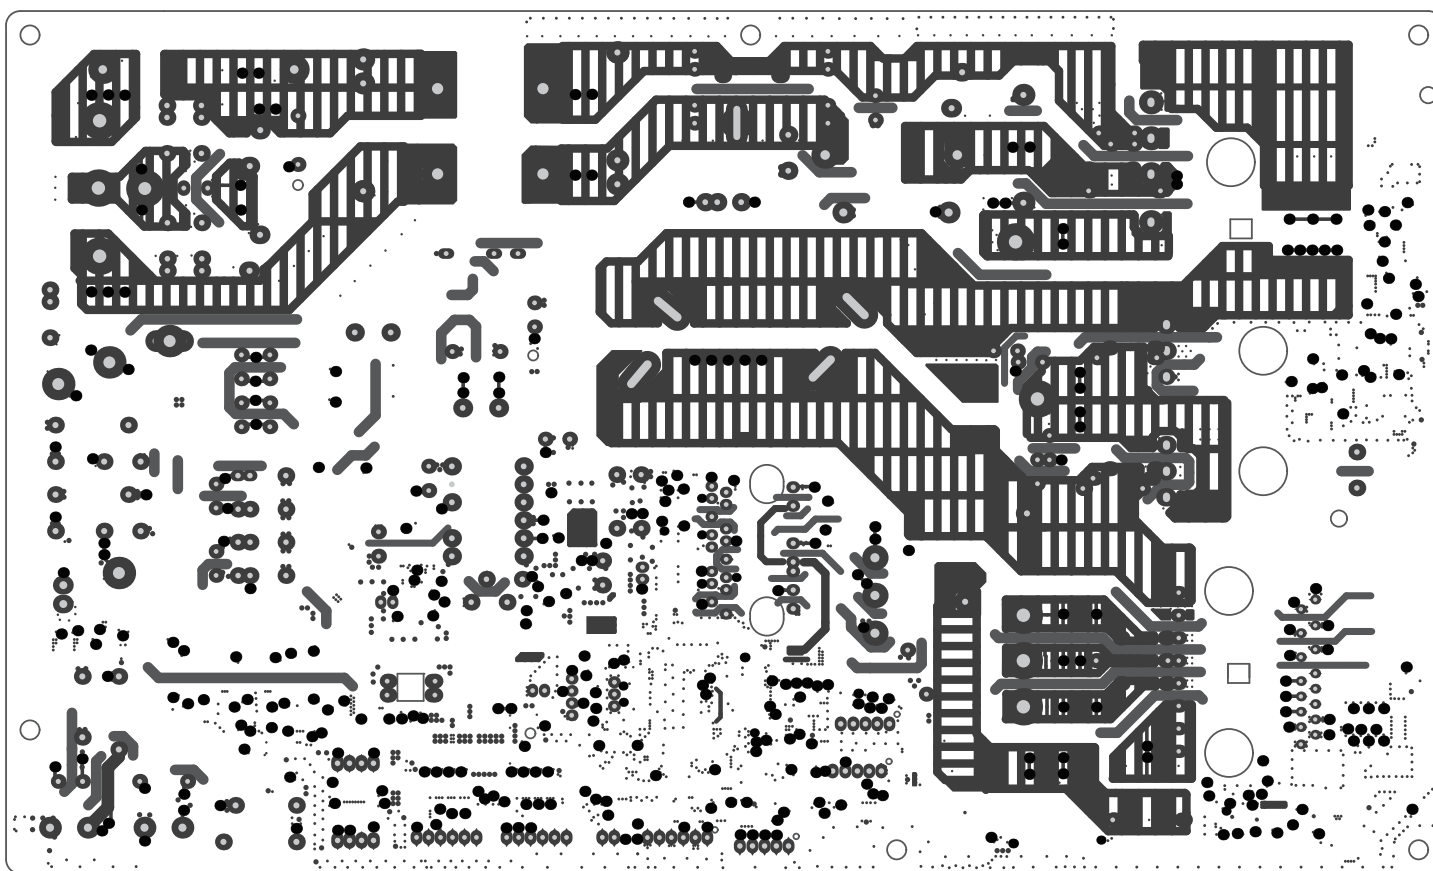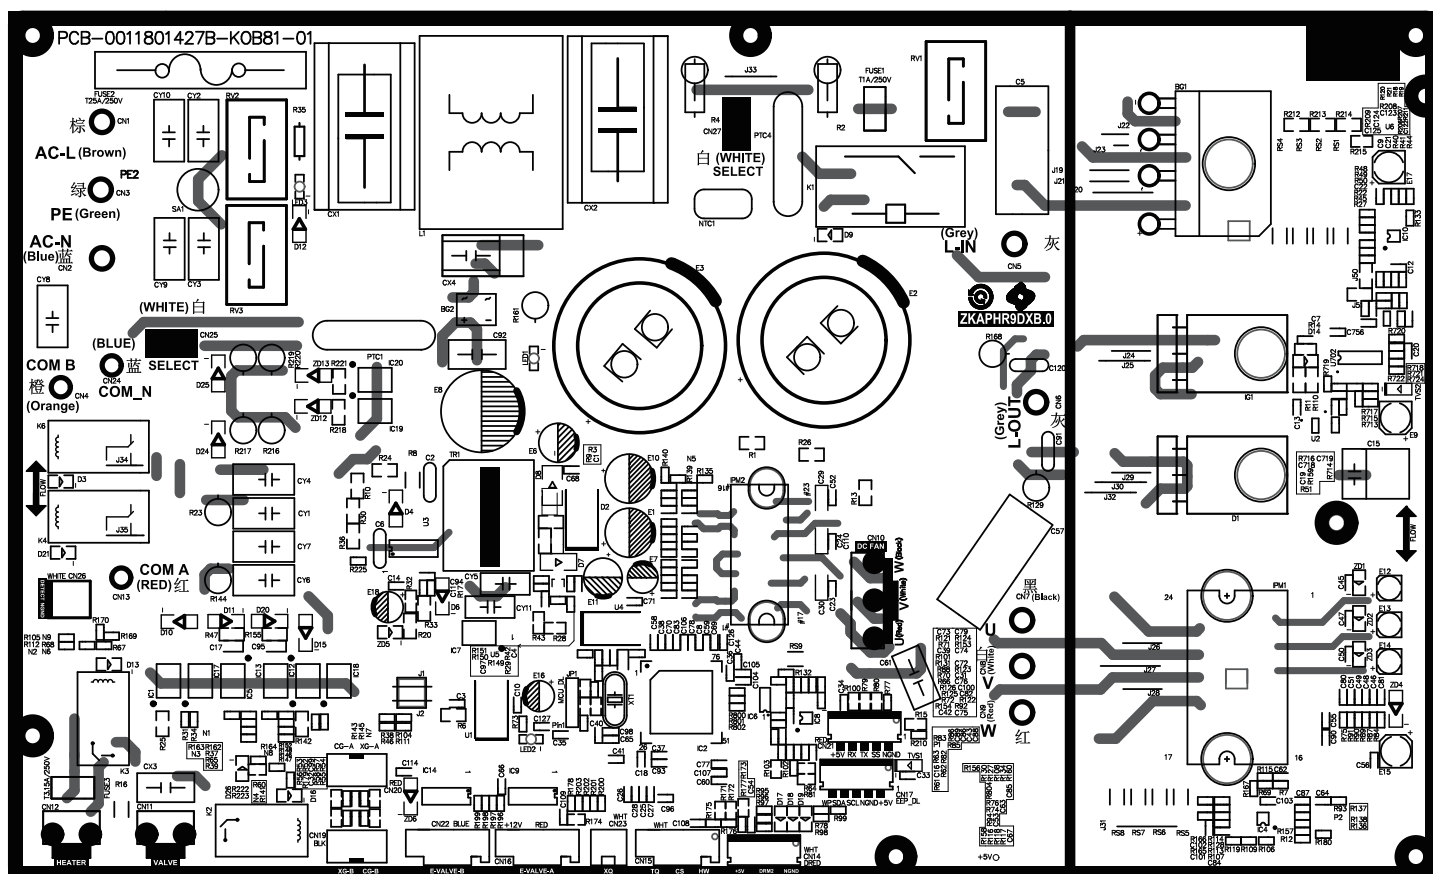


PCB

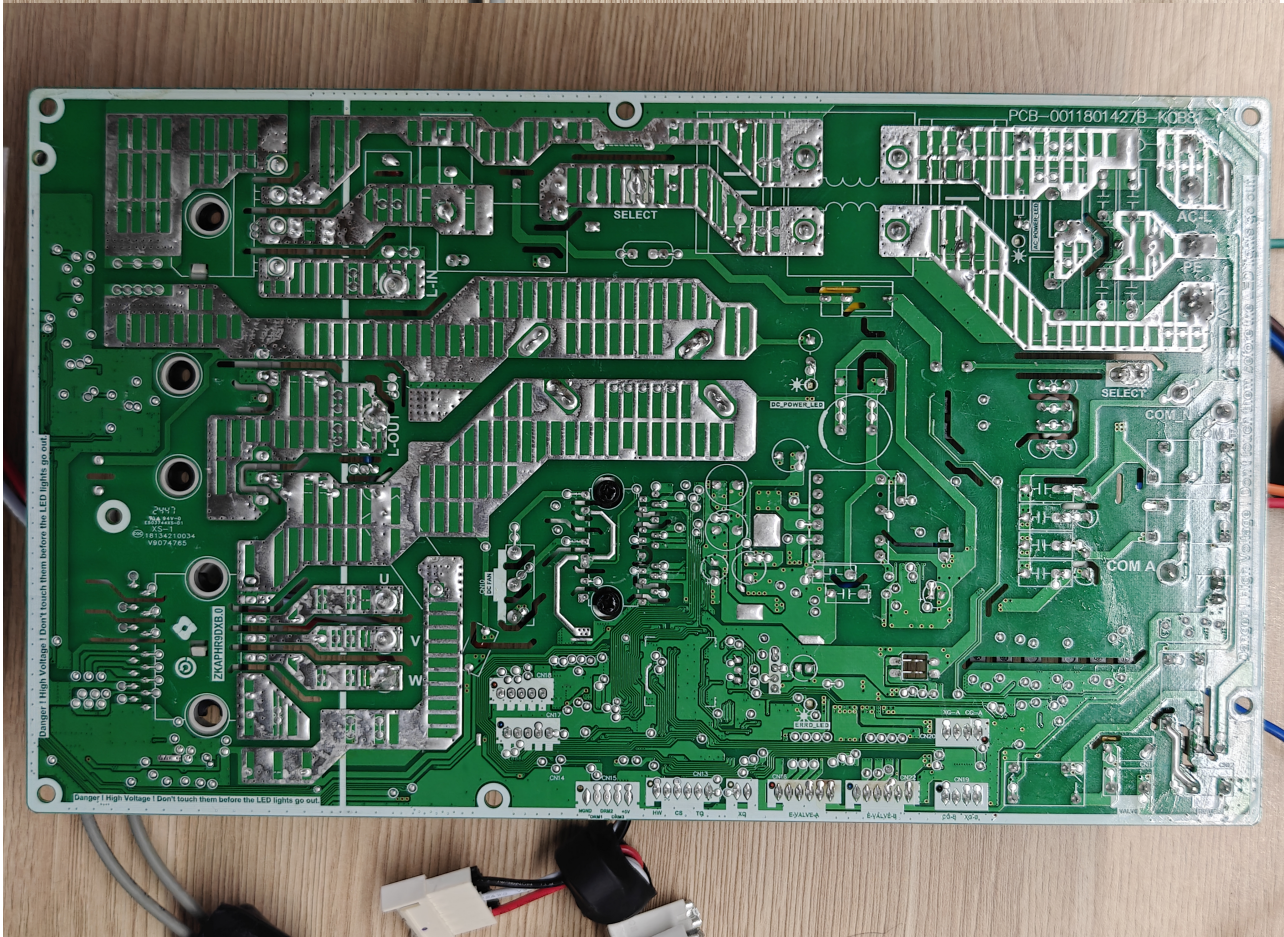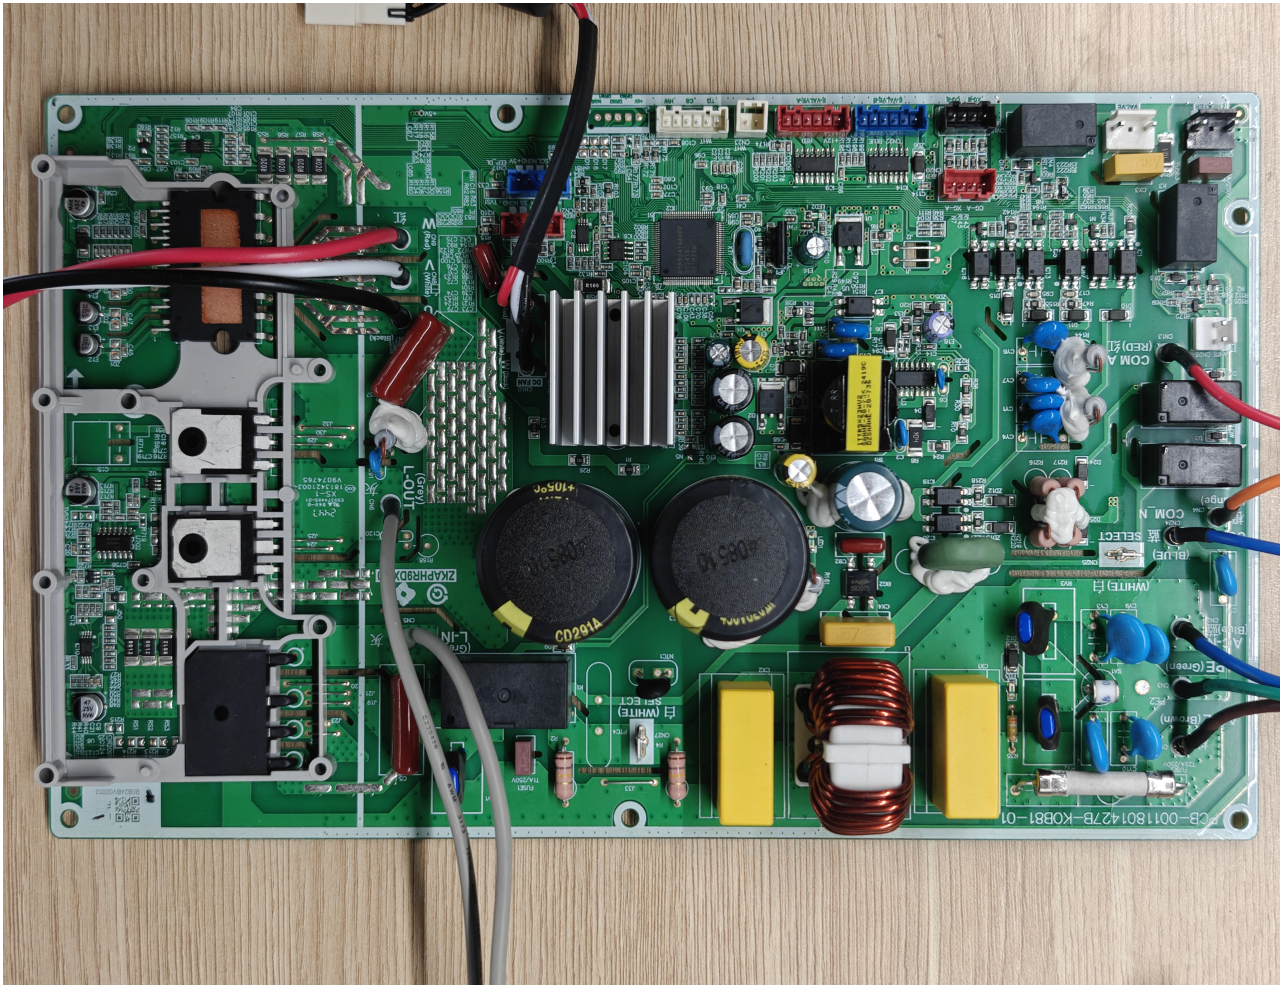

OUTDOOR WIRING DIAGRAM

00105111217

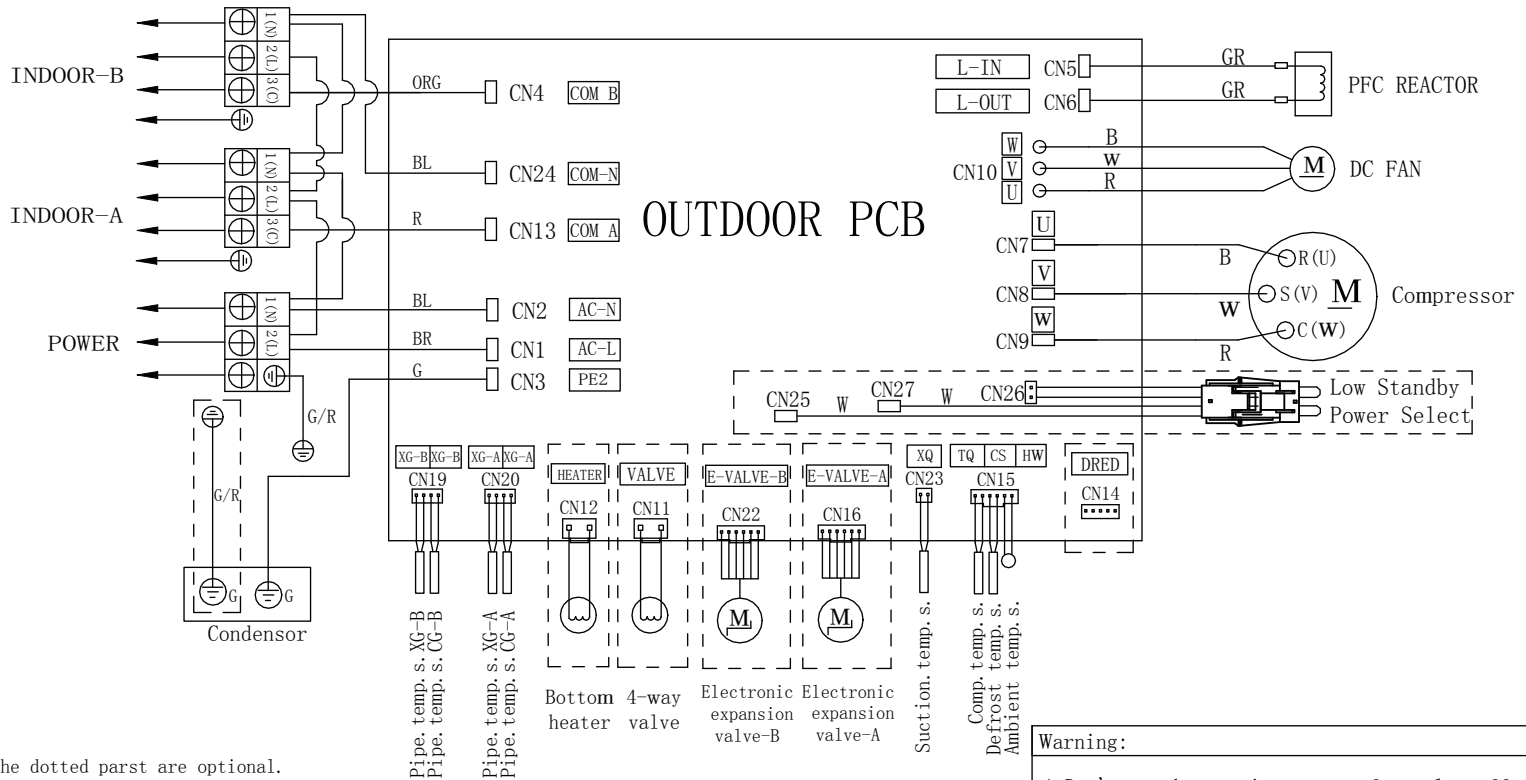

7.Functions and Control

7.1 The control system of outdoor unit

7.1.1: The operation frequency of outdoor unit and its control

7.1.1.1: The operation frequency control of compressor

The operation frequency scope of compressor:

Mode	Minimun operation frequency	Maximun operation frequency
Heating	21Hz	108Hz
Refrigeration	19Hz	85Hz

7.1.1.2: The starting of compressor

When the compressor is started for the first time, it must be kept under the conditions of 30Hz,40Hz,58Hz for one minute (the overheating protection of the outdoor unit air-blowing temperature, immediately decrease the frequency when the compressor is overflowing and releasing the pressure), then it can be operated towards the target frequency. When the machine runs normally, there's no such process. After starting the compressor for operation, the compressor should run according to the calculated frequency, and every determined frequency for protection should be prior to the calculated frequency.

7.1.1.3: The speeds of increasing or decreasing the frequency of the compressor

The speed of increasing or decreasing the frequency rapidly 1 -----1HZ/second

The speed of increasing or decreasing the frequency slowly 2 -----1HZ/10seconds

7.1.1.4: The calculation of the compressor's frequency

1)、The minimum/maximum frequency limitation

A. While refrigerating: $F - MAX - r$ is the maximum operation frequency of the compressor; $F - MIN - r$ is the minimum operation frequency of the compressor.

B. While heating: $F - MAX - d$ is the maximum operation frequency of the compressor; $F - MIN - d$ is the minimum operation frequency of the compressor.

1)、The frequency limitation which is affected by the environment temperature.

Heating mode:

Serial No.	Temperature scope	Frequency limitation
1	Wh_c<-12	Max_hz1 99 HZ
2	Wh_c<-8	Max_hz2 99 HZ
3	Wh_c<-2	Max_hz3 99 HZ
4	Wh_c<5	Max_hz4 96 HZ
5	Wh_c<10	Max_hz5 90 HZ
6	Wh_c<16	Max_hz6 70 HZ
7	Wh_c< 20	Max_hz7 59 HZ
8	Wh_c> 20	Max_hz8 55 HZ

Refrigeration/dehumidification mode::

Serial No.	Temperature scope	Frequency limitation
1	Wh_c<16	Max_hz1 35 HZ
2	Wh_c<23	Max_hz2 47 HZ
3	Wh_c<29	Max_hz3 59 HZ
4	Wh_c<32	Max_hz4 74 HZ
5	Wh_c<40	Max_hz5 76 HZ
6	Wh_c<48	Max_hz4 69 HZ
7	Wh_c>48	Max_hz5 55 HZ

Remarks: the above are not only the maximum frequency limitations of the complete appliance which are affected by the environment, but also the maximum ability limitation of the system. When the starting ability is not the maximum, its maximum frequency limitation is calculated by the following equations:

$$F(\text{reference frequency}) = \sum F_i(\text{reference frequency})$$

Note - valid internal machine (starting and running in accordance with the state) to participate in the calculation

$$F_i(\text{reference frequency}) = F_{ei}(\text{Computed base frequency}) * K_w$$

(Outer ring temperature coefficient (External ring temperature on frequency limitation section)) * P_i (Temperature difference between the weight) * K_i (Wind speed weight)

(Note: the reference frequency F_i is rounded after calculation and no rounding is performed;)

i = machine A, machine B...

Refrigeration/dehumidification:

P_i	< 0	< 1	< 2	< 3	< 4	≥ 4
The percentage of the rated frequency P	50%	60%	70%	85 %	100%	100%

Heating mode:

P_i	< 0	< 1	< 2	< 3	< 4	≥ 4
The percentage of the rated frequency P	80%	85%	90%	98 %	100%	100%

The indoor set airflow speed	Breeze	Low	Medium	High	Strong	Quiet	Healthy airflow
K_i	70%	80%	90%	100%	100%	70%	70%

When the outdoor unit is shut down, the valve is opened completely for 2 minutes, and then begin initialization.

The scope of refrigerating valve 120-----480 steps

The scope of heating valve 100-----480 steps

The valves are adjusted according to the degree of superheat $-\Delta SHa$, ΔSHa .

7.1.2: Four way control

For the details of defrosting four-way valve control, see the defrosting process.

Four way working in other ways:


Under the mode of heating, open the four-way valve, when the compressor is not started or changed to non-heating mode, make sure the compressor is stopped for 2 minutes, and then close the four-way valve.

7.1.3 Protection function

7.1.3.1: TTC high temperature-preventing protection

Once the machine is started, it can run TTC overheating protection of air-blowing, but air-blowing sensor malfunction must alarm after 10 minutes during which the compressor is started (during the course of self-detection, there's no such limitation)

TTC ($^{\circ}\text{C}$)

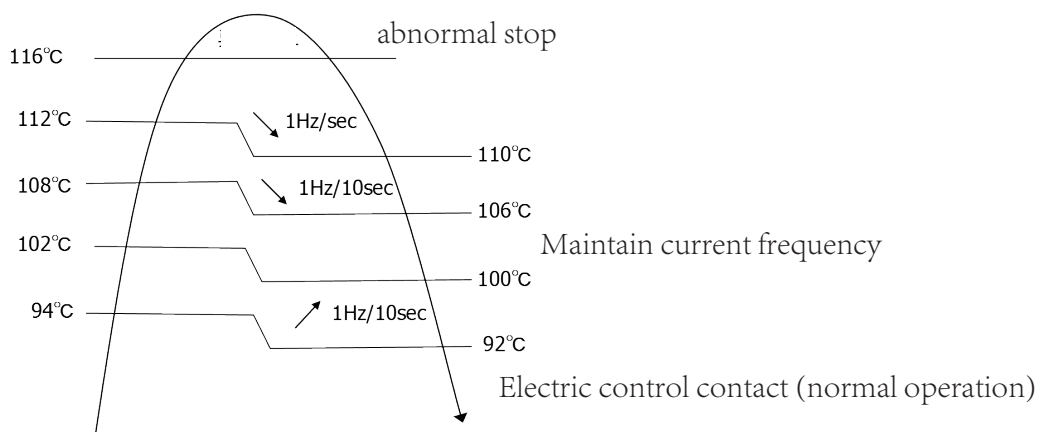

$TTC \geq 107^{\circ}\text{C}$ lasts for 20 seconds. Overheating protection of air-blowing, compressor stops for more than 3 minutes


$TTC < 91^{\circ}\text{C}$ Compressor start to restore normal control

If there are three failures in three minutes, alarm malfunction to the indoor, others don't last.

7.1.3.2: TC high temperature-preventing control of the indoor heating unit:

Tpg_indoor is the highest value of the effective indoor unit (start it and it is in accord with the running state).

The indoor heat exchanger sensor tests the temperature of the indoor heat exchanger. If the temperature is higher than 54°C , decrease the rotate speed of the compressor and do the high temperature-preventing protection of the indoor heat exchanger; if the temperature of the indoor heat exchanger is lower than 39°C , recover to the normal control.

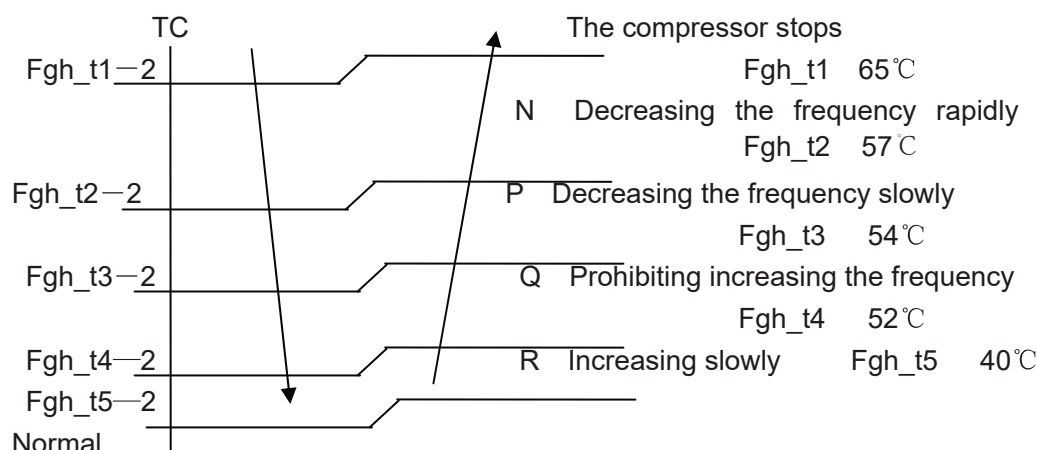

N: Decreasing at the speed of 1HZ/1 second
P: Decreasing at the speed of 1Hz/10 seconds
Q: Continue to keep the last-time instruction cycle
R: Increasing at the speed of 1Hz/10seconds

Remarks: the outdoor unit

7.1.3.3 The control of preventing the overcurrent of the compressor :

During the starting process of the compressor, if the current of the compressor is greater than 14A for 3 seconds, stop the compressor and alarm, after 3 minutes, start it again.

During the starting process of the compressor, if the AC current is greater than 11A, the frequency of the compressor decreases at the speed of 1HZ/second.

During the starting process of the compressor, if the AC current is greater than 10A, the frequency of the compressor decreases at the speed of 0.1HZ/second.

During the starting process of the compressor, if the AC current is greater than 9A, the frequency of the compressor increases at the prohibited speed.

During the starting process of the compressor, if the AC current is less than 8A, the compressor returns to normal control.

7.1.3.4 The protection function of AC current:

During compressor startup, if AC current is greater than 17A for 5 seconds, stop the compressor and alarm and restart after 3 minutes.

During compressor startup, if AC current is greater than 13A, the frequency of the compressor decreases at a rate of 1HZ/sec.

During compressor startup, if AC current is greater than 12A, the frequency of the compressor decreases at a rate of 0.1HZ/sec.

During compressor start-up, if the AC current is greater than 11A, the frequency of the compressor increases at a forbidden rate.

During compressor startup, if the AC current is less than 10A, the compressor returns to normal control.

Remarks: when the outdoor temperature is high, there's compensation for AC current protection.


(1)When the outdoor environment temperature is higher than 40℃, AC current protection value decreases by 1 A

(2)When the outdoor environment temperature is higher than 50℃, AC current protection value decreases by 1 A

7.1.3.5 Antifreezing protection of the indoor heat exchanger

When refrigerating/heating, prevent freezing.

Tpg_indoor is the minimum value of the effective indoor unit (start it and it is in accord with the running state).

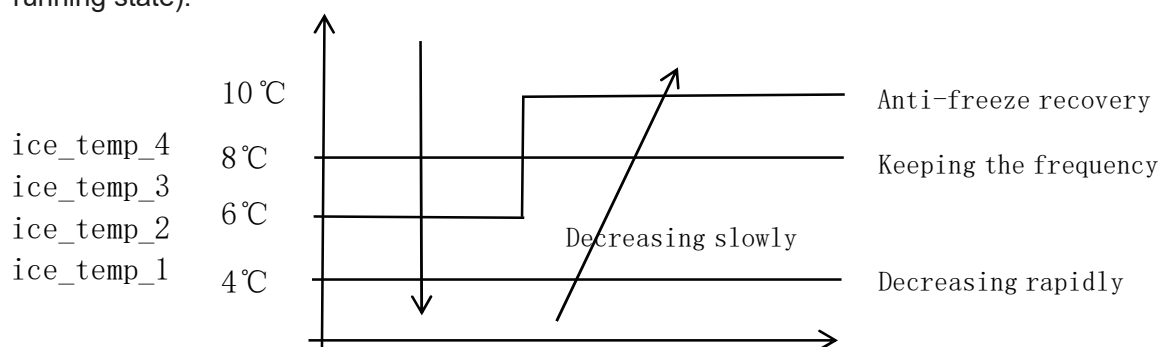

When $Tpg_indoor < ice_temp_4^{\circ}C$, the frequency of the compressor decreases at the speed of 1HZ/1second.

When $Tpg_indoor < ice_temp_6^{\circ}C$, the frequency of the compressor decreases at the speed of 1HZ/10seconds.

When $Tpg_indoor < ice_temp_8^{\circ}C$ compressor frequency ban on upscaling

$Tpg_indoor \leq 4^{\circ}C$ last for 2 minutes, and then the outdoor unit will stop, and report underload malfunction, but don't send malfunction report to the indoor.

The compressor stops for more than 3 minutes, $Tpg_indoor > ice_temp_10^{\circ}C$, the compressor recovers.

7.1.3.6 Temperature protection of the outdoor refrigerating coil

When the cooling external coil temperature is greater than $65^{\circ}C$, the compressor frequency remains

When the outside cooling coil temperature is greater than $68^{\circ}C$, the compressor frequency decreases by 1Hz/10 seconds.

When the temperature of the outside cooling coil is greater than $70^{\circ}C$, the compressor frequency decreases by 1Hz/1 second, and the compressor stops abnormally for 3 minutes after 10 seconds.

7.1.4 The outdoor fan control (exchange fan)

When the fan is changed among every airflow speed (including stop blowing), in order to avoid the airflow speed from skipping frequently, it must be kept under each mode for over 30 seconds.

7.1.4.1 The outdoor fan control when refrigerating or dehumidifying

After the compressor is started for 5 seconds, In 3 minutes, the outdoor fan is started according to the temperature conditions of the outdoor environment.

Twh (°C)	Twh <23°C	23°C < Twh < 29°C	Twh ≥ 29°C
Cooling\Dry	510	660	760

After 3 minutes, The wind speed control is related to the frequency of the compressor and the temperature conditions of the outdoor environment.

Twh < 12°C	MIN=300
23°C ≤ Twh ≤ 29°C	$n = nb1 + Cf1 (f - fb1) + Ct1 (Tao - Tb1)$
Twh > 40°C	MAX=880

Outside machine speed $n = nb1 + Cf1 (f - fb1) + Ct1 (Tao - Tb1)$, where: f is the actual frequency of the press, $Cf1$ is the frequency coefficient of the refrigeration outside air, $Ct1$ is the temperature coefficient of the refrigeration outside air, $nb1$ is the refrigeration outside air air speed constant, $fb1$ is the refrigeration outside air standard frequency, $Tb1$ is the refrigeration outside air standard temperature. The external fan wind speed is limited by the minimum value of the refrigeration external wind speed min and the maximum value of the refrigeration external wind speed max.

7.1.4.2 The outdoor fan control when heating

After the compressor is started for 5 seconds, In 3 minutes, the outdoor fan is started according to the temperature conditions of the outdoor environment.

Twh (°C)	Twh <10°C	10°C < Twh < 16°C	Twh ≥ 16°C
Heating	760	660	410

Heating, the press start 3min after the outside machine speed $n = nb2 + Cf2 (f - fb2) - Ct2 (Tao - Tb2)$, where: f for the actual frequency of the press, $Cf2$ for heating outside air frequency coefficients, $Ct2$ for heating outside air temperature coefficients, $nb2$ for the heating outside air velocity constant, $fb2$ for heating outside standard frequency, $Tb2$ for heating outside air standard temperature. The wind speed of the external fan is limited by the minimum value of the wind speed min and the maximum value of the wind speed max.

7.1.5 The control of the outdoor electronic expansion valve

When starting the compressor: the opening size of the valve must be guaranteed to have entered into the standard opening size, and then the compressor can be started.

When refrigeration is in vain (the machine is shut down or is in the state of retrograde operation), the opening size of the expansion valve of the indoor unit is 5 steps;

When heating is in vain, the opening size of the expansion valve of the indoor unit is 100 steps;

7.2 Value of thermistor

outdoor Unit

Ambient Sensor, Defrosting Sensor, Pipe sensor

R25°C=10K Ω $\pm$ 3% B25°C/50°C=3700K $\pm$ 3%

Temp.(°C)	Max.(K Ω)	Normal(K Ω)	Min.(K Ω)	Tolerance(°C)	
-30	165.2170	147.9497	132.3678	-1.94	1.75
-29	155.5754	139.5600	125.0806	-1.93	1.74
-28	146.5609	131.7022	118.2434	-1.91	1.73
-27	138.1285	124.3392	111.8256	-1.89	1.71
-26	130.2371	117.4366	105.7989	-1.87	1.70
-25	122.8484	110.9627	100.1367	-1.85	1.69
-24	115.9272	104.8882	94.8149	-1.83	1.67
-23	109.4410	99.1858	89.8106	-1.81	1.66
-22	103.3598	93.8305	85.1031	-1.80	1.64
-21	97.6556	88.7989	80.6728	-1.78	1.63
-20	92.3028	84.0695	76.5017	-1.76	1.62
-19	87.2775	79.6222	72.5729	-1.74	1.60
-18	82.5577	75.4384	68.8710	-1.72	1.59
-17	78.1230	71.5010	65.3815	-1.70	1.57
-16	73.9543	67.7939	62.0907	-1.68	1.55
-15	70.0342	64.3023	58.9863	-1.66	1.54
-14	66.3463	61.0123	56.0565	-1.64	1.52
-13	62.8755	57.9110	53.2905	-1.62	1.51
-12	59.6076	54.9866	50.6781	-1.60	1.49
-11	56.5296	52.2278	48.2099	-1.58	1.47
-10	53.6294	49.6244	45.8771	-1.56	1.46
-9	50.8956	47.1666	43.6714	-1.54	1.44
-8	48.3178	44.8454	41.5851	-1.51	1.42
-7	45.8860	42.6525	39.6112	-1.49	1.40
-6	43.5912	40.5800	37.7429	-1.47	1.39
-5	41.4249	38.6207	35.9739	-1.45	1.37
-4	39.3792	36.7676	34.2983	-1.43	1.35

-3	37.4465	35.0144	32.7108	-1.41	1.33
-2	35.6202	33.3552	31.2062	-1.38	1.31
-1	33.8936	31.7844	29.7796	-1.36	1.29
0	32.2608	30.2968	28.4267	-1.34	1.28
1	30.7162	28.8875	27.1431	-1.32	1.26
2	29.2545	27.5519	25.9250	-1.29	1.24
3	27.8708	26.2858	24.7686	-1.27	1.22
4	26.5605	25.0851	23.6704	-1.25	1.20
5	25.3193	23.9462	22.6273	-1.23	1.18
6	24.1432	22.8656	21.6361	-1.20	1.16
7	23.0284	21.8398	20.6939	-1.18	1.14
8	21.9714	20.8659	19.7982	-1.15	1.12
9	20.9688	19.9409	18.9463	-1.13	1.09
10	20.0176	19.0621	18.1358	-1.11	1.07
11	19.1149	18.2270	17.3646	-1.08	1.05
12	18.2580	17.4331	16.6305	-1.06	1.03
13	17.4442	16.6782	15.9315	-1.03	1.01
14	16.6711	15.9601	15.2657	-1.01	0.99
15	15.9366	15.2770	14.6315	-0.98	0.96
16	15.2385	14.6268	14.0271	-0.96	0.94
17	14.5748	14.0079	13.4510	-0.93	0.92
18	13.9436	13.4185	12.9017	-0.91	0.90
19	13.3431	12.8572	12.3778	-0.88	0.87
20	12.7718	12.3223	11.8780	-0.86	0.85
21	12.2280	11.8126	11.4011	-0.83	0.83
22	11.7102	11.3267	10.9459	-0.81	0.80
23	11.2172	10.8634	10.5114	-0.78	0.78
24	10.7475	10.4216	10.0964	-0.75	0.75
25	10.3000	10.0000	9.7000	-0.75	0.75
26	9.8975	9.5974	9.2980	-0.76	0.76
27	9.5129	9.2132	8.9148	-0.80	0.80
28	9.1454	8.8465	8.5496	-0.84	0.83
29	8.7942	8.4964	8.2013	-0.87	0.86
30	8.4583	8.1621	7.8691	-0.91	0.90
31	8.1371	7.8428	7.5522	-0.95	0.93
32	7.8299	7.5377	7.2498	-0.98	0.97
33	7.5359	7.2461	6.9611	-1.02	1.00
34	7.2546	6.9673	6.6854	-1.06	1.04
35	6.9852	6.7008	6.4222	-1.10	1.07
36	6.7273	6.4459	6.1707	-1.13	1.11
37	6.4803	6.2021	5.9304	-1.17	1.14
38	6.2437	5.9687	5.7007	-1.21	1.18
39	6.0170	5.7454	5.4812	-1.25	1.22
40	5.7997	5.5316	5.2712	-1.29	1.25
41	5.5914	5.3269	5.0704	-1.33	1.29

42	5.3916	5.1308	4.8783	-1.37	1.33
43	5.2001	4.9430	4.6944	-1.41	1.36
44	5.0163	4.7630	4.5185	-1.45	1.40
45	4.8400	4.5905	4.3500	-1.49	1.44
46	4.6708	4.4252	4.1887	-1.53	1.47
47	4.5083	4.2666	4.0342	-1.57	1.51
48	4.3524	4.1145	3.8862	-1.61	1.55
49	4.2026	3.9686	3.7443	-1.65	1.59
50	4.0588	3.8287	3.6084	-1.70	1.62
51	3.9206	3.6943	3.4780	-1.74	1.66
52	3.7878	3.5654	3.3531	-1.78	1.70
53	3.6601	3.4416	3.2332	-1.82	1.74
54	3.5374	3.3227	3.1183	-1.87	1.78
55	3.4195	3.2085	3.0079	-1.91	1.82
56	3.3060	3.0989	2.9021	-1.95	1.85
57	3.1969	2.9935	2.8005	-2.00	1.89
58	3.0919	2.8922	2.7029	-2.04	1.93
59	2.9909	2.7948	2.6092	-2.08	1.97
60	2.8936	2.7012	2.5193	-2.13	2.01
61	2.8000	2.6112	2.4328	-2.17	2.05
62	2.7099	2.5246	2.3498	-2.22	2.09
63	2.6232	2.4413	2.2700	-2.26	2.13
64	2.5396	2.3611	2.1932	-2.31	2.17
65	2.4591	2.2840	2.1195	-2.36	2.21
66	2.3815	2.2098	2.0486	-2.40	2.25
67	2.3068	2.1383	1.9803	-2.45	2.29
68	2.2347	2.0695	1.9147	-2.49	2.34
69	2.1652	2.0032	1.8516	-2.54	2.38
70	2.0983	1.9393	1.7908	-2.59	2.42
71	2.0337	1.8778	1.7324	-2.63	2.46
72	1.9714	1.8186	1.6761	-2.68	2.50
73	1.9113	1.7614	1.6219	-2.73	2.54
74	1.8533	1.7064	1.5697	-2.78	2.58
75	1.7974	1.6533	1.5194	-2.83	2.63
76	1.7434	1.6021	1.4710	-2.88	2.67
77	1.6913	1.5528	1.4243	-2.92	2.71
78	1.6409	1.5051	1.3794	-2.97	2.75
79	1.5923	1.4592	1.3360	-3.02	2.80
80	1.5454	1.4149	1.2942	-3.07	2.84
81	1.5000	1.3721	1.2540	-3.12	2.88
82	1.4562	1.3308	1.2151	-3.17	2.93
83	1.4139	1.2910	1.1776	-3.22	2.97
84	1.3730	1.2525	1.1415	-3.27	3.01
85	1.3335	1.2153	1.1066	-3.32	3.06
86	1.2953	1.1794	1.0730	-3.38	3.10

87	1.2583	1.1448	1.0405	-3.43	3.15
88	1.2226	1.1113	1.0092	-3.48	3.19
89	1.1880	1.0789	0.9789	-3.53	3.24
90	1.1546	1.0476	0.9497	-3.58	3.28
91	1.1223	1.0174	0.9215	-3.64	3.33
92	1.0910	0.9882	0.8942	-3.69	3.37
93	1.0607	0.9599	0.8679	-3.74	3.42
94	1.0314	0.9326	0.8424	-3.80	3.46
95	1.0030	0.9061	0.8179	-3.85	3.51
96	0.9756	0.8806	0.7941	-3.90	3.55
97	0.9490	0.8558	0.7711	-3.96	3.60
98	0.9232	0.8319	0.7489	-4.01	3.64
99	0.8983	0.8088	0.7275	-4.07	3.69
100	0.8741	0.7863	0.7067	-4.12	3.74
101	0.8507	0.7646	0.6867	-4.18	3.78
102	0.8281	0.7436	0.6672	-4.23	3.83
103	0.8061	0.7233	0.6484	-4.29	3.88
104	0.7848	0.7036	0.6303	-4.34	3.92
105	0.7641	0.6845	0.6127	-4.40	3.97
106	0.7441	0.6661	0.5957	-4.46	4.02
107	0.7247	0.6482	0.5792	-4.51	4.07
108	0.7059	0.6308	0.5632	-4.57	4.12
109	0.6877	0.6140	0.5478	-4.63	4.16
110	0.6700	0.5977	0.5328	-4.69	4.21
111	0.6528	0.5820	0.5183	-4.74	4.26
112	0.6361	0.5667	0.5043	-4.80	4.31
113	0.6200	0.5518	0.4907	-4.86	4.36
114	0.6043	0.5374	0.4775	-4.92	4.41
115	0.5891	0.5235	0.4648	-4.98	4.45
116	0.5743	0.5100	0.4524	-5.04	4.50
117	0.5600	0.4968	0.4404	-5.10	4.55
118	0.5460	0.4841	0.4288	-5.16	4.60
119	0.5325	0.4717	0.4175	-5.22	4.65
120	0.5194	0.4597	0.4066	-5.28	4.70

Discharging Sensor

R80°C=50K $\Omega \pm 3\%$

B25/80°C=4450K $\pm 3\%$

Temp.((°C))	Max.(K Ω)	Normal(K Ω)	Min.(K Ω)	Tolerance(°C)	
-30	14646.0505	12061.7438	9924.4999	-2.96	2.45
-29	13654.1707	11267.8730	9290.2526	-2.95	2.44
-28	12735.8378	10531.3695	8700.6388	-2.93	2.44
-27	11885.1336	9847.7240	8152.2338	-2.92	2.43
-26	11096.6531	9212.8101	7641.8972	-2.91	2.42
-25	10365.4565	8622.8491	7166.7474	-2.90	2.42


-24	9687.0270	8074.3787	6724.1389	-2.88	2.41
-23	9057.2314	7564.2244	6311.6413	-2.87	2.41
-22	8472.2852	7089.4741	5927.0206	-2.86	2.40
-21	7928.7217	6647.4547	5568.2222	-2.84	2.39
-20	7423.3626	6235.7109	5233.3554	-2.83	2.39
-19	6953.2930	5851.9864	4920.6791	-2.82	2.38
-18	6515.8375	5494.2064	4628.5894	-2.80	2.37
-17	6108.5393	5160.4621	4355.6078	-2.79	2.37
-16	5729.1413	4848.9963	4100.3708	-2.77	2.36
-15	5375.5683	4558.1906	3861.6201	-2.76	2.35
-14	5045.9114	4286.5535	3638.1938	-2.75	2.34
-13	4738.4141	4032.7098	3429.0191	-2.73	2.34
-12	4451.4586	3795.3910	3233.1039	-2.72	2.33
-11	4183.5548	3573.4260	3049.5312	-2.70	2.32
-10	3933.3289	3365.7336	2877.4527	-2.69	2.31
-9	3699.5139	3171.3148	2716.0828	-2.67	2.30
-8	3480.9407	2989.2460	2564.6945	-2.66	2.29
-7	3276.5302	2818.6731	2422.6139	-2.64	2.28
-6	3085.2854	2658.8058	2289.2164	-2.63	2.28
-5	2906.2851	2508.9126	2163.9230	-2.61	2.27
-4	2738.6777	2368.3158	2046.1961	-2.60	2.26
-3	2581.6752	2236.3876	1935.5371	-2.58	2.25
-2	2434.5487	2112.5459	1831.4826	-2.56	2.24
-1	2296.6230	1996.2509	1733.6024	-2.55	2.23
0	2167.2730	1887.0018	1641.4966	-2.53	2.22
1	2045.9191	1784.3336	1554.7931	-2.52	2.21
2	1932.0242	1687.8144	1473.1460	-2.50	2.20
3	1825.0899	1597.0431	1396.2333	-2.48	2.19
4	1724.6540	1511.6468	1323.7551	-2.47	2.17
5	1630.2870	1431.2787	1255.4324	-2.45	2.16
6	1541.5904	1355.6163	1191.0048	-2.43	2.15
7	1458.1938	1284.3593	1130.2298	-2.41	2.14
8	1379.7528	1217.2282	1072.8813	-2.40	2.13
9	1305.9472	1153.9626	1018.7481	-2.38	2.12
10	1236.4792	1094.3200	967.6334	-2.36	2.11
11	1171.0715	1038.0743	919.3533	-2.35	2.09
12	1109.4661	985.0146	873.7359	-2.33	2.08
13	1051.4226	934.9440	830.6210	-2.31	2.07
14	996.7169	887.6792	789.8583	-2.29	2.06
15	945.1404	843.0486	751.3077	-2.27	2.04
16	896.4981	800.8922	714.8380	-2.26	2.03
17	850.6086	761.0603	680.3265	-2.24	2.02
18	807.3024	723.4134	647.6580	-2.22	2.00
19	766.4212	687.8205	616.7252	-2.20	1.99
20	727.8172	654.1596	587.4271	-2.18	1.98

21	691.3524	622.3161	559.6694	-2.16	1.96
22	656.8979	592.1831	533.3634	-2.14	1.95
23	624.3328	563.6604	508.4261	-2.12	1.93
24	593.5446	536.6540	484.7796	-2.10	1.92
25	564.4275	511.0760	462.3510	-2.09	1.90
26	536.9865	486.9352	441.1516	-2.07	1.89
27	511.0105	464.0500	421.0258	-2.05	1.87
28	486.4151	442.3499	401.9146	-2.03	1.86
29	463.1208	421.7683	383.7626	-2.01	1.84
30	441.0535	402.2430	366.5175	-1.99	1.83
31	420.1431	383.7151	350.1301	-1.97	1.81
32	400.3242	366.1295	334.5542	-1.95	1.80
33	381.5350	349.4341	319.7460	-1.93	1.78
34	363.7176	333.5801	305.6645	-1.90	1.76
35	346.8176	318.5216	292.2709	-1.88	1.75
36	330.7839	304.2151	279.5286	-1.86	1.73
37	315.5682	290.6199	267.4031	-1.84	1.71
38	301.1254	277.6976	255.8620	-1.82	1.70
39	287.4128	265.4119	244.8745	-1.80	1.68
40	274.3905	253.7288	234.4118	-1.78	1.66
41	262.0206	242.6161	224.4465	-1.76	1.64
42	250.2676	232.0436	214.9529	-1.74	1.63
43	239.0983	221.9825	205.9065	-1.71	1.61
44	228.4809	212.4060	197.2844	-1.69	1.59
45	218.3860	203.2887	189.0648	-1.67	1.57
46	208.7855	194.6066	181.2273	-1.65	1.55
47	199.6531	186.3369	173.7524	-1.63	1.54
48	190.9639	178.4584	166.6217	-1.60	1.52
49	182.6945	170.9508	159.8181	-1.58	1.50
50	174.8228	163.7951	153.3249	-1.56	1.48
51	167.3280	156.9733	147.1268	-1.53	1.46
52	160.1904	150.4683	141.2090	-1.51	1.44
53	153.3914	144.2641	135.5577	-1.49	1.42
54	146.9136	138.3454	130.1598	-1.47	1.40
55	140.7403	132.6980	125.0027	-1.44	1.38
56	134.8559	127.3081	120.0746	-1.42	1.36
57	129.2457	122.1630	115.3645	-1.40	1.34
58	123.8956	117.2504	110.8618	-1.37	1.32
59	118.7926	112.5589	106.5564	-1.35	1.30
60	113.9241	108.0776	102.4388	-1.32	1.28
61	109.2784	103.7961	98.5000	-1.30	1.26
62	104.8443	99.7046	94.7315	-1.28	1.23
63	100.6112	95.7939	91.1253	-1.25	1.21
64	96.5692	92.0553	87.6735	-1.23	1.19
65	92.7088	88.4805	84.3690	-1.20	1.17


66	89.0211	85.0614	81.2048	-1.18	1.15
67	85.4976	81.7908	78.1744	-1.15	1.12
68	82.1303	78.6615	75.2715	-1.13	1.10
69	78.9116	75.6668	72.4902	-1.10	1.08
70	75.8343	72.8004	69.8249	-1.08	1.06
71	72.8916	70.0561	67.2703	-1.05	1.03
72	70.0770	67.4283	64.8213	-1.03	1.01
73	67.3844	64.9115	62.4731	-1.00	0.99
74	64.8080	62.5006	60.2211	-0.98	0.96
75	62.3423	60.1906	58.0609	-0.95	0.94
76	59.9821	57.9770	55.9885	-0.92	0.92
77	57.7223	55.8552	53.9998	-0.90	0.89
78	55.5583	53.8210	52.0912	-0.87	0.87
79	53.4856	51.8706	50.2591	-0.85	0.84
80	51.5000	50.0000	48.5000	-0.85	0.84
81	49.7063	48.2057	46.7083	-0.85	0.85
82	47.9835	46.4842	44.9911	-0.89	0.89
83	46.3286	44.8323	43.3452	-0.93	0.92
84	44.7385	43.2468	41.7672	-0.96	0.95
85	43.2105	41.7248	40.2540	-1.00	0.99
86	41.7386	40.2604	38.7996	-1.03	1.02
87	40.3241	38.8545	37.4048	-1.07	1.06
88	38.9643	37.5045	36.0668	-1.11	1.09
89	37.6569	36.2078	34.7831	-1.14	1.13
90	36.3996	34.9622	33.5513	-1.18	1.16
91	35.1903	33.7653	32.3689	-1.22	1.19
92	34.0269	32.6151	31.2338	-1.26	1.23
93	32.9075	31.5096	30.1438	-1.30	1.27
94	31.8302	30.4467	29.0970	-1.33	1.30
95	30.7933	29.4246	28.0915	-1.37	1.34
96	29.7950	28.4417	27.1254	-1.41	1.37
97	28.8337	27.4961	26.1970	-1.45	1.41
98	27.9078	26.5864	25.3048	-1.49	1.44
99	27.0160	25.7110	24.4470	-1.53	1.48
100	26.1569	24.8685	23.6222	-1.57	1.52
101	25.3290	24.0574	22.8291	-1.61	1.55
102	24.5311	23.2765	22.0662	-1.65	1.59
103	23.7620	22.5245	21.3323	-1.69	1.63
104	23.0205	21.8002	20.6261	-1.73	1.66
105	22.3055	21.1025	19.9465	-1.77	1.70
106	21.6159	20.4303	19.2924	-1.81	1.74
107	20.9508	19.7825	18.6626	-1.85	1.77
108	20.3091	19.1582	18.0563	-1.89	1.81
109	19.6899	18.5564	17.4723	-1.93	1.85
110	19.0924	17.9761	16.9098	-1.98	1.89

111	18.5157	17.4166	16.3680	-2.02	1.93
112	17.9590	16.8769	15.8458	-2.06	1.96
113	17.4214	16.3564	15.3427	-2.10	2.00
114	16.9023	15.8542	14.8577	-2.15	2.04
115	16.4010	15.3696	14.3902	-2.19	2.08
116	15.9167	14.9020	13.9394	-2.23	2.12
117	15.4489	14.4506	13.5047	-2.27	2.16
118	14.9968	14.0149	13.0855	-2.32	2.19
119	14.5599	13.5942	12.6811	-2.36	2.23
120	14.1376	13.1879	12.2909	-2.41	2.27
121	13.7294	12.7955	11.9144	-2.45	2.31
122	13.3347	12.4165	11.5510	-2.50	2.35
123	12.9531	12.0503	11.2003	-2.54	2.39
124	12.5840	11.6965	10.8617	-2.58	2.43
125	12.2270	11.3545	10.5348	-2.63	2.47
126	11.8817	11.0240	10.2191	-2.68	2.51
127	11.5475	10.7046	9.9142	-2.72	2.55
128	11.2242	10.3957	9.6197	-2.77	2.59
129	10.9112	10.0970	9.3352	-2.81	2.63
130	10.6084	9.8082	9.0602	-2.86	2.67
131	10.3151	9.5288	8.7945	-2.91	2.71
132	10.0312	9.2586	8.5378	-2.95	2.75
133	9.7563	8.9971	8.2895	-3.00	2.80
134	9.4901	8.7441	8.0495	-3.05	2.84
135	9.2322	8.4993	7.8175	-3.09	2.88
136	8.9824	8.2623	7.5931	-3.14	2.92
137	8.7404	8.0329	7.3760	-3.19	2.96
138	8.5059	7.8108	7.1660	-3.24	3.00
139	8.2787	7.5958	6.9629	-3.29	3.04
140	8.0584	7.3875	6.7664	-3.33	3.09

8. Dimensional drawings

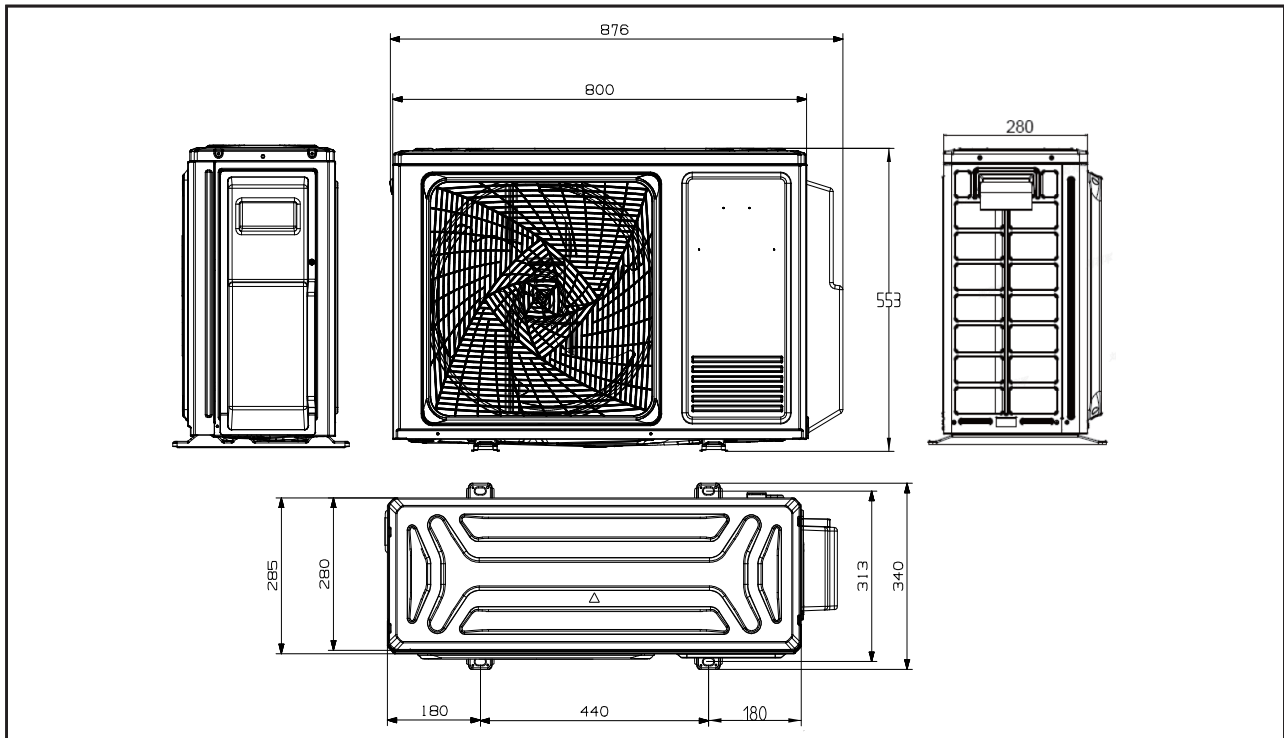

9. Center of gravity

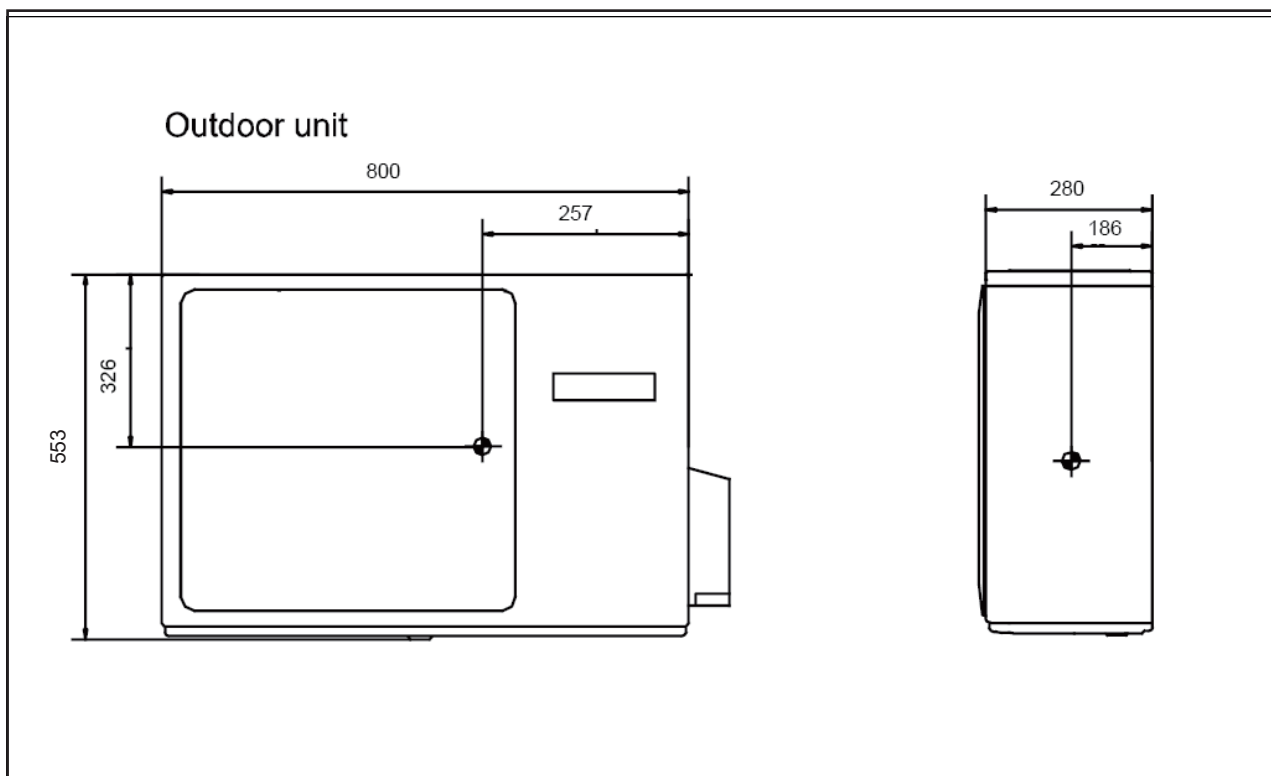





10.Service Diagnosis

10.1 Caution for Diagnosis

The operation lamp flashes when any of the following errors is detected.

1. When a protection device of the indoor or outdoor unit is activated or when the thermistor malfunctions, disabling equipment operation.
2. When a signal transmission error occurs between the indoor and outdoor units. In either case, conduct the diagnostic procedure described in the following pages.

10.2 Parameter of primary electronic appliance

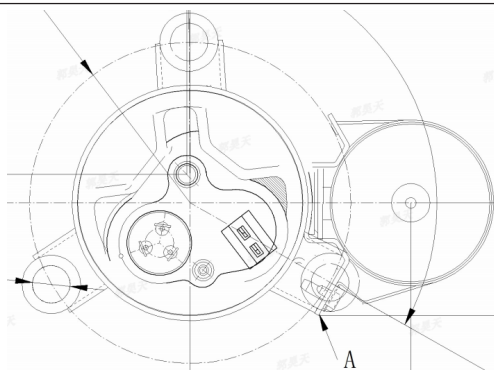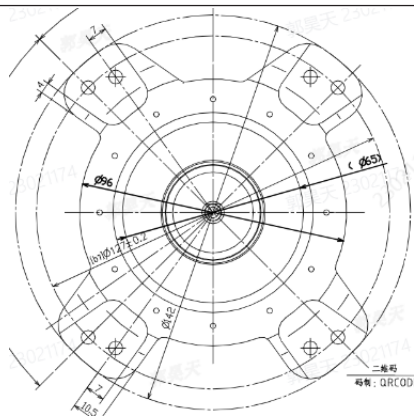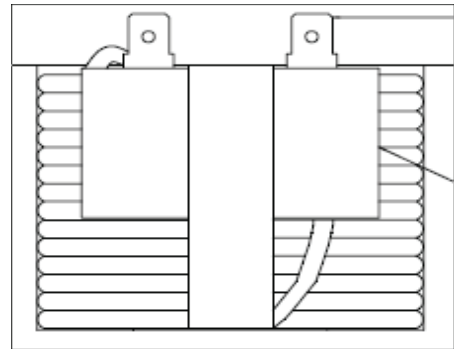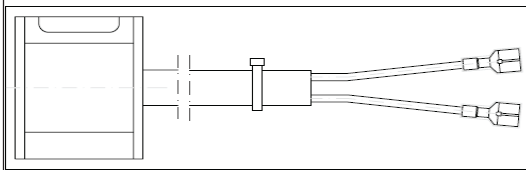NO	Name	Parameter	Picture
1	Compressor	Rated voltage:220V Rated current:8.4A Rated frequency:50Hz Resistance:1.93Ω	
2	Fan motor	Rated voltage:DC 310V Rated current:0.3A Rated frequency:50/60Hz Rated power:25W	
3	Reactor	Rated voltage:29.4V±10% Rated current:18A Rated frequency:50Hz Rated inductance:5.2mH±10%	
4	4-way valve	Rated voltage:220-240V Rated frequency:50/60Hz Power :4.5/3.5W	

10.3 Problem Symptoms and Measures

Symptom	Check Item	Details of Measure
None of the units operates	Check the power supply.	Check to make sure that the rated voltage is supplied.
	Check the indoor PCB	Check to make sure that the indoor PCB is broken
Operation sometimes stops.	Check the power supply.	A power failure of 2 to 10 cycles can stop air conditioner operation.
Equipment operates but does not cool, or does not heat (only for heat pump)	Check for faulty operation of the electronic expansion valve.	Set the units to cooling operation, and compare the temperatures of the liquid side connection pipes of the connection section among rooms to check the opening and closing operation of the electronic expansion valves of the individual units.
	Diagnosis by service port pressure and operating current.	Check for insufficient gas.
Large operating noise and vibrations	Check the installation condition.	Check to make sure that the required spaces for installation (specified in the Technical Guide, etc.) are provided.

10.4 Error Codes and Description indoor display

Split board: LED1 light of outdoor PCB flash; All-in-one board: LED2 light of outdoor PCB flash

ERROR CODE		OUTDOOR (LED FLASH TIMES)	FAULT DESCRIPTION	SPARE PART
Indoor and Outdoor	E7	15	Communication fault between indoor and outdoor units	Indoor PCB
				Outdoor PCB
				Power module
				Communication wiring
Indoor Malfunction	E1	/	Indoor temperature sensor failure	Room temperature sensor
	E2	/	pipe temperature sensor failure	Indoor PCB
				pipe temperature sensor
	E4	/	Indoor EEPROM failure	Indoor PCB
	E5	22	Indoor anti-frosting protection	pipe temperature sensor
				Indoor PCB
				Indoor motor
	E8	/	The running modes of the two internal units conflict	Operation mode
	E9	21	Indoor unit overload in heating mode	pipe temperature sensor
				Indoor PCB
				Indoor motor
	E14	/	Indoor fan motor malfunction	Indoor motor
				Indoor PCB
Outdoor Malfunction	F1	2	IPM protection	Power module
				Refrigerant
	F2	24	Instantaneous over-current protection of the compressor	Power module
				Refrigerant
				compressor
	F3	4	Communication error between Power module and main PCB board.	Power module
				Outdoor PCB
	F4	8	Compressor discharging temperature protection	Outdoor PCB
				discharge sensor
	F6	12	outdoor ambient sensor failure	outdoor ambient sensor
	F7	11	Suction temperature sensor failure	Suction temperature sensor
				outdoor PCB
	F8	9	DC fan motor malfunction	outdoor PCB
				outdoor motor
	F9	26	Module reset	Power module
				Outdoor PCB
				compressor
	F11	18	Loss of synchronism detection	The wiring of compressor
				compressor
				Power module
	F12	1	EEPROM failure	Outdoor PCB

ERROR CODE		OUTDOOR (LED FLASH TIMES)	FAULT DESCRIPTION	SPARE PART
Outdoor Malfunction	F13	16	Lack of refrigerant	Refrigerant
	F14	17	4-way valve reverse failure	4-way valve
	F19	6	Power over/under voltage protection	Power module
	F20	5	High pressure protection	Outdoor pipe temperature sensor
				Outdoor PCB
	F21	10	Outdoor coil temperature sensor	Defrost temperature sensor
	F22	3	Outdoor Alternating current over current protection	Power module
				Refrigerant
				compressor
	F23	25	Compressor U-phase overcurrent Compressor V-phase overcurrent Compressor W-phase overcurrent	Power module
				Refrigerant
				compressor
	F24	27	CT detection current abnormal protection	Power module
				Compressor
	F25	13	Abnormal of compressor discharge sensor	discharge sensor
				Outdoor PCB
	F27	7	Compressor current sampling circuit fault	Power module
				Outdoor PCB
				compressor
	F28	19	Compressor position detection circuit fault	Power module
				Outdoor PCB
				compressor
	F35	38	Compressor driver board failure	Power module
				Outdoor PCB
				Compressor
	F43	46	Model matching abnormality	/
Fixed frequency AC	FE	/	Refrigerant leaking detection malfunction	Refrigerant

10.4.1 Thermistor or Related Abnormality

Indoor Display	E1: Room temperature sensor failure E2: Heat-exchange sensor failure
Outdoor display	LED1 flash 10 times: Defrost temperature sensor failure LED1 flash 11 times: Suction temperature sensor failure LED1 flash 12 times: Ambient temperature sensor failure LED1 flash 13 times: Discharge temperature sensor failure

Method of Malfunction Detection

The temperatures detected by the thermistors are used to determine thermistor errors

Malfunction Decision Conditions

When the thermistor input is more than 4.92V or less than 0.08V during compressor operation.


- Note: The values vary slightly in some models

Supposed Causes

- Faulty connector connection
- Faulty thermistor
- Faulty PCB


Trouble shooting

* Caution: Be sure to turn off power switch before connect or disconnect connector, or else parts damage may be occurred.

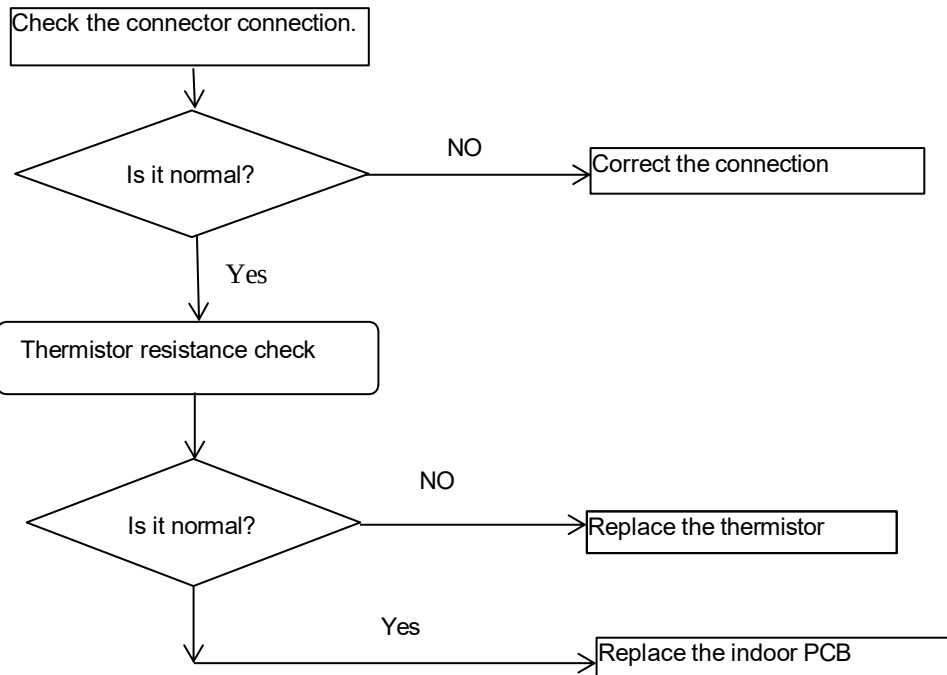

Thermistor resistance inspection method:

Remove the connector of the thermistor on the PCB, and measure the resistance of thermistor using tester. The relationship between normal temperature and resistance is shown in the value of indoor thermistor.

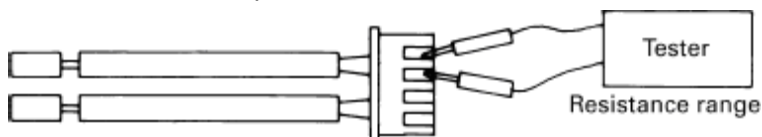

10.4.2 EEPROM abnormal

Indoor Display
Indoor display

E4: Indoor EEPROM error

F12: Outdoor EEPROM error; Outdoor LED1 flash 1 times

Method of
Malfunction
Detection

The Data detected by the EEPROM are used to determine MCU

Malfunction
Decision
Conditions

When the data of EEPROM is error or the EEPROM is damaged

Supposed
Causes

- Faulty EEPROM data
- Faulty EEPROM
- Faulty PCB

Trouble
shooting

* Caution: Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

Replace the indoor or outdoor mainboard.

10.4.3 Indoor DC fan motor malfunction

Indoor Display

E14 Indoor DC fan motor malfunction

Method of
Malfunction
Detection

When the fan motor is running, the speed detected by the Hall IC is used to judge the abnormal operation of the fan motor

Malfunction
Decision
Conditions


When the detected rotation feedback signal don't received in 2 minutes


Supposed
Causes

- Operation halt due to breaking of wire inside the fan motor.
- Operation halt due to breaking of the fan motor lead wires
- Detection error due to faulty indoor unit PCB

Trouble
shooting

* Caution: Be sure to turn off power switch before connect or disconnect connector, or else parts damage may be occurred.

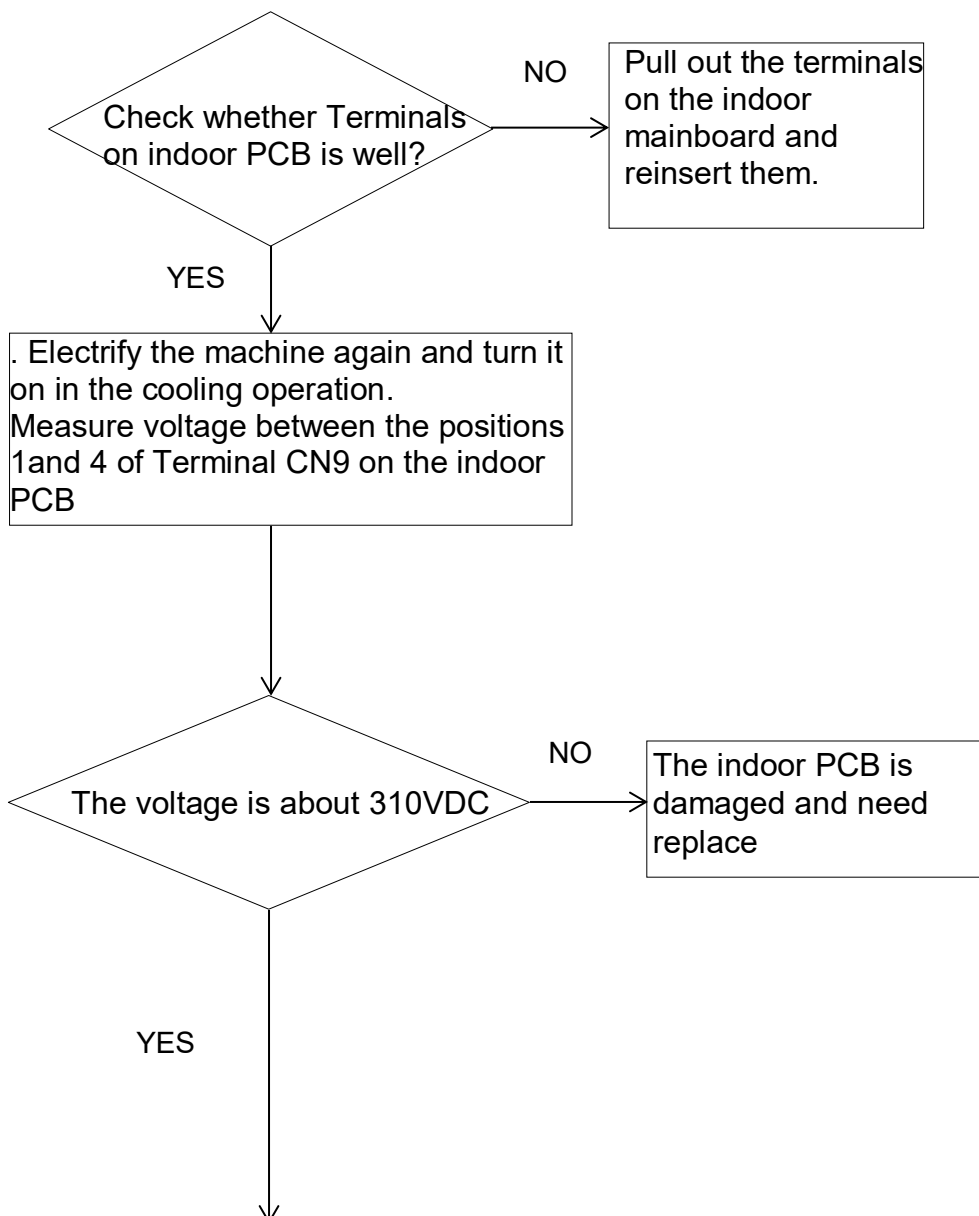

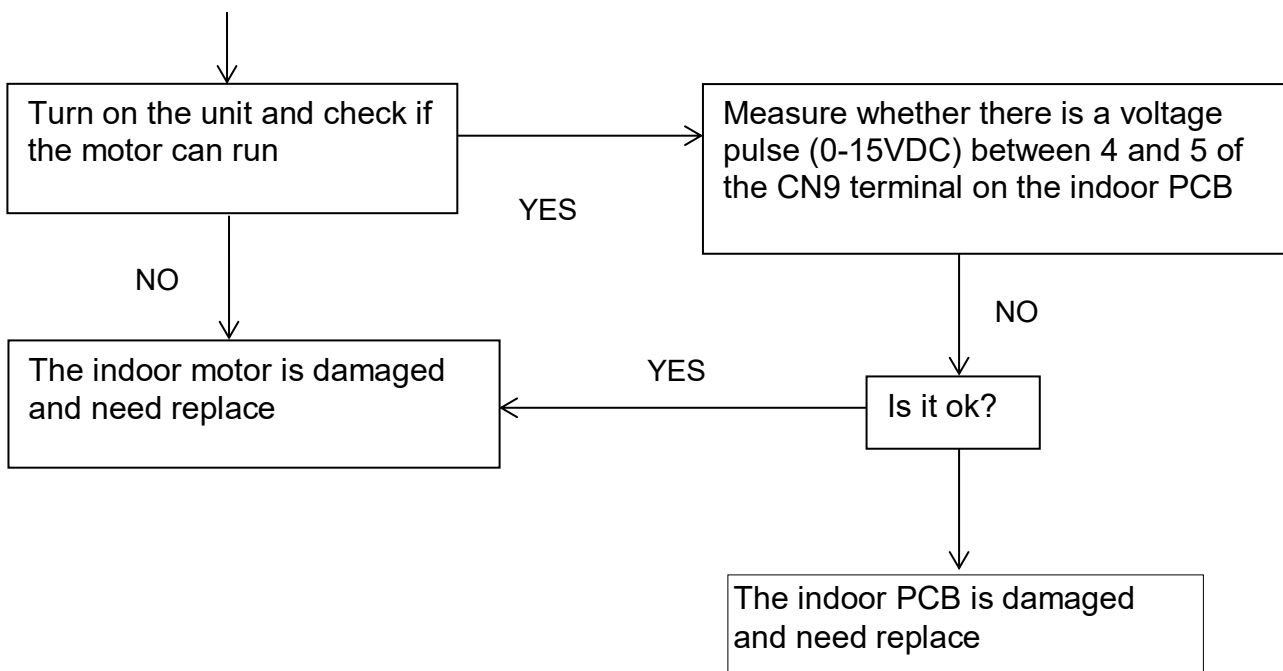

	Color	Signal	Voltage
1	Red	VDC	310V
2	---	---	---
3	---	---	---
4	Black	GND	0V
5	White	VCC	15v
6	Blue	FG	15V
7	Yellow	Vsp	0-6.5V



10.4.4 Outdoor DC fan motor fault

Outdoor display F8 LED1 flash 9 times

Method of
Malfunction
Detection

DC fan motor is detected by checking the fan running condition and so on

Malfunction
Decision
Conditions


When the detected rotation feedback signal don't received in 2 minutes


Supposed
Causes

- DC fan motor protection dues to the DC fan motor faulty
- DC fan motor protection dues to faulty PCB

Trouble
shooting

* Caution: Be sure to turn off power switch before connect or disconnect connector, or else parts damage may be occurred.

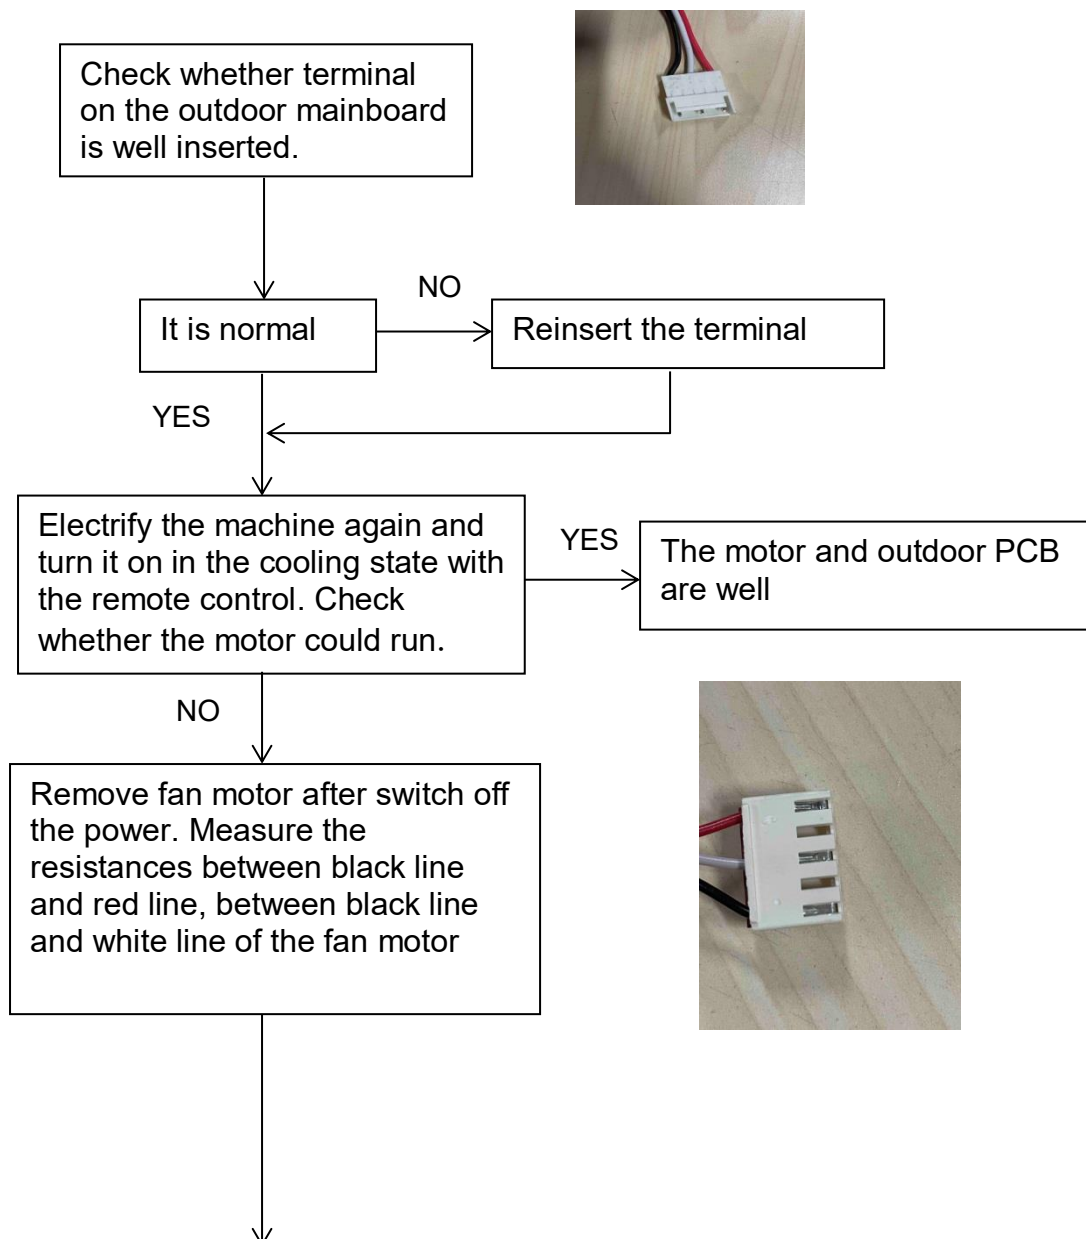

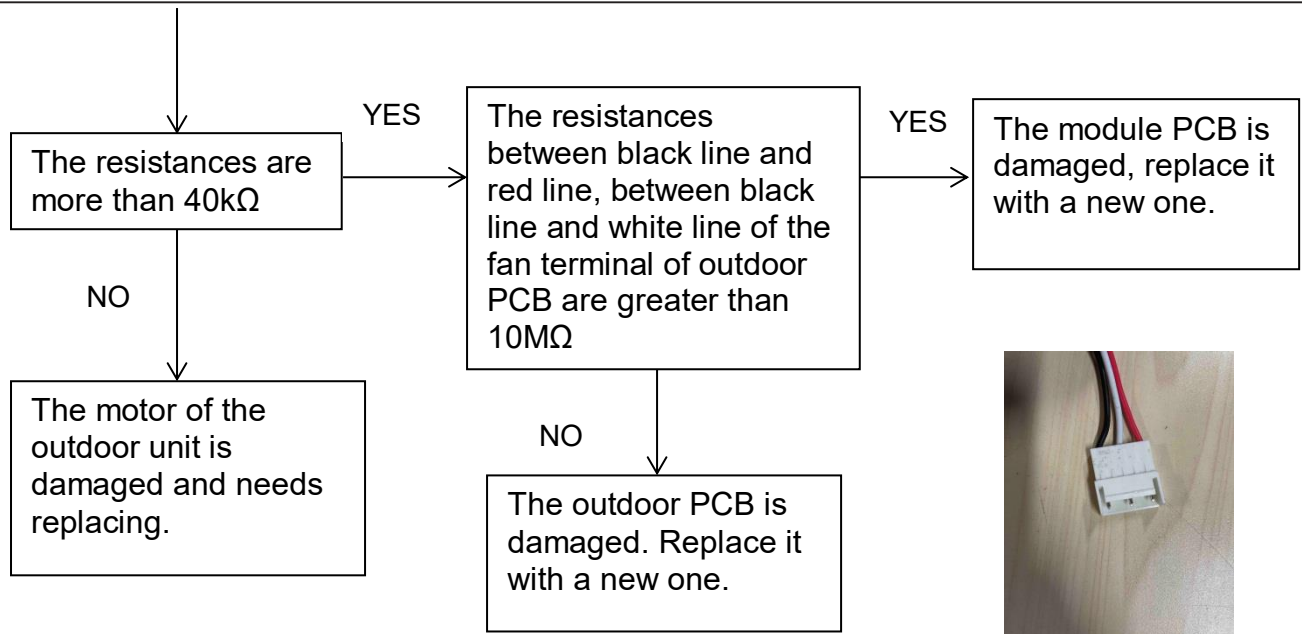

10.4.5 IPM protection

Outdoor display: F1 LED1 flash 2 times

Method of Malfunction Detection

IPM protection is detected by checking the compressor running condition and so on

Malfunction Decision Conditions



The system leads to IPM protection due to over current
The compressor faulty leads to IPM protection
Circuit component of IPM is broken and led to IPM protection

Supposed Causes

- IPM protection dues to the compressor faulty
- IPM protection dues to faulty PCB of IPM module
- Compressor wiring disconnected

Trouble shooting


* Caution: Be sure to turn off power switch before connect or disconnect connector, or else parts damage may be occurred

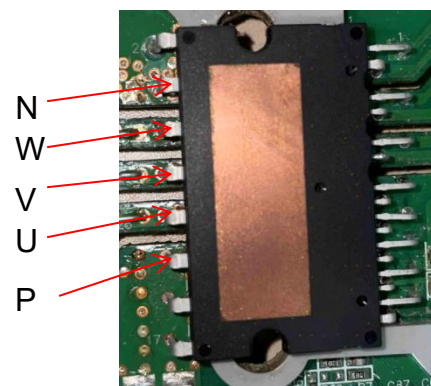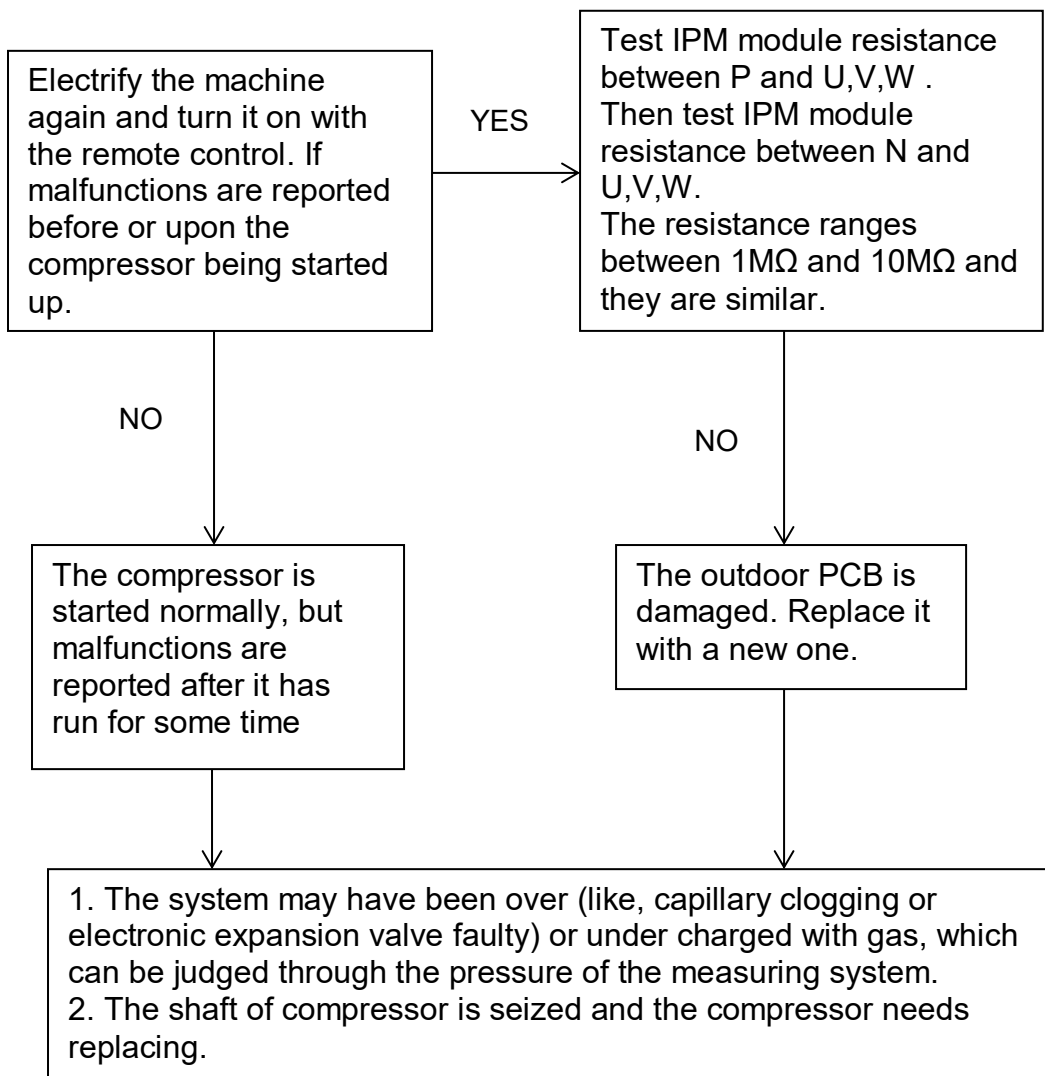

10.4.6 Over-current of the compressor

Outdoor Display F22, F2, F23 LED1 flash 3 or 24 or 25 times

Method of Malfunction Detection	The current of the compressor is too high
Malfunction Decision Conditions	When the IPM Module is damaged or the compressor is damaged. Power supply voltage is too low or too high
Supposed Causes	■ Faulty IPM Module ■ Faulty compressor ■ Faulty power supply
Trouble shooting	* Caution: Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

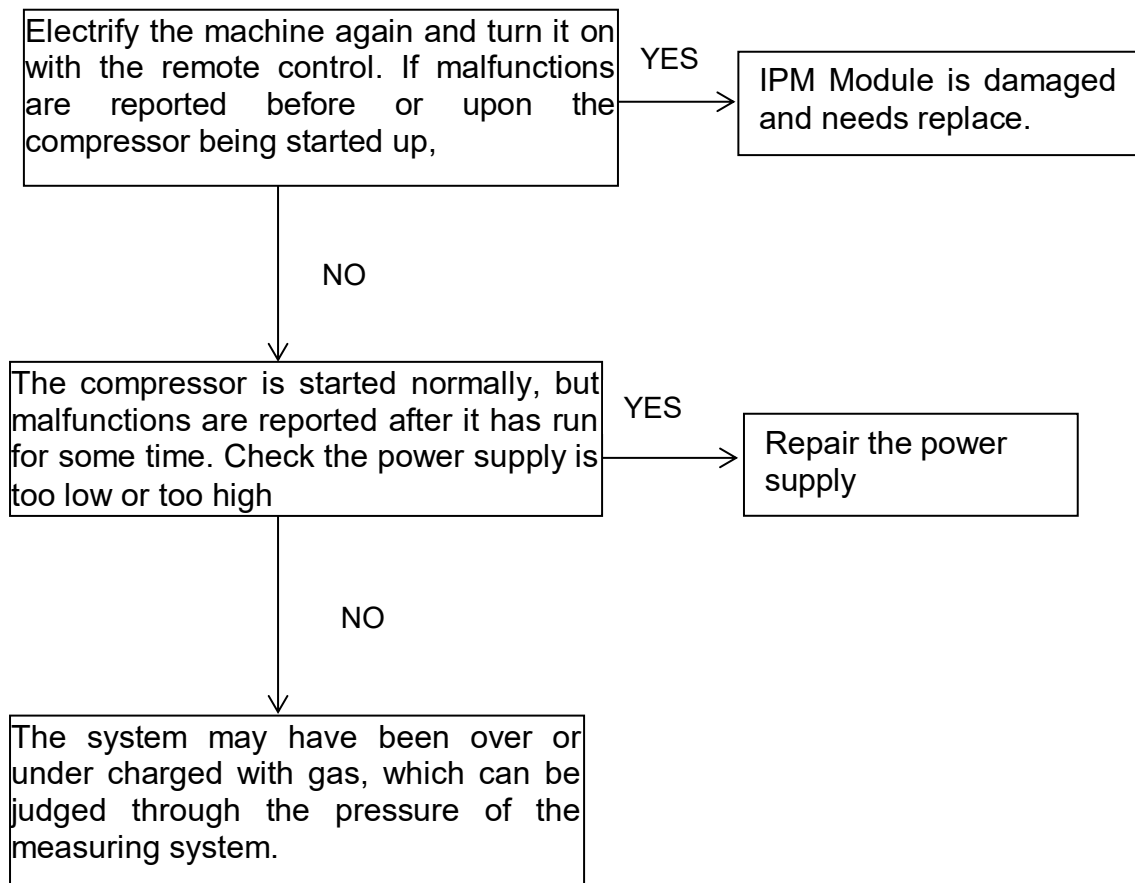

10.4.7 The communication fault between IPM and outdoor PCB

Outdoor display: F3 LED1 flash 4 times

Method of
Malfunction
Detection

Communication is detected by checking the IPM module and the outdoor PCB

Malfunction
Decision
Conditions

- The outdoor PCB broken leads to communication fault
- The IPM module broken leads to communication fault

Supposed
Causes


- The outdoor PCB is broken
- The IPM module is broken
- Communication wiring disconnected

Trouble
shooting

* Caution: Be sure to turn off power switch before connect or disconnect connector, or else parts damage may be occurred.

Check whether the CN23 and CN24 terminals of the outdoor PCB and the CN10 and CN11 terminals of the IPM module are tightly connected.

Check whether the connection between the power module and the outdoor P&N line is tight

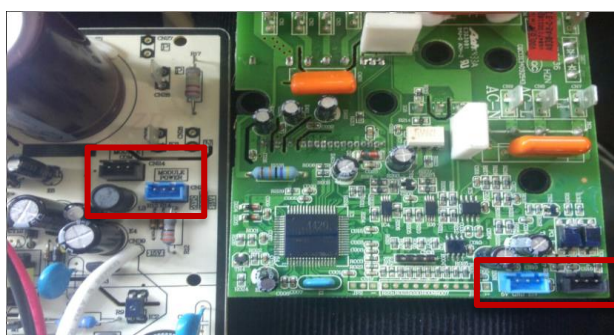

Are they good?

NO

Pull out and reinsert the terminals.
Replace connected wire

Malfunction unsolved

Electrify the machine again and turn it on.
Check whether the voltage between 1 and 2
of Terminal CN23 is about DC5V.
Check whether the voltage between 2 and 3
of terminal CN23 is about DC15V.

YES

Replace the outdoor IPM
module with a new one.

NO

Replace the outdoor PCB with a new
one



10.4.8 Power Supply Over or under voltage fault

Outdoor display: F19 LED1 flash 6 times

Method of
Malfunction
Detection

An abnormal voltage rise or fall is detected by checking the specified voltage detection circuit.
The power supply is over voltage

Malfunction
Decision
Conditions


The voltage signal is fed from the voltage detection circuit to the microcomputer

Supposed
Causes

- Supply voltage not as specified
- the IPM module is broken
- the outdoor PCB is broken

Trouble
shooting


* Caution: Be sure to turn off power switch before connect or disconnect connector, or else parts damage may be occurred.

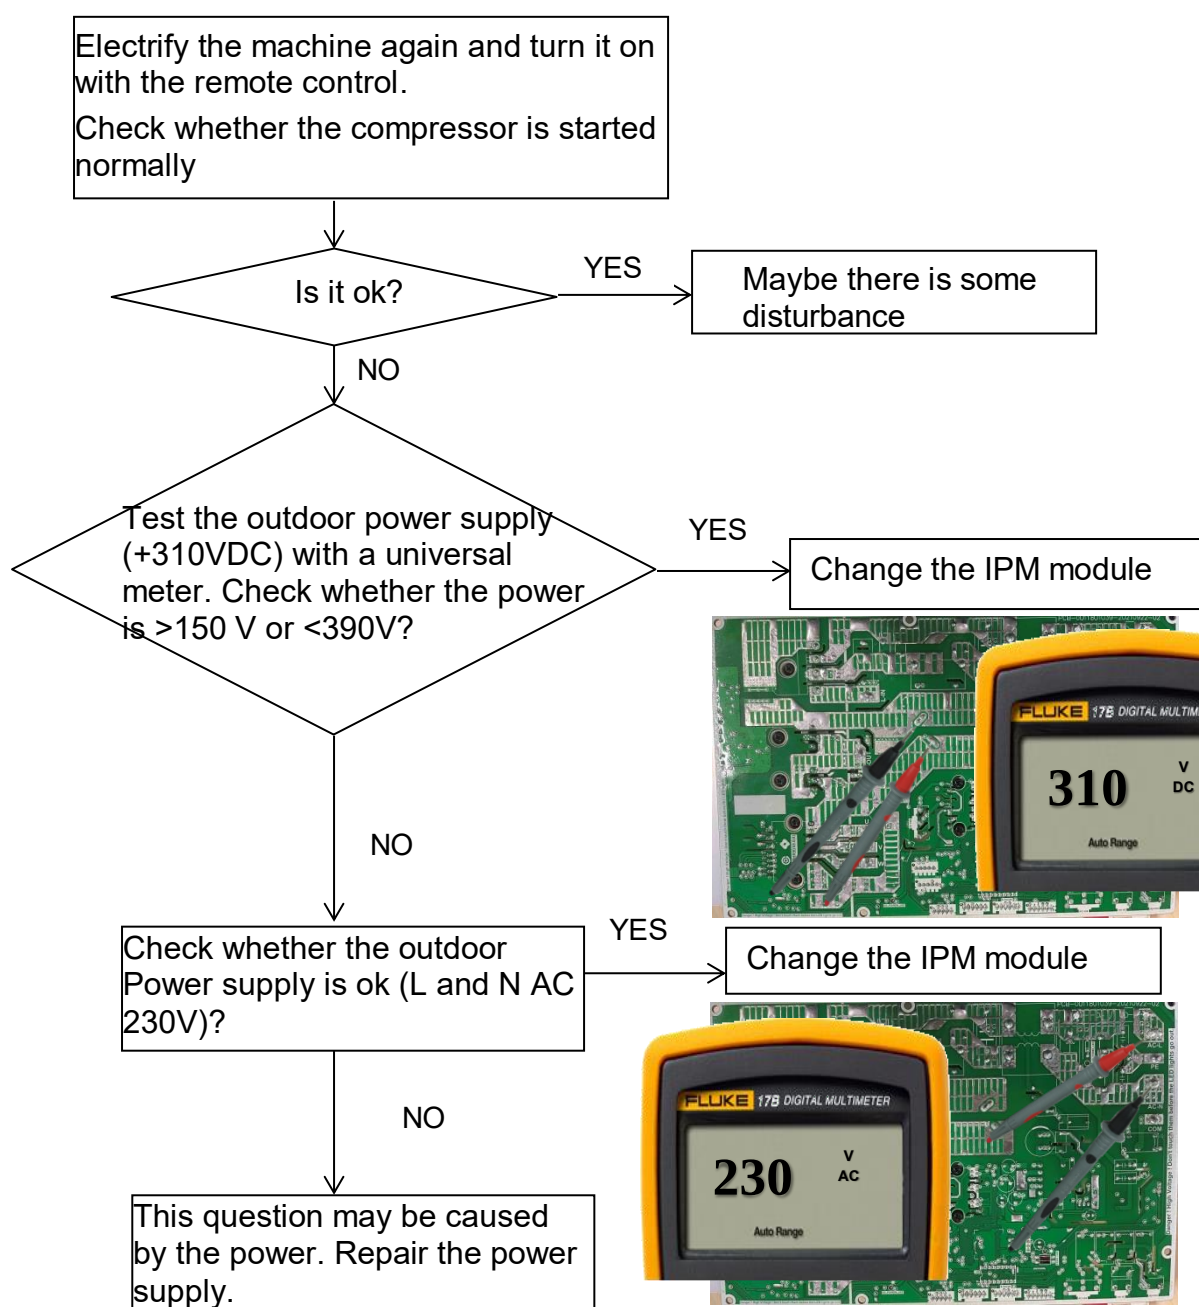

10.4.9 Overheat Protection for Discharge Temperature

Outdoor display: F4 LED1 flash 8 times


Method of Malfunction Detection	Check the control of the discharge temperature by the temperature detected by the discharge pipe thermistor
Malfunction Decision Conditions	When the compressor discharge temperature is above 110℃
Supposed Causes	■ Electronic expansion valve defective ■ Faulty thermistor ■ Faulty PCB
Trouble shooting	* Caution: Be sure to turn off power switch before connect or disconnect connector or else parts damage may be occurred.

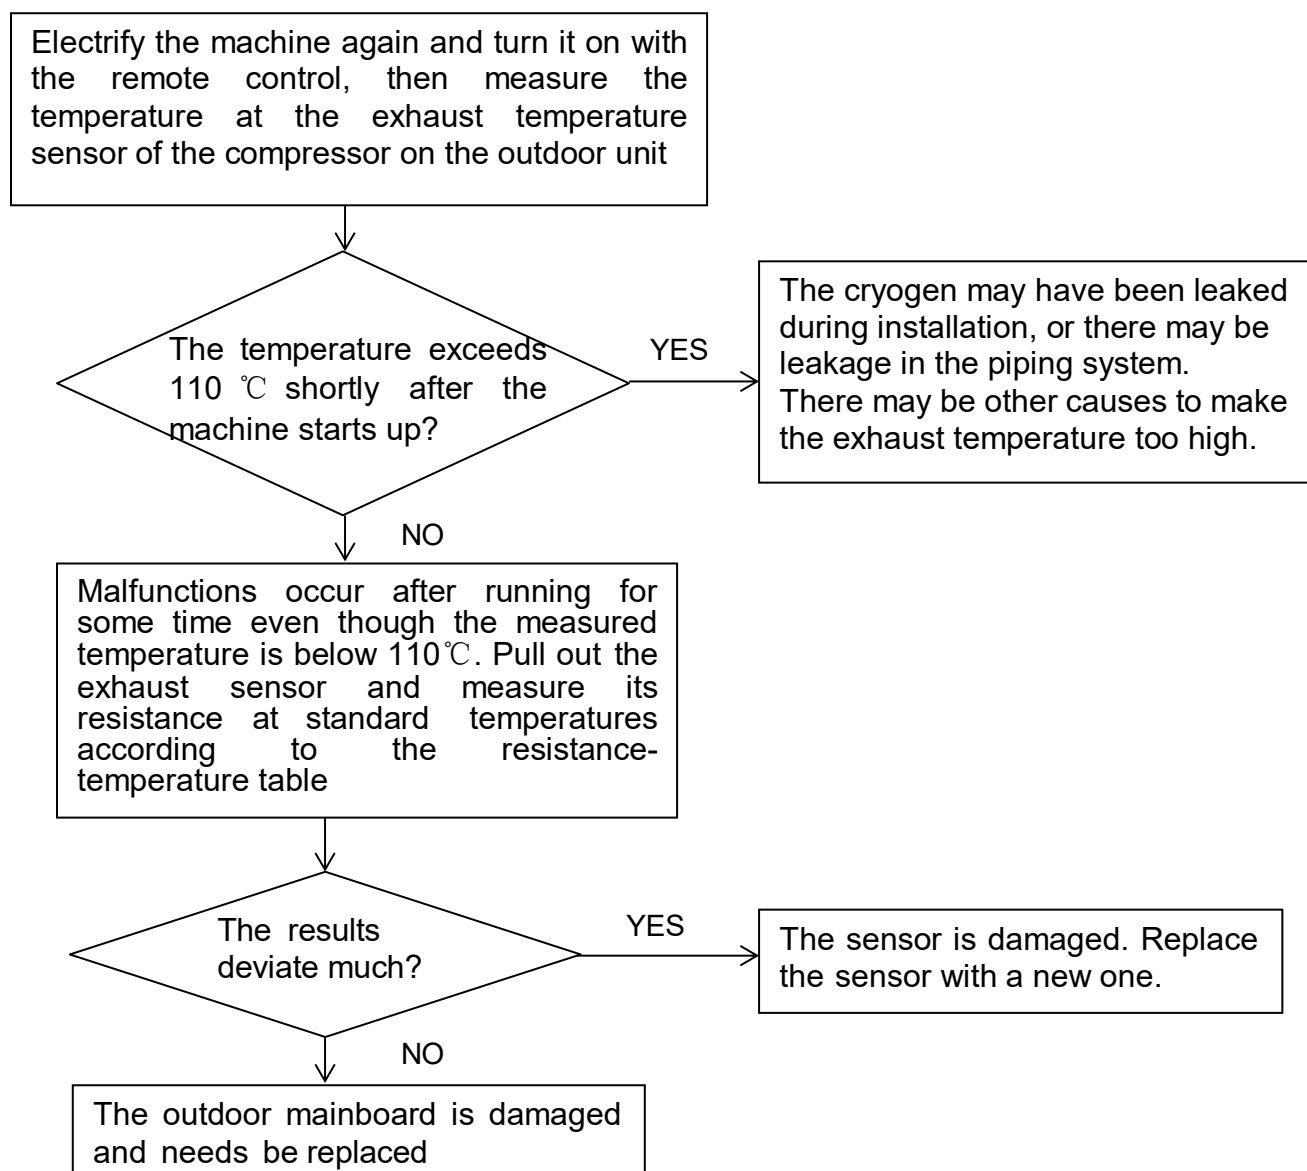


10.4.10 The communication fault between indoor and outdoor

Split board Indoor display E7 outdoor display LED1 flash 15 times

Method of Malfunction Detection	Communication is detected by checking the indoor PCB and the outdoor PCB.
Malfunction Decision Conditions	The outdoor PCB broken leads to communication fault. The indoor PCB broken leads to communication fault.
Supposed Causes	■ Communication wiring disconnected. ■ The indoor PCB is broken. ■ The outdoor PCB is broken. ■ The Power Module is broken.
Trouble shooting	* Caution: Be sure to turn off power switch before connect or disconnect connector, or else parts damage may be occurred.

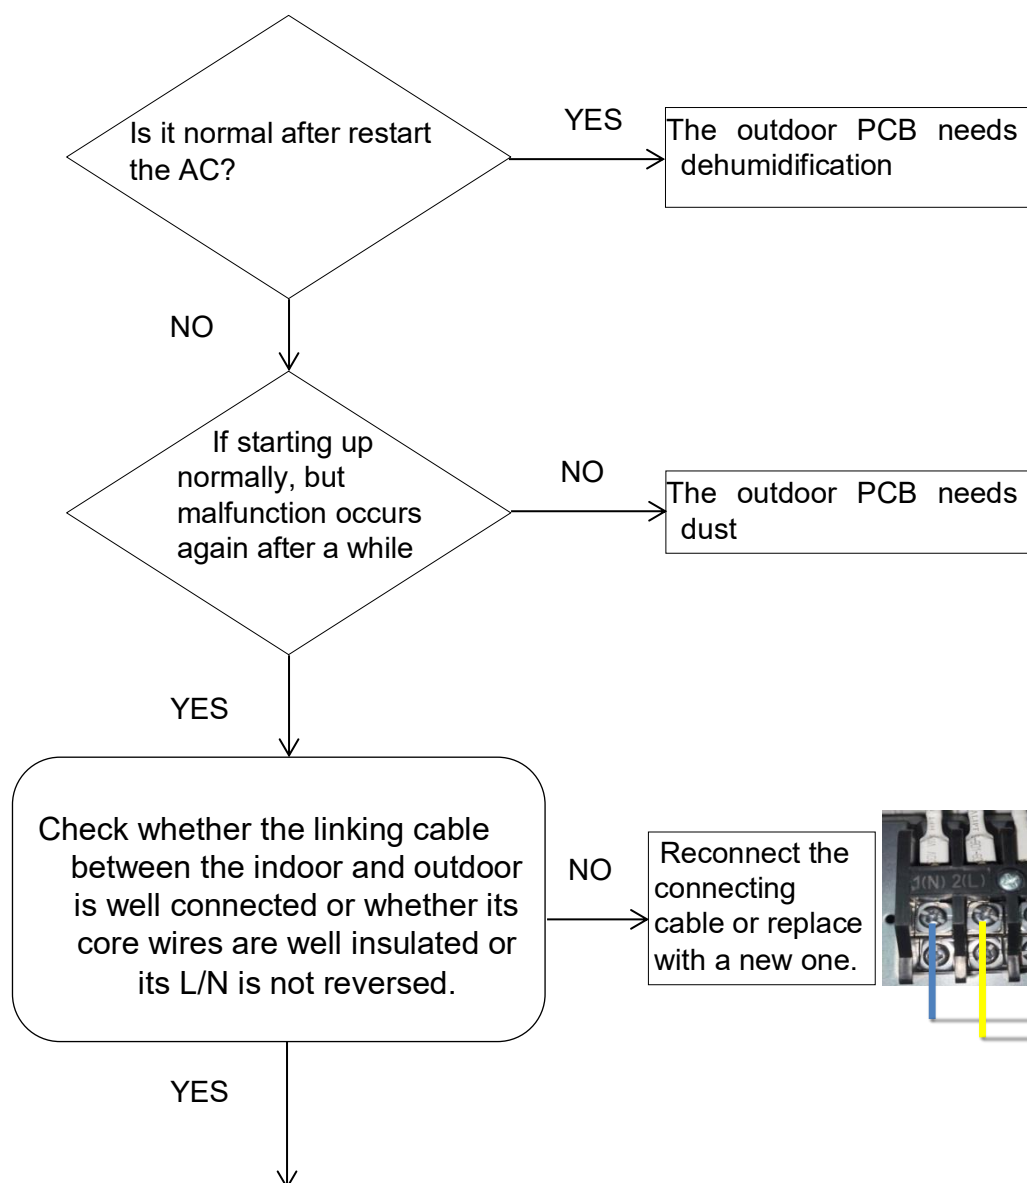

Check the indoor PCB: only indoor charged measure the voltage between 3 and 4 of IC6 on the indoor PCB with a universal meter. And measure the voltage between CN23(S) and CN17 (L) with a universal meter.

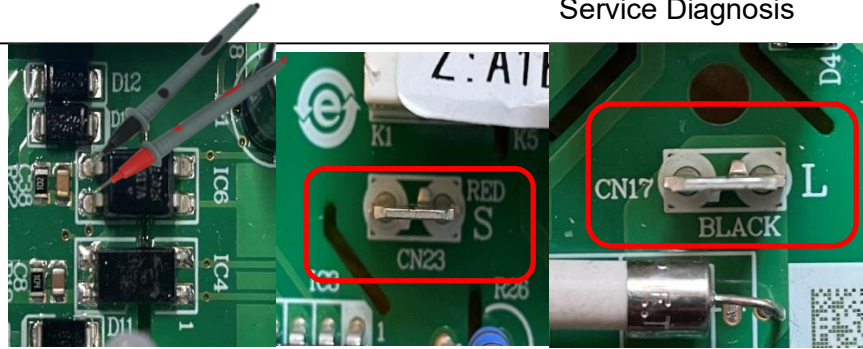

If the voltage is a constant value from DC 0V to DC 5V. Or the voltage between communication line (red) and N (white line) is not close to 18V DC when only indoor charged.

YES

The indoor PCB is damaged; replace it with a new one.

NO

Test the outdoor power is supply 230VAC with a universal meter when indoor and outdoor are charged.

NO

Check the cable between outdoor and power



YES

LED2 light of the outdoor

NO

The module PCB is damaged. Replace it with a new one.




YES

LED 1 light

YES

Measure the voltage between 3 and 4 of IC9 on the Outdoor mainboard with a universal meter. The voltage is a constant value of 0V DC to 5V DC

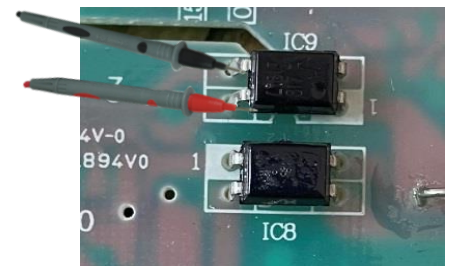


YES

The outdoor PCB is damaged. Replace it with a new one.



NO

Outdoor PCB is ok then check cable.

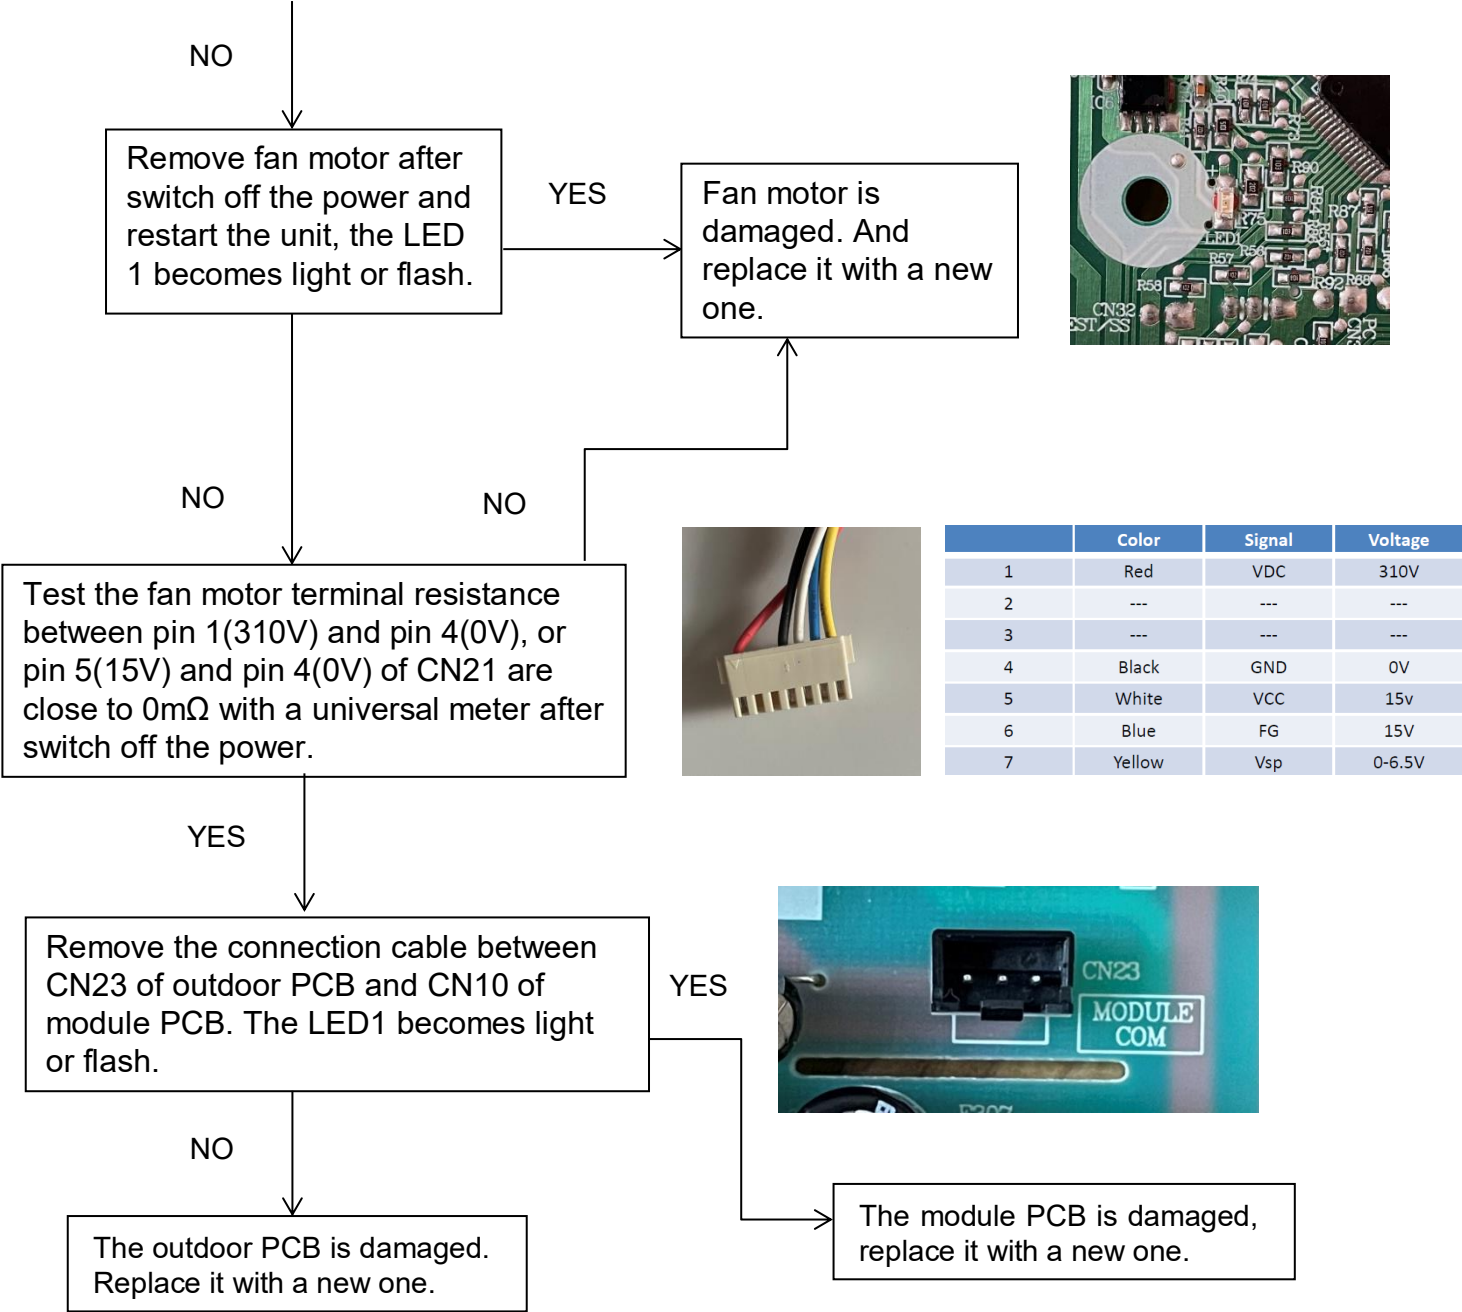


All-in-one board Indoor display E7 outdoor display LED2 flash 15 times

Method of Malfunction Detection	Communication is detected by checking the indoor PCB and the outdoor PCB.
Malfunction Decision Conditions	■ The outdoor PCB broken leads to communication fault. ■ The indoor PCB broken leads to communication fault.
Supposed Causes	■ Communication wiring disconnected. ■ The indoor PCB is broken. ■ The outdoor PCB is broken.
Trouble shooting	* Caution: Be sure to turn off power switch before connect or disconnect connector, or else parts damage may be occurred.

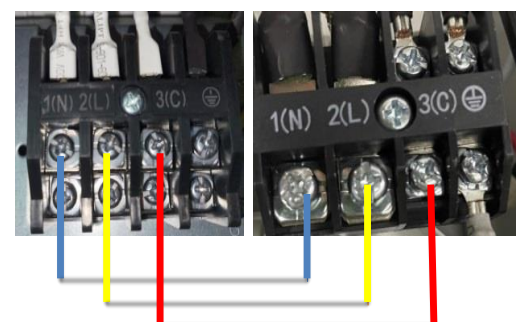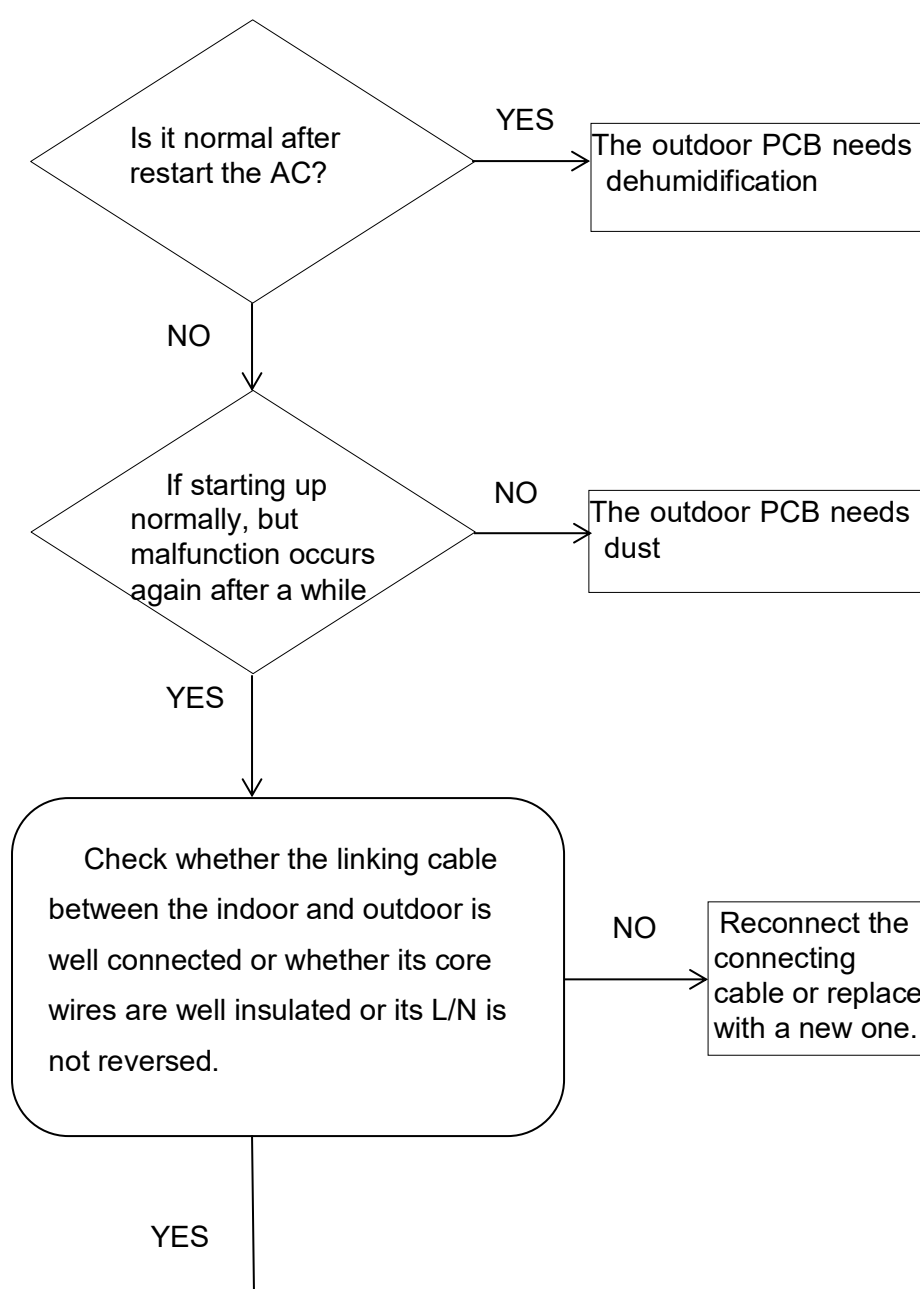

Check the indoor PCB: Only indoor charged measure the voltage between 3 and 4 of IC6 on the indoor mainboard with a universal meter. And measure the voltage between CN23(S) and CN52 (L) with a universal meter.

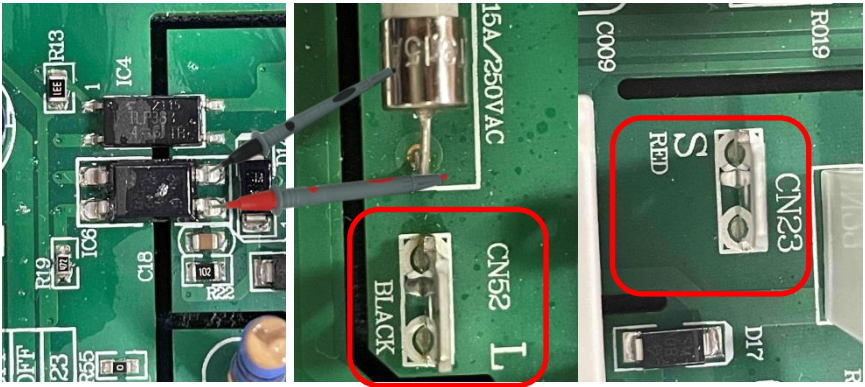

If the voltage is a constant value of 0V DC to 5V DC .Or the voltage between communication line (red) and N (white line) is not close to 18V DC when only indoor charged.

YES
The indoor PCB is damaged; replace it with a new one.

NO

Test the outdoor power is supply 230VAC with a universal meter when indoor and outdoor are charged.


NO
Check the cable between outdoor and power



YES

LED2 light


YES
Measure the voltage Between 3 and 4 of IC5 on the Outdoor mainboard with a universal meter. The voltage is a constant value of 0V DC to 5V DC

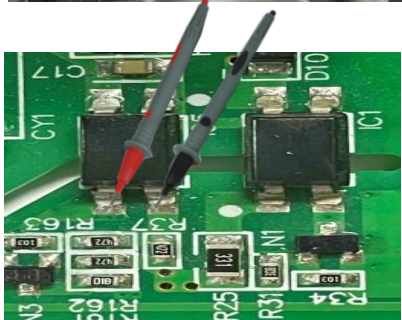

YES
The outdoor PCB is well, and then check the cable

NO
The outdoor PCB is damaged. Replace it with a new one.


NO

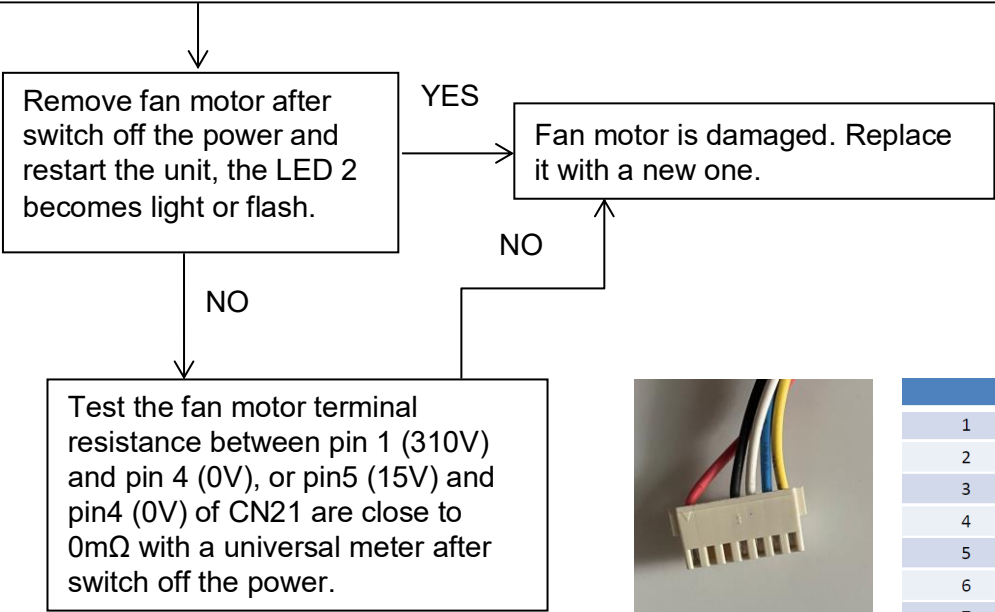

	Color	Signal	Voltage
1	Red	VDC	310V
2	---	---	---
3	---	---	---
4	Black	GND	0V
5	White	VCC	15v
6	Blue	FG	15V
7	Yellow	Vsp	0-6.5V


10.4.11 Loss of synchronism detection (Compressor position detection circuit fault)

Outdoor Display	F11 LED1 flash 18 times F28 LED1 flash 19 times
Method of Malfunction Detection	The position of the compressor rotor can't detected normally
Malfunction Decision Conditions	When the wiring of compressor is wrong or the connection is poor; Or the compressor is damaged
Supposed Causes	■ Faulty The wiring of compressor ■ Faulty compressor ■ Faulty PCB
Trouble shooting	* Caution: Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

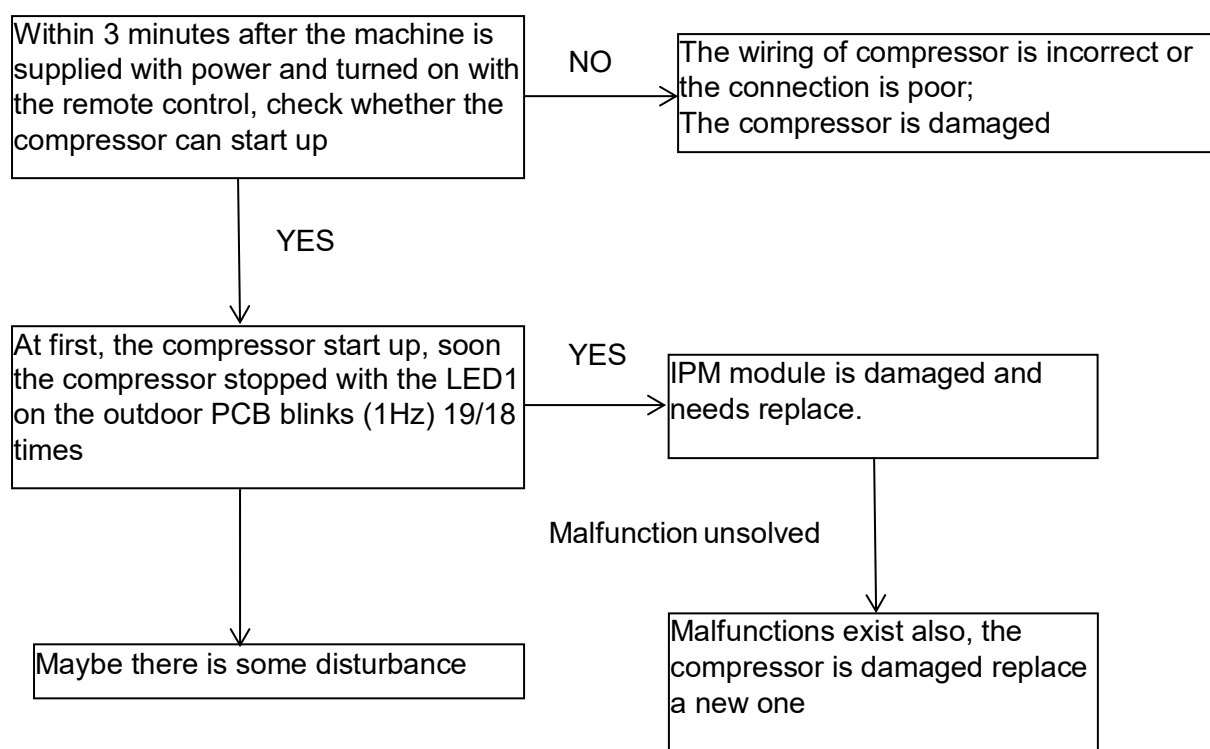

10.4.12 High work-intense protection

Outdoor display	E 9 LED1 flash 21 times
Method of Malfunction Detection	High work-intense control is activated in the heating mode if the temperature being sensed by the heat exchanger thermistor exceeds the limit.
Malfunction Decision Conditions	Activated when the temperature being sensed by the heat exchanger rises above 65°C twice in 30 minutes
Supposed Causes	■ Faulty electronic expansion valve ■ Dirty heat exchanger ■ Faulty heat-exchange sensor ■ Insufficient gas
Trouble shooting	* Caution: Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

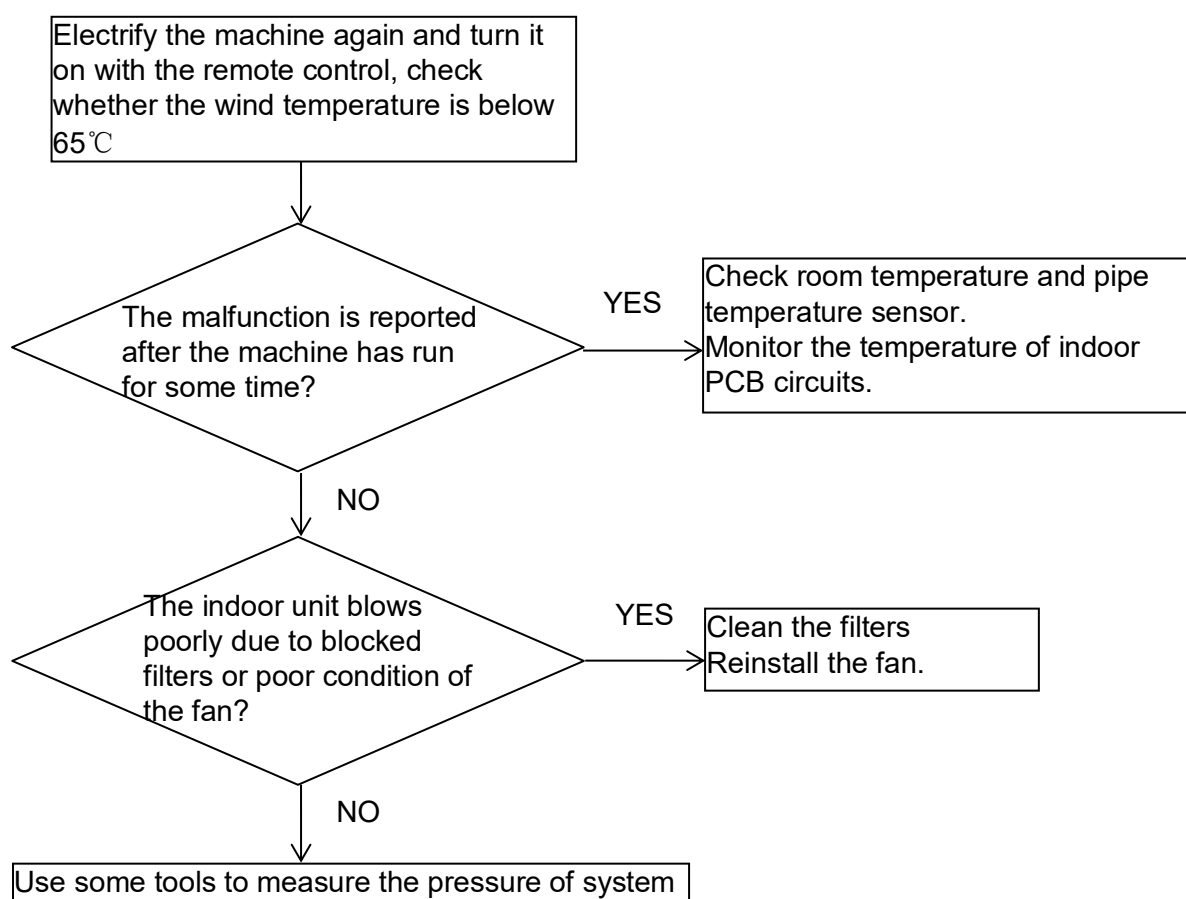

11. Performance Curves Diagram


11.1 cooling capacity-temp. curves

12+12 performance curves

cooling value-temperature table


indoor temp.														
DB/WB	-20°C	-15°C	-10°C	0°C	8°C	15°C	20°C	25°C	30°C	35°C	38°C	40°C	43°C	50°C
21/15°C	2911	3232	3459	3566	3739	3716	3940	4013	4224	4393	4302	4234	4205	3861
24/16°C	3120	3385	3701	3833	3933	4043	4197	4359	4516	4674	4620	4573	4441	4222
27/19°C	3380	3740	4076	4191	4324	4333	4609	4636	5012	5006	4961	4826	4825	4467
30/22°C	3500	3900	4250	4400	4500	4600	4800	4950	5200	5350	5250	5150	5050	4750
32/23°C	3637	4051	4345	4509	4560	4694	4884	5050	5242	5456	5353	5244	5235	4947
35/24°C	3661	4070	4518	4673	4692	4786	4963	5192	5520	5572	5460	5420	5270	4959

cooling capacity and indoor/outdoor temp. curves

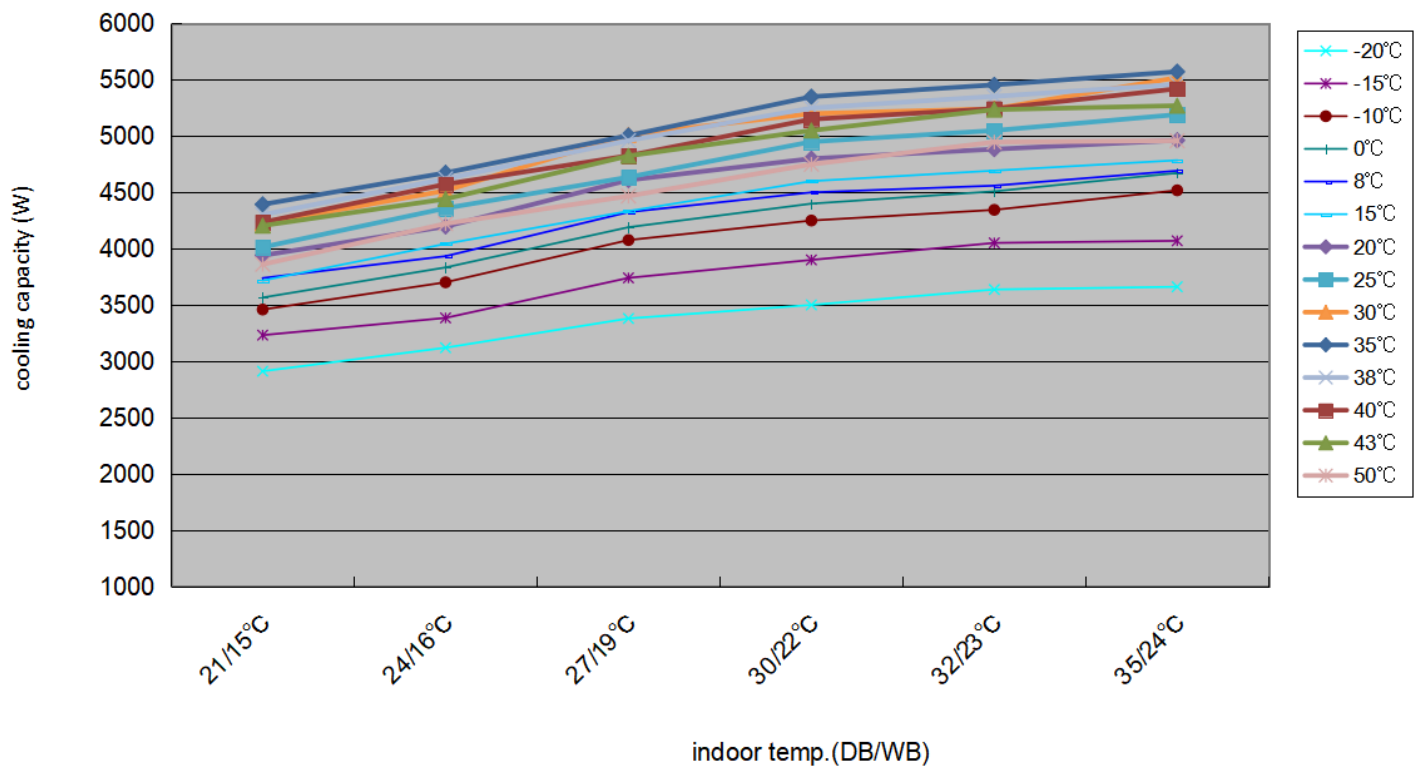


11.2 heating capacity-temp.curves

(12+12) performance curves							
heating capacity and indoor/outdoor temp.table							
outdoor temp.	indoor temp.(humidity 46%)						
DB/WB	10°C	15°C	18°C	20°C	22°C	24°C	27°C
-25°C	2569	2466	2389	2312	2235	2132	2055
-20°C	3146	3020	2925	2831	2737	2611	2517
-15°C	3527	3446	3337	3147	3109	3066	2984
-10°C	4138	4030	3868	3684	3578	3526	3493
-7/-8°C	4590	4367	4189	4102	4058	3993	3893
2/1°C	5589	5505	5193	5095	4897	4798	4699
7/6°C	6306	6201	6069	5991	5780	5623	5472
12/11°C	5780	5594	5501	5407	5128	4941	4705
18/16°C	5492	5289	5085	4882	4679	4475	4169
24/18°C	5149	4958	4768	4577	4386	4195	3790

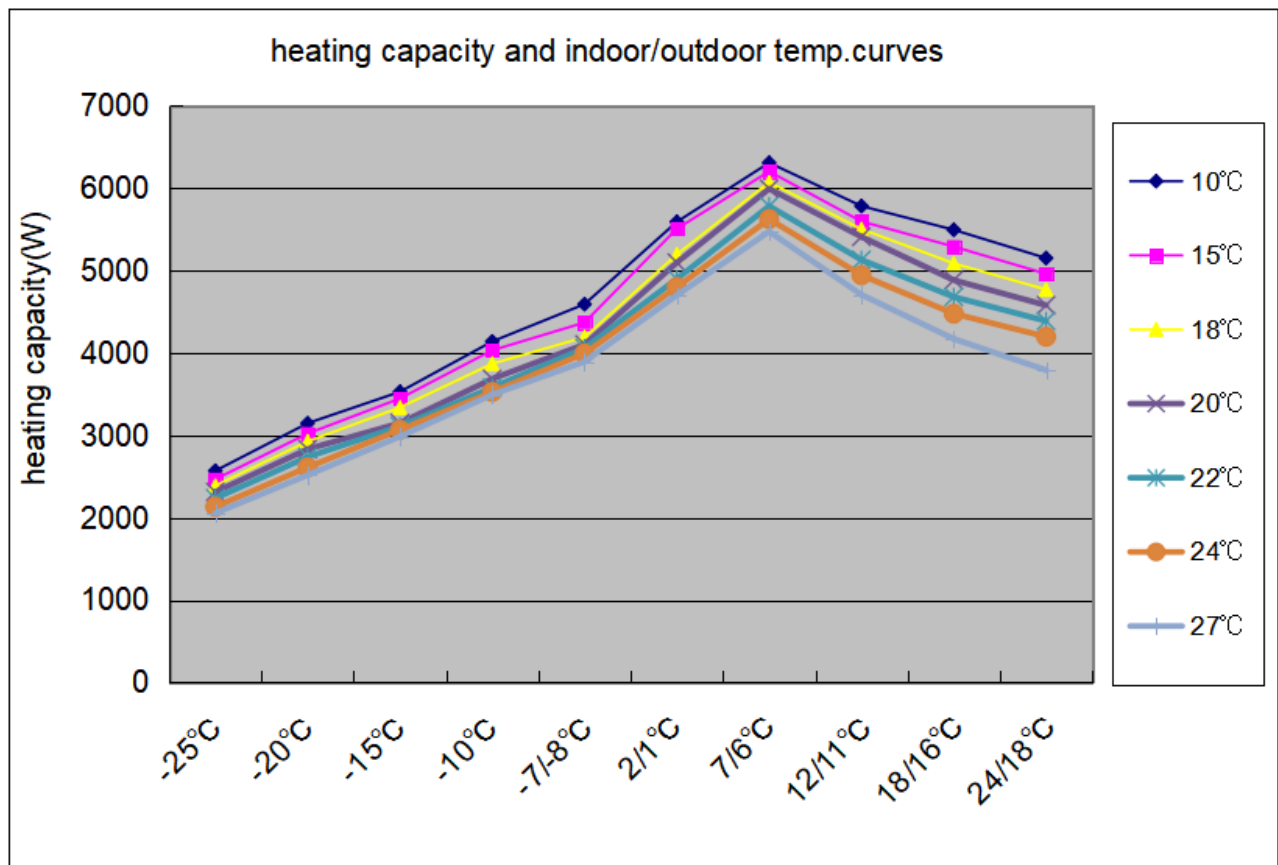


11.3 Cooling power consumption temp. curves

(12+12) performance curves														
power consumption value-temp.table														
indoor temp.														
DB/WB	-20°C	-15°C	-10°C	0°C	8°C	15°C	20°C	25°C	30°C	35°C	38°C	40°C	43°C	50°C
21/15°C	597	676	739	779	835	849	921	960	1035	1104	1120	1120	1143	1049
24/16°C	638	707	789	835	876	921	978	1040	1104	1171	1194	1206	1204	1144
27/19°C	690	779	867	911	961	985	1072	1104	1222	1251	1279	1270	1322	1241
30/22°C	711	809	900	952	996	1041	1111	1173	1262	1334	1346	1352	1361	1280
32/23°C	738	839	919	974	1007	1060	1128	1194	1269	1357	1373	1373	1407	1330
35/24°C	742	842	954	1008	1035	1079	1145	1226	1335	1383	1407	1415	1413	1329

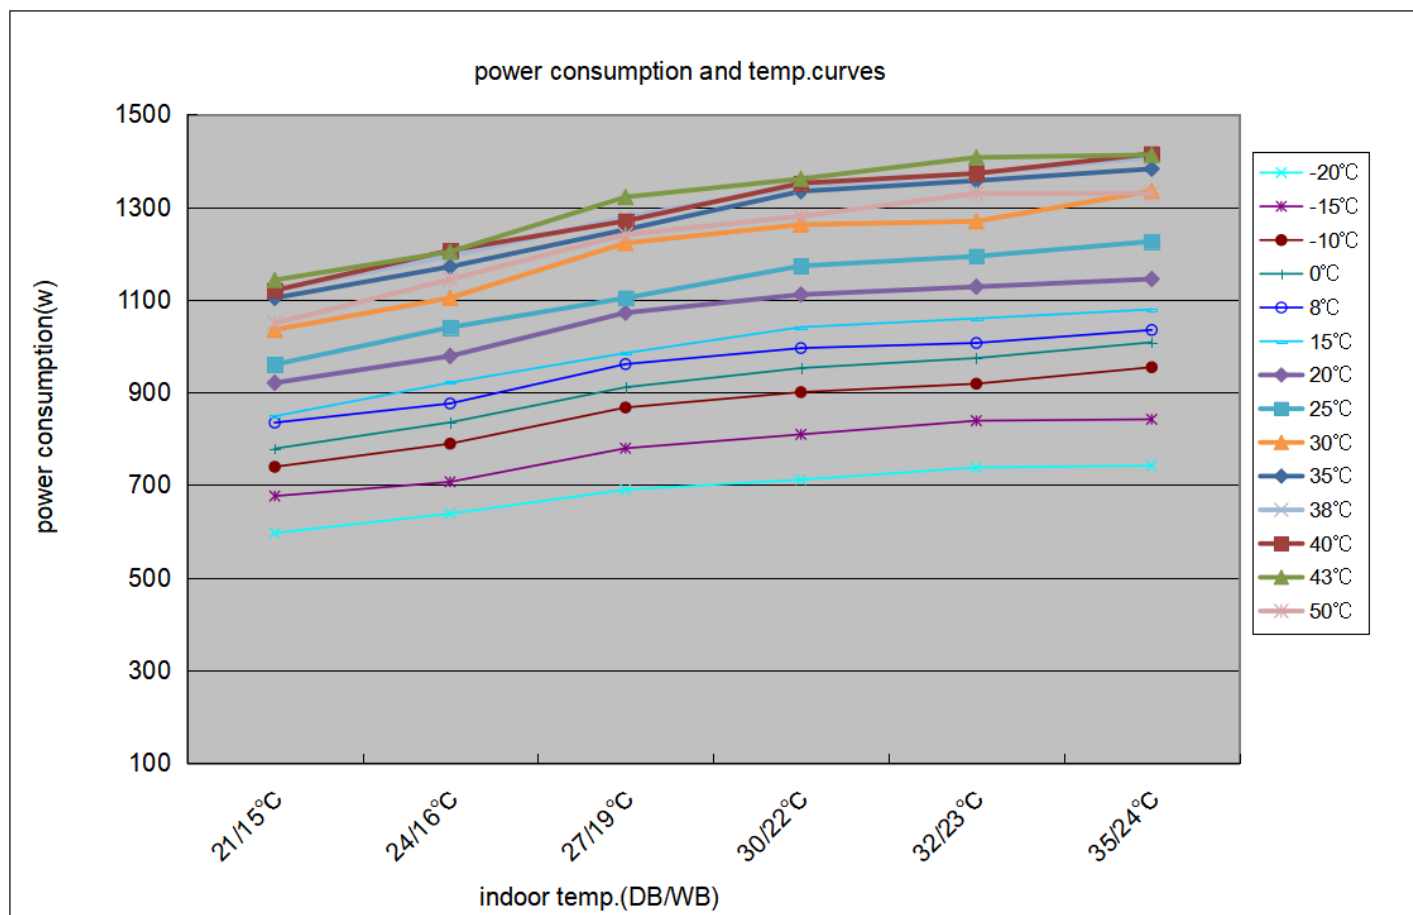


11.4 heating power consumption-temp.curves

(12+12) performance curves							
power consumption value-temp.table							
outdoor temp.	indoor temp.(humidity 46%)						
DB/WB	10°C	15°C	18°C	20°C	22°C	24°C	27°C
-25°C	1118	1182	1240	1284	1310	1336	1362
-20°C	1120	1184	1242	1287	1313	1338	1364
-15°C	1141	1206	1265	1311	1338	1364	1390
-10°C	1143	1169	1226	1270	1296	1321	1334
-7/-8°C	1231	1258	1319	1367	1395	1422	1408
2/1°C	1354	1339	1405	1456	1485	1514	1514
7/6°C	1554	1490	1562	1619	1651	1684	1684
12/11°C	1070	1058	1110	1151	1174	1197	1266
18/16°C	845	864	906	939	958	976	1033
24/20°C	749	766	803	832	849	865	915

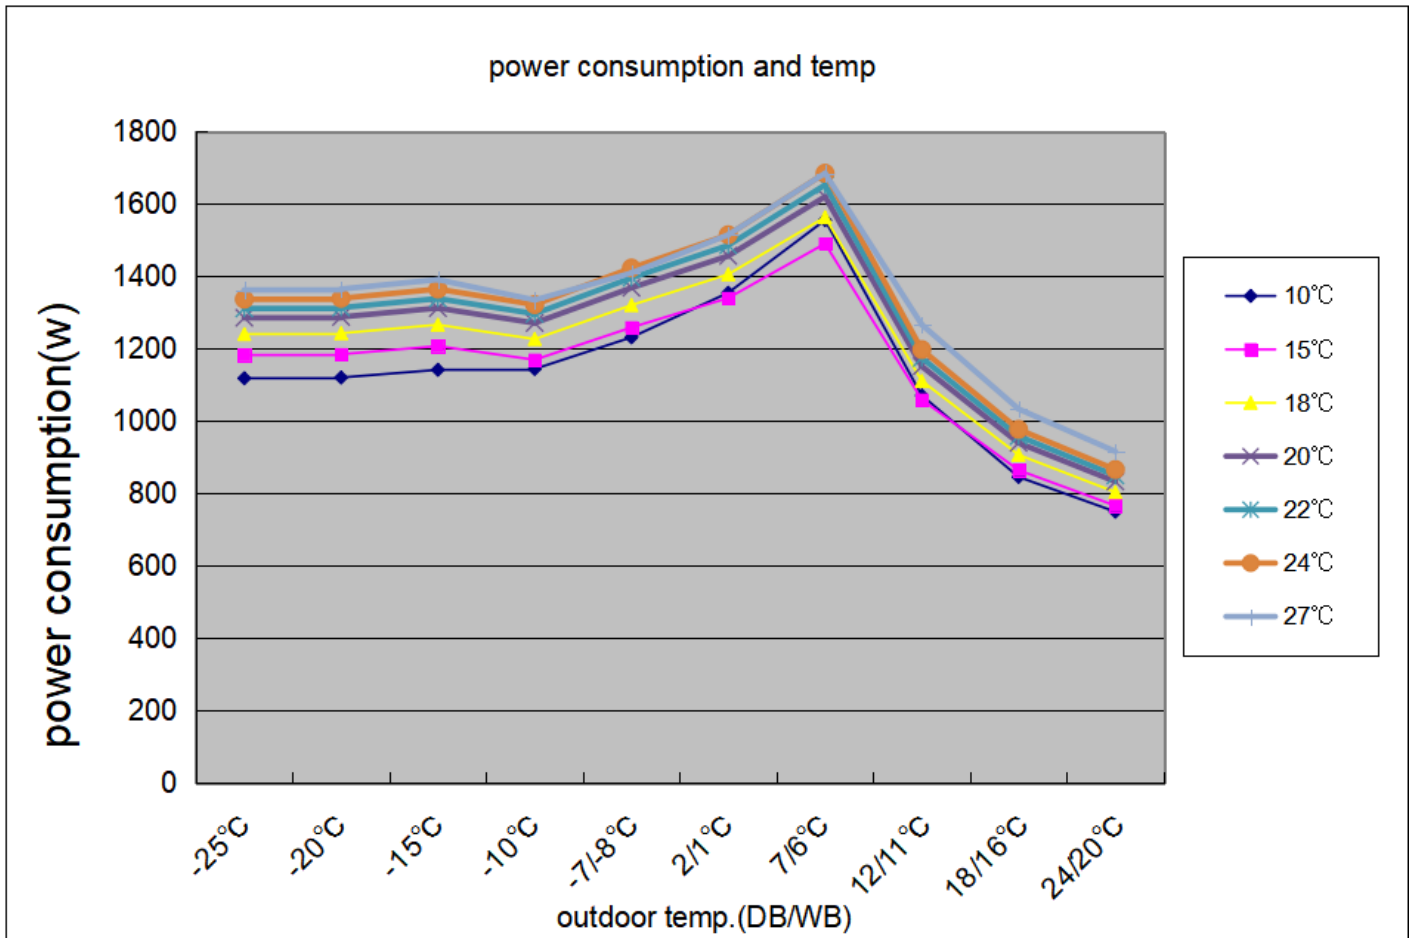


11.5 Cooling discharge pressure

(12+12) performance curves			
cooling discharge pressure.table			
outdoor temp.(humidity 46%)	indoor temp.		
DB/WB	21/15°C	27/19°C	35/24°C
-20°C	1341	1418	1502
-15°C	1530	1575	1669
-10°C	1649	1701	1808
0°C	1786	1890	2013
8°C	1994	2048	2159
15°C	2136	2205	2283
20°C	2365	2426	2529
25°C	2481	2583	2671
30°C	2608	2804	2930
35°C	2919	2993	3134
38°C	3067	3213	3421
40°C	3534	3623	3791
43°C	3874	4095	4336
50°C	4087	4253	4433

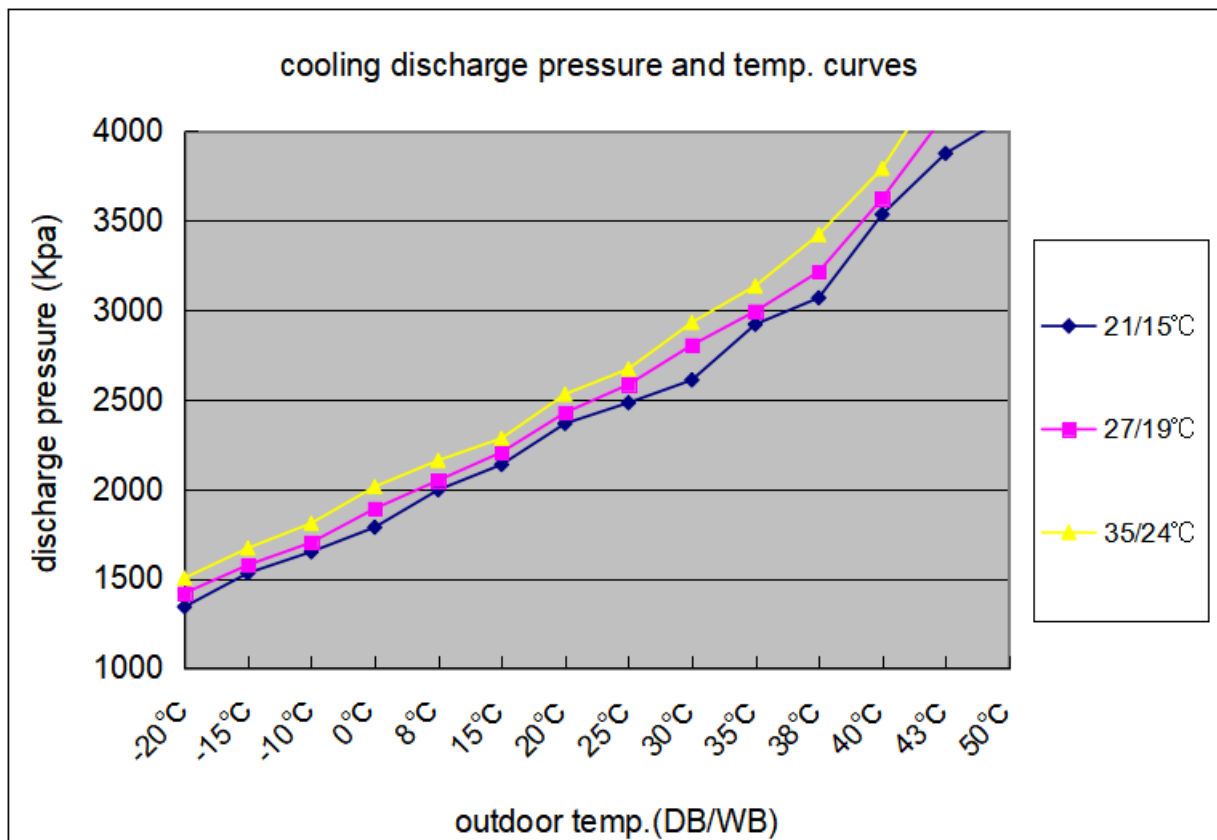


11.6 cooling suction pressure curves

(12+12) performance curves			
cooling suction pressure.table			
outdoor temp.(humidity 46%)	indoor temp.		
DB/WB	21/15°C	27/19°C	35/24°C
-20°C	610	752	865
-15°C	636	783	901
-10°C	662	816	938
0°C	690	850	978
8°C	711	876	1008
15°C	726	894	1028
20°C	733	903	1039
25°C	772	912	1060
30°C	812	960	1071
35°C	855	970	1127
38°C	900	1000	1150
40°C	990	1100	1265
43°C	1089	1188	1379
50°C	1198	1259	1503

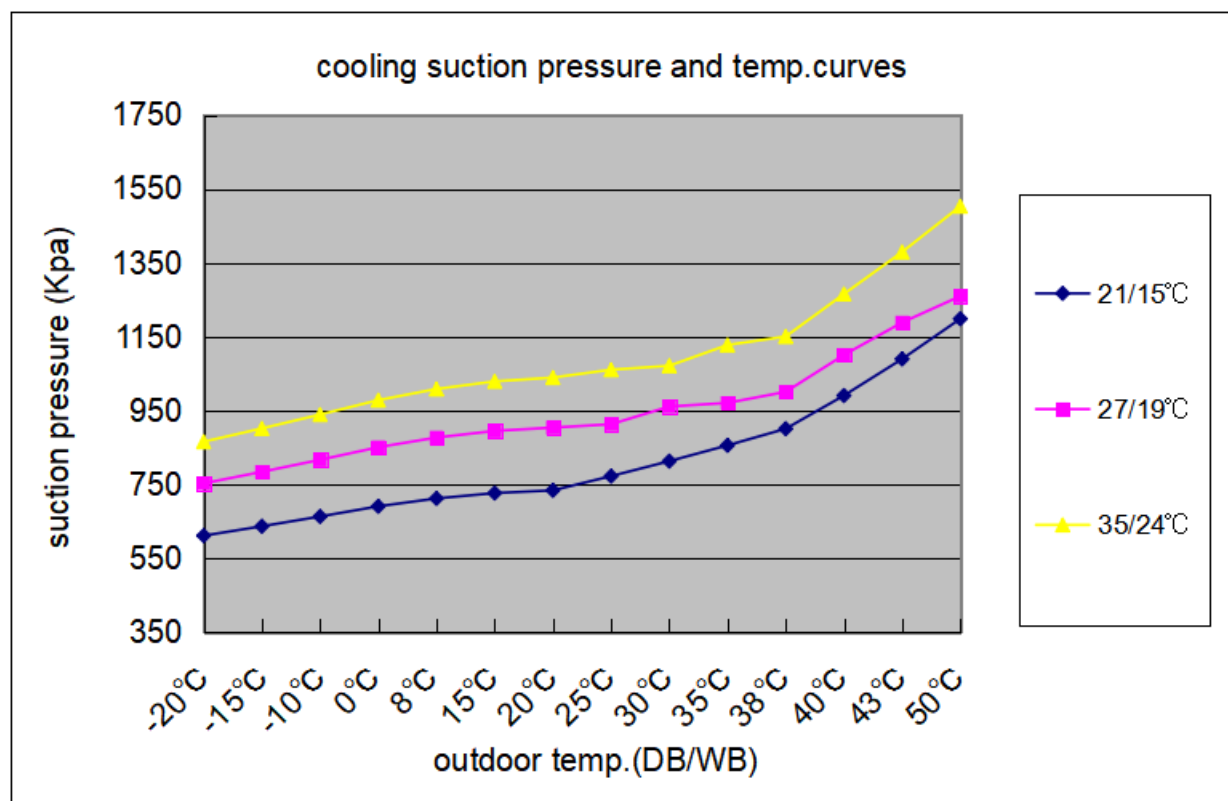


11.7 heating discharge pressure curves

(12+12) performance curves			
heating discharge pressure.table			
outdoor temp	indoor temp.		
DB/WB	10°C	20°C	27°C
-25°C	1591	1664	1738
-20°C	1688	1792	1878
-15°C	1846	1933	1987
-10°C	2132	2227	2329
-7/-8°C	2312	2432	2487
2/1°C	2430	2637	2782
7/6°C	2411	2560	2658
12/11°C	2284	2432	2528
18/16°C	2176	2286	2346
24/20°C	1854	1943	2046

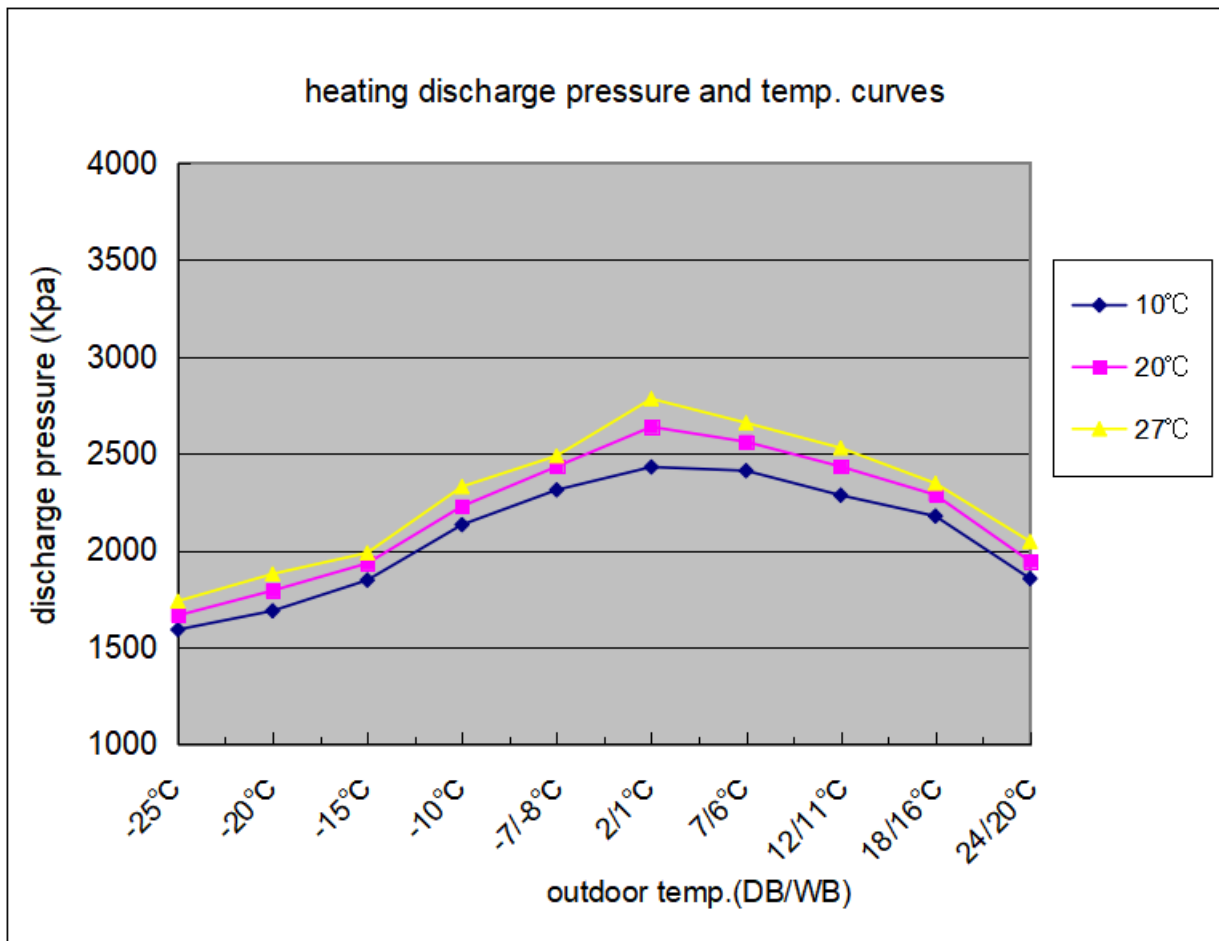




11.8 heating suction pressure curves

(12+12) performance curves			
heating suction pressure.table			
outdoor temp	indoor temp.		
DB/WB	10°C	20°C	27°C
-25°C	222	270	282
-20°C	266	314	326
-15°C	316	364	388
-10°C	348	396	420
-7/-8°C	452	500	524
2/1°C	571	619	643
7/6°C	704	752	776
12/11°C	794	842	866
18/16°C	961	1009	1033
24/20°C	1147	1195	1219

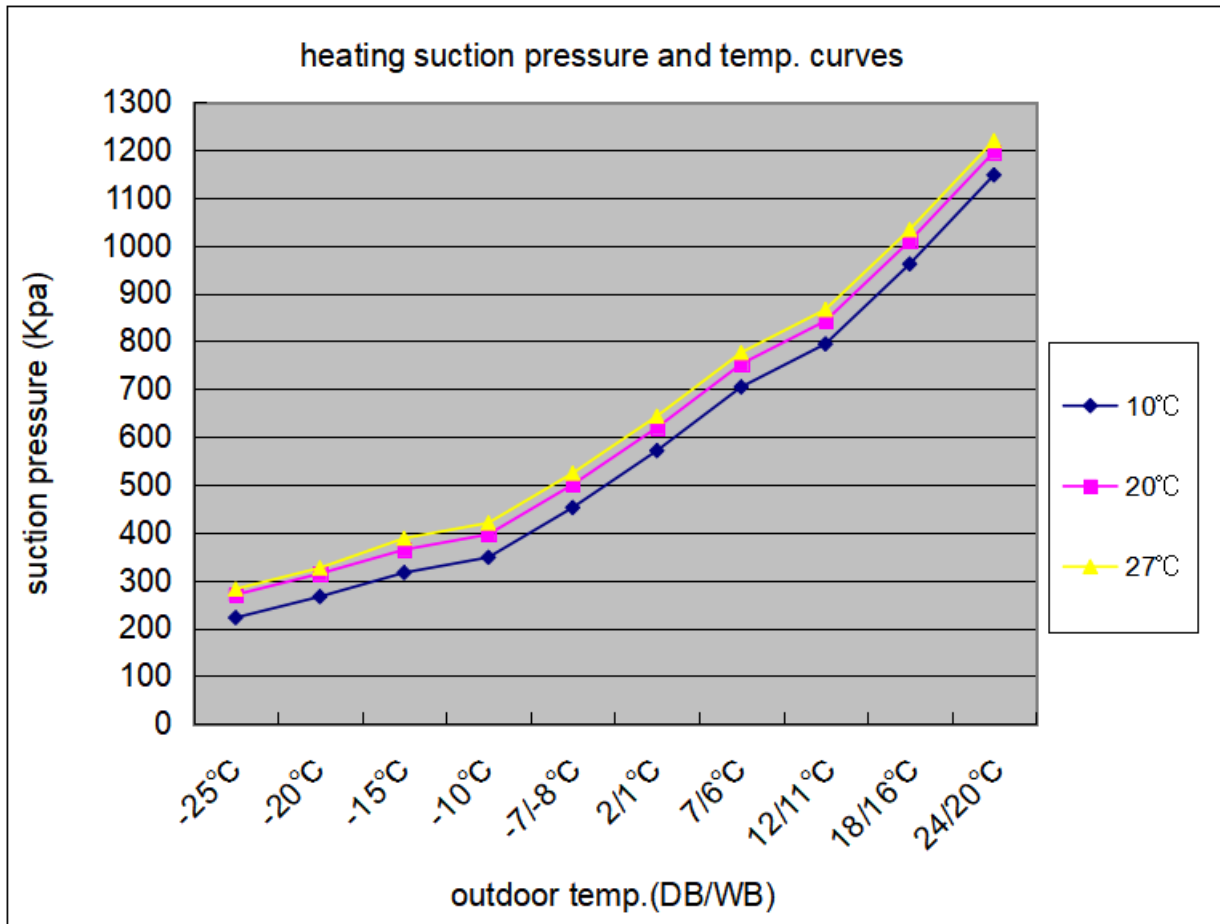

12.Sound level


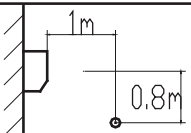
Model	Sound presure level				sound power level (cooling/heating)
	220-240V,50Hz			Measuring location Location of microphone	
	Cooling/heating				
	H	L	SL		
2U50MS3FRA	53	/	/		63

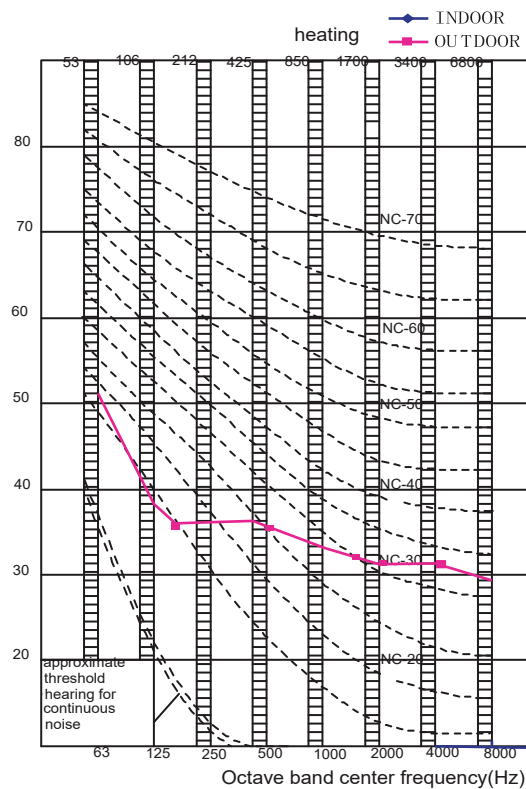
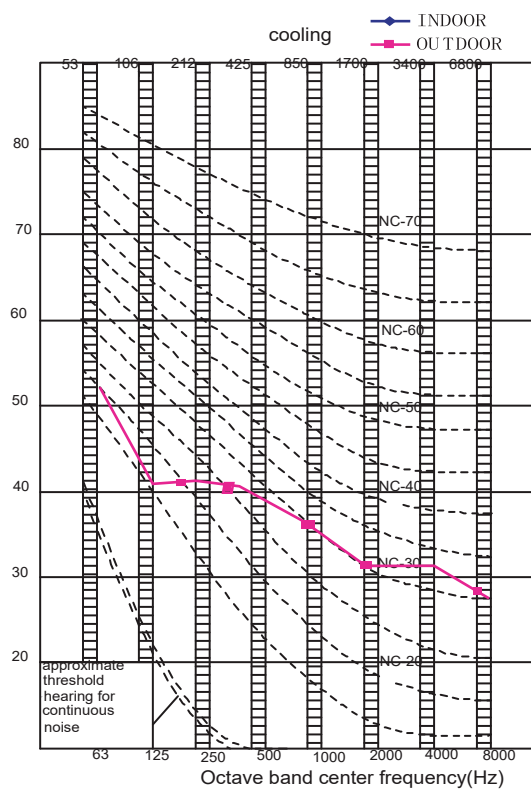




13. Removal Procedure



Removal of front panel



Outdoor unit

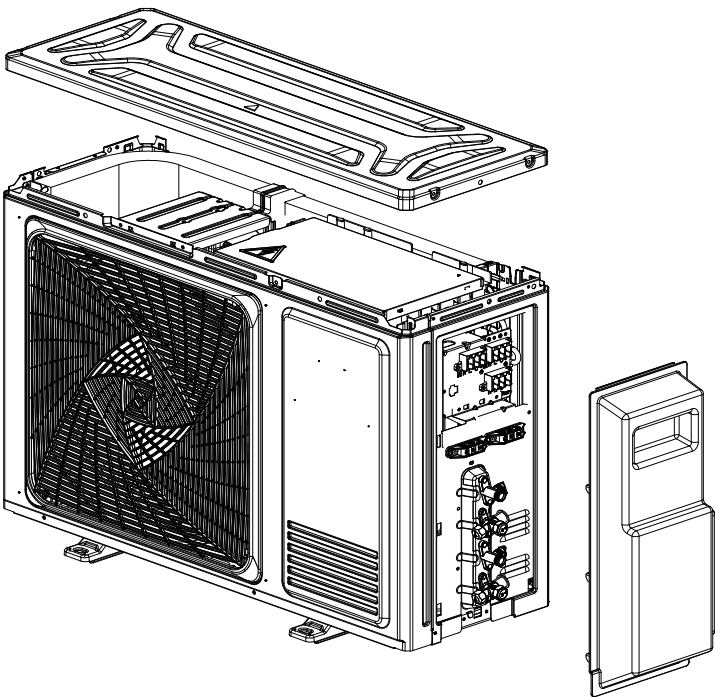
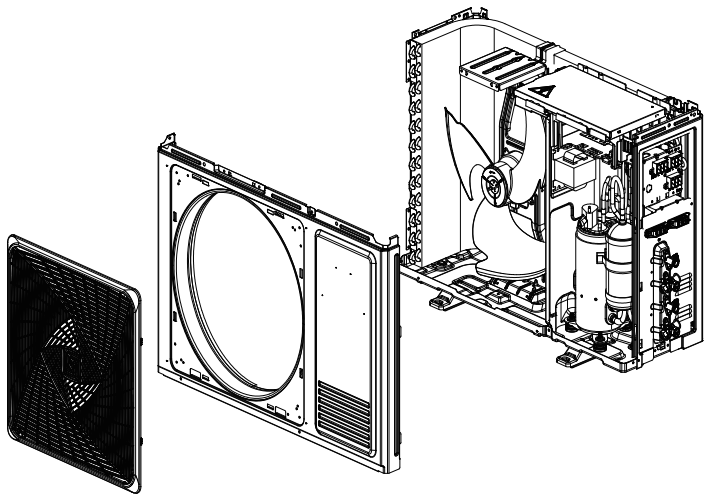
Step		Procedure	Points
1	Loosen the screws to lift the top panel and remove the valve housing	 A line drawing of an outdoor air conditioning unit. The top panel is shown being lifted off the unit. To the right of the main unit, a separate rectangular component, the valve housing, is shown. The main unit's internal components, including the fan and compressor, are visible.	
2	Loosen panel screws, pull and remove front panel	 A line drawing of the outdoor unit with the front panel removed. The front panel is shown to the left of the unit. The internal components, including the fan and compressor, are visible. The unit is shown from a side-on perspective.	

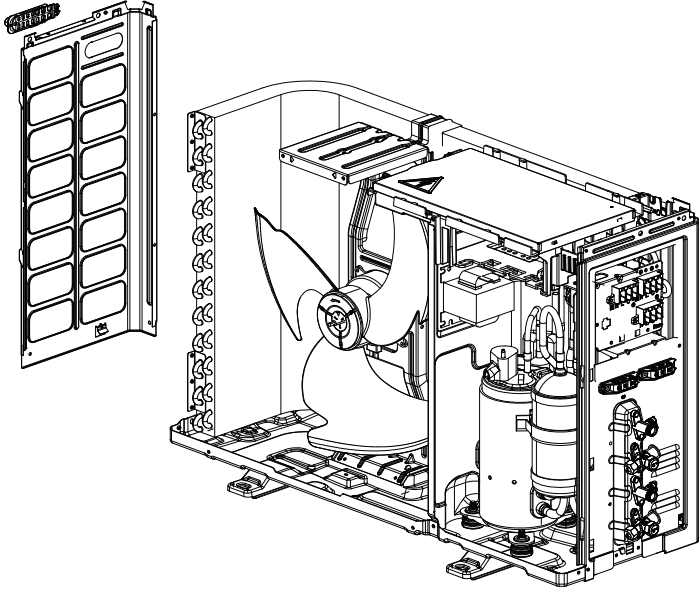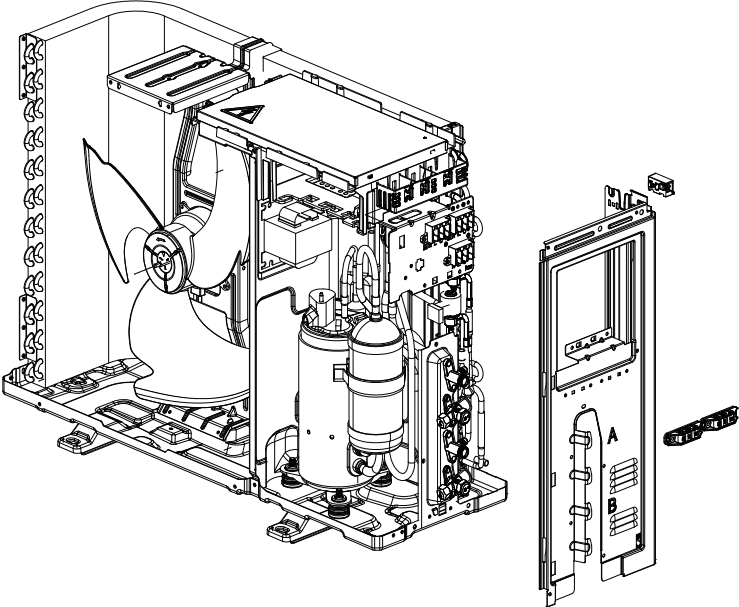3	Loosen the screwdriver and remove the left panel		
4	Loosen the screwdriver and remove the right panel		

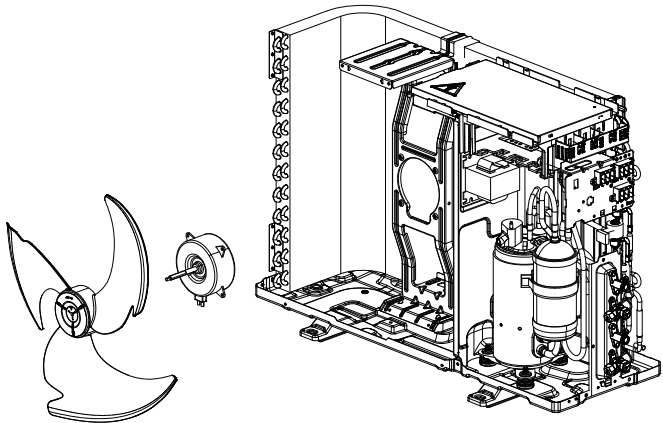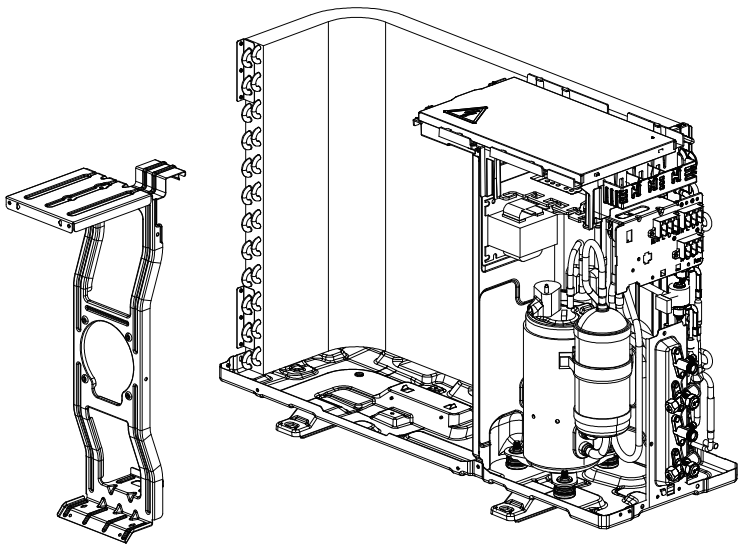5	Loosen the screwdriver and remove the fan		
6	Loosen the screws and remove the motor bracket		

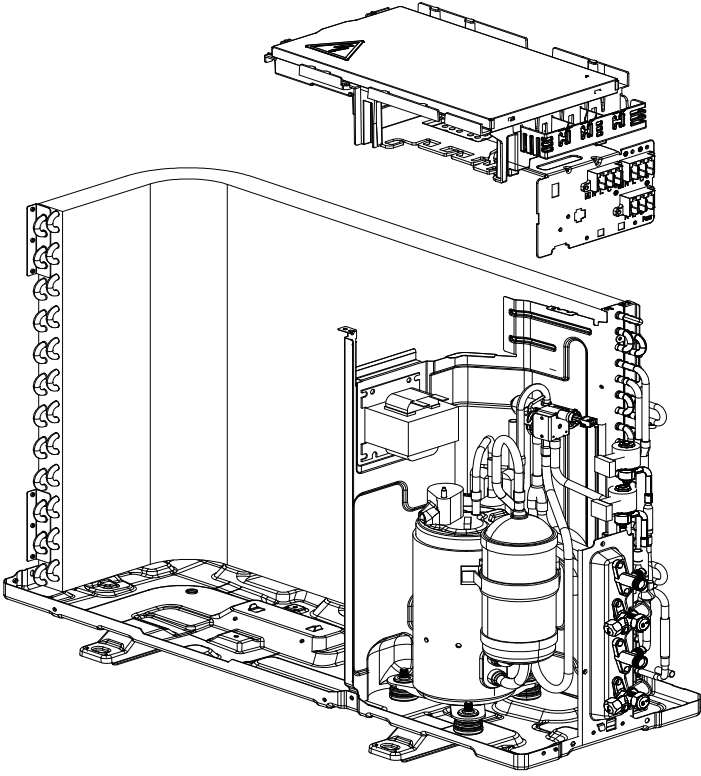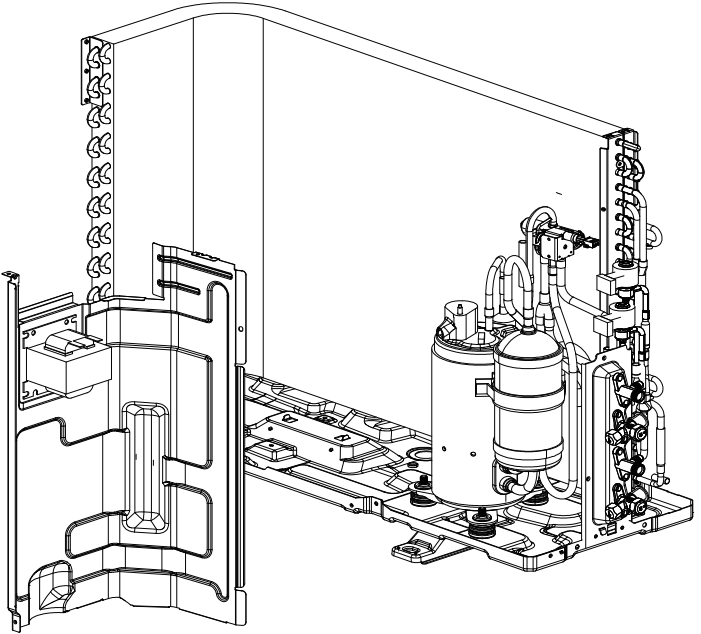7	Loosen the screwdriver and lift the electronic control box	 This diagram illustrates the removal of the electronic control box. The box is shown being lifted away from the main unit. The main unit features a large condenser coil on the left, two cylindrical refrigerant tanks in the center, and various pipes and electrical components on the right. The control box is a rectangular unit with a fan and internal circuitry, positioned at the top of the unit.	
8	Loosen the screwdriver and remove the baffle	 This diagram shows the removal of the baffle. The baffle is a curved, vertical panel located on the left side of the unit, behind the condenser coil. It is shown being detached from the main frame. The internal components, including the refrigerant tanks and piping, are visible through the opening created by removing the baffle.	

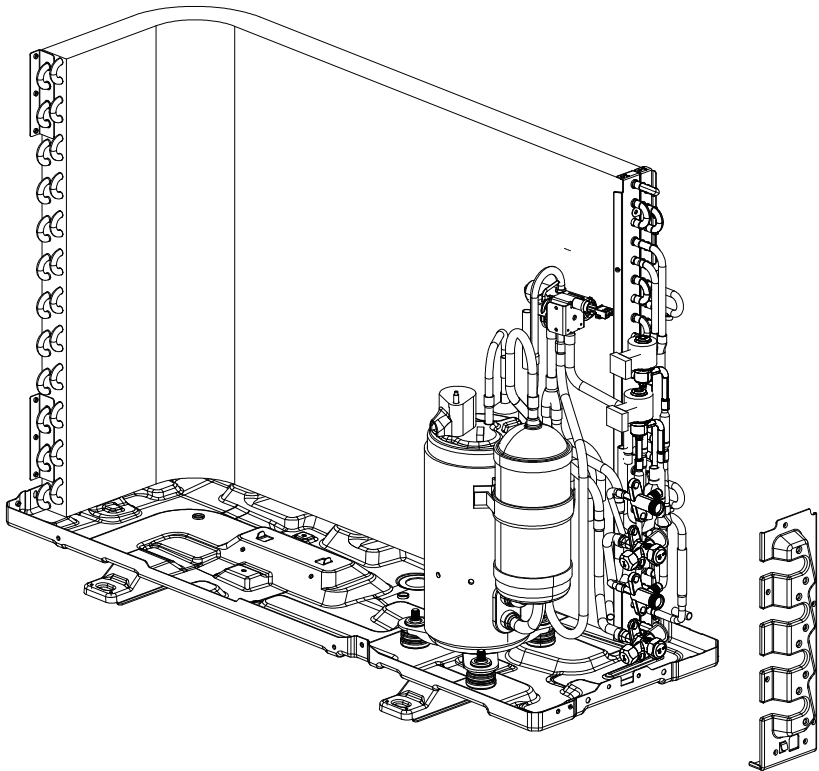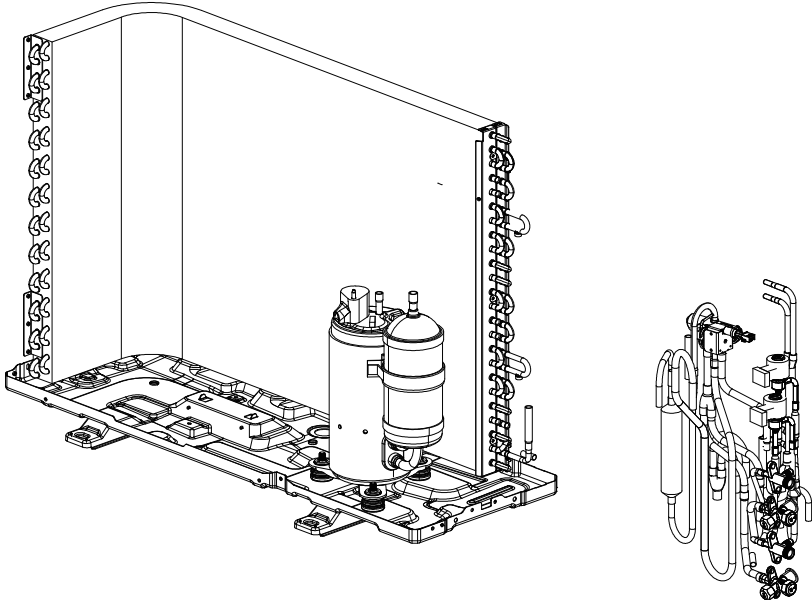9	Loosen the screws and remove the base		
10	Weld off line module and remove		

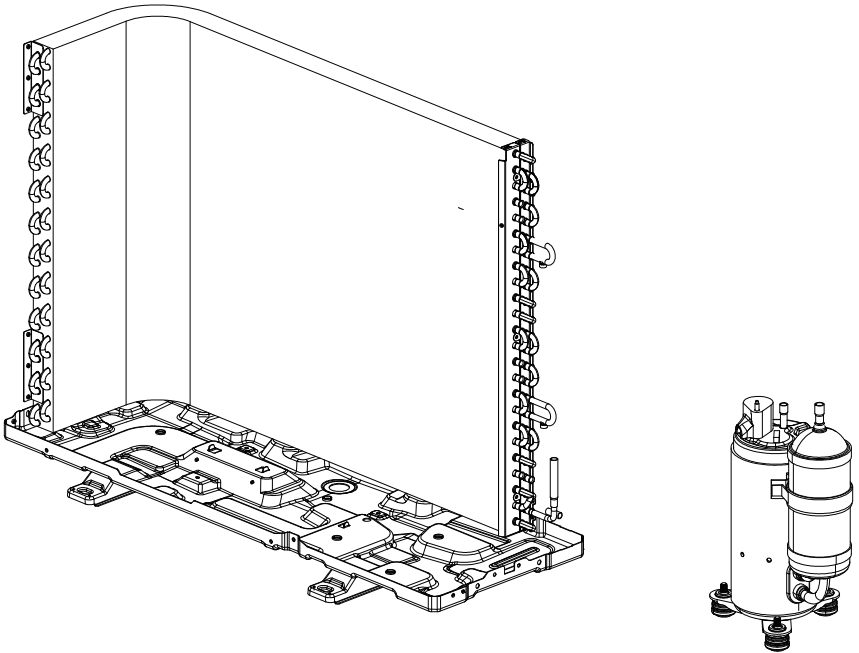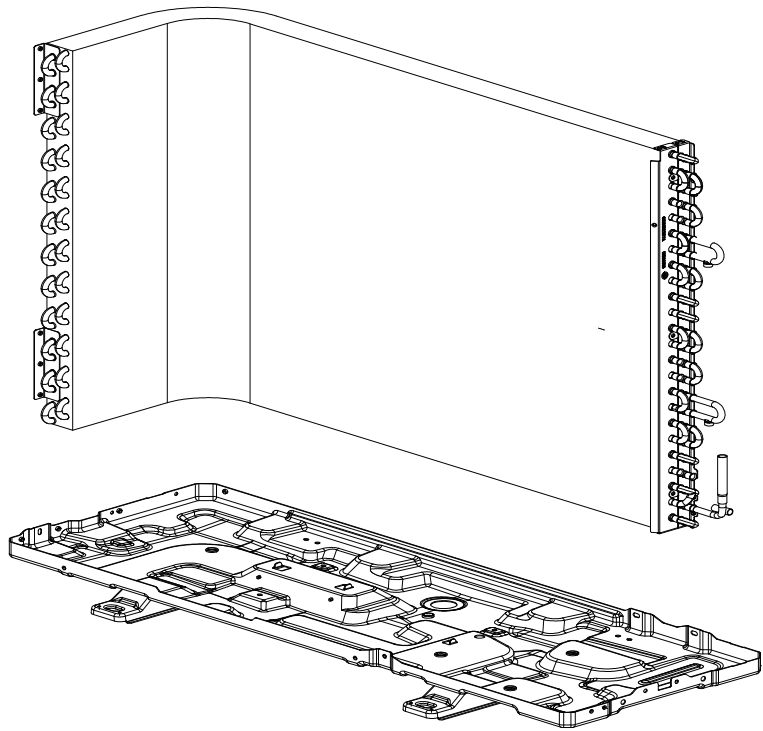11	Weld off compressor and remove	 This diagram illustrates the removal of the compressor. On the left, a perspective view of the air conditioner's internal chassis shows the compressor mounted at the rear. On the right, a detailed view of the compressor unit is shown, which consists of two cylindrical components connected by a horizontal pipe, with various service ports and mounting brackets.	
12	Loosen the screws and remove the condenser	 This diagram illustrates the removal of the condenser. It shows the internal chassis of the air conditioner with the condenser coils located at the rear. The condenser is a long, rectangular assembly with a series of U-shaped coils. The diagram shows it being detached from the chassis by loosening the screws that hold it in place.	

Generalny Dystrybutor Systemów Klimatyzacji
i Pomp Ciepła w Polsce:
REFSYSTEM Sp. z o. o.

ul. Metalowców 5, 86-300 Grudziądz

haier@haier-ac.pl
+48 723 737 378
haier-ac.pl

Producent:

Qingdao Haier Air Conditioner Electric Co., Ltd.

Haier Industrial Park, Qianwangang Road, Eco-Tech Development Zone,
Qingdao 266555, Shandong, **P.R.C.**

+86 532 88936943
haier.com

Haier zastrzega sobie prawo do wprowadzania zmian bez wcześniejszego powiadomienia.